



AA/AAA Charger:

Kodak Ni-MH Value Charger

Operating Instructions

4H5410

Thank you for purchasing the **Kodak** Ni-MH Battery Charger. Please read these instructions for safe operation.

Features

- Charges AA and AAA Ni-MH rechargeable batteries.
- Charge up to 4 AA or up to 4 AAA batteries.

Recommended Temperature Ranges for Use

| | Ni-MH |
|----------------------------------|------------------------|
| To use (discharge) the batteries | 32°-113°F (0°-45°C) |
| To charge the batteries | 32°-113°F (0°-45°C) |
| To store the batteries | -13°-140°F (-25°-60°C) |

Using the batteries outside the above temperatures may shorten battery life and decrease efficiency.

Operating Instructions

CHARGE INDICATOR LIGHTS

One or both lights are on (steady) during charging, depending on whether you are charging 2 or 4 batteries.

HOW TO CHARGE

1. Place 2 or 4 AA or AAA size batteries into the charger so that the + (positive) and - (negative) ends (terminals) of the batteries correspond to the same + and - marking in the charger.

When charging only 2 AA or AAA size batteries, place them together in either the left or right side (channel) of the charger.

CAUTION: Do not mix AA and AAA size batteries in the same channel.

2. Plug the charger into an electrical receptacle (outlet). The charge indicator lights are illuminated and battery charging begins. (NOTE: Do not insert or remove batteries during this charging process.) The charging cycle time depends on battery type. See specification chart.

TIPS

- For best performance, use only **Kodak** Ni-MH batteries.
- Charge the batteries before using (unless using pre-charged batteries).
- Do not use charged and discharged batteries together.
- Insert batteries correctly by matching + (positive) and -(negative) ends (terminals) of the battery to the same + and - position in the charger.

IMPORTANT SAFETY INSTRUCTIONS— Save These Instructions

• DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

- For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet. This battery charger is intended to be correctly oriented in a vertical or floor mount position.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Specifications

| Model No. | K620 | K620E |
|---|---|---|
| Voltage | 120V AC | 220/230V AC |
| Input | 60Hz 6W | 50Hz 6W |
| Output | 2.8V DC | |
| LED Indication | ON steady - charging | |
| Battery/ Charge time (hours) approximate | Ni-MH AA (2500mAh) | 13.5 hrs |
| | Ni-MH AA (2100mAh) | 11.5 hrs |
| | Ni-MH AA (1800mAh) | 10 hrs |
| | Ni-MH AAA (900mAh) | 11 hrs |
| Dimensions (L x W x H) | 4.18" x 2.59" x 2.05" (106.2 mm x 66 mm x 52 mm) | 4.18" x 2.59" x 2.97" (106.2 mm x 66 mm x 75.5 mm) |
| | Weight | 181g (6.40 oz.) |

Please dispose of this product in accordance with all applicable regulations. This product contains a small amount of lead in the circuit boards. Disposal may be regulated. For disposal or recycling information, please contact your local authorities or, in the U.S.A., contact the Electronics Industry Alliance website at www.eiae.org.

Guarantee: This battery charger and batteries are guaranteed against defects in material and workmanship for one year after date of purchase. Any device damaged by these batteries due to such defect will be repaired or replaced (at our option) if sent with batteries to Kodak. To Claim: In the U.S. and Canada call toll free, 1-888-375-6325 or 1-800-242-2424, between the hours of 9:00 a.m. and 8:00 p.m. (EST) Monday through Friday for authorization and mailing address. Send charger or batteries prepaid with your address and phone number, copy of proof of purchase and description of usage. Replacement charger or batteries will be mailed prepaid. No cash refunds will be given. Outside the U.S. and Canada, check with your local Kodak house or go to the following URL for a support number in your area: <http://www.kodak.com/include/international.shtml>.

Support

Internet: www.kodak.com/go/support
www.kodak.com/go/contact

EN

Kodak

Made in China for
EASTMAN KODAK COMPANY
Rochester, New York 14650 U.S.A.
© Eastman Kodak Company, 2009.
MC/MR/TM: Kodak.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>