

Operation Manual



NIGHT VISION BINOCULARS
NVS 7-4x / NVS 7-5x / NVS 7-8x

NSN: 5855-20-000-8284

105 Sparks Ave., Toronto, ON, M2H 2S5, Canada

IMPORTANT INFORMATION

Read prior to activation.

You have purchased a sophisticated electronic device. To operate it properly, please read this manual carefully.

Ignoring the operation procedures described in this manual will void your warranty.

- **NEVER** disassemble the unit. This device contains a source of high voltage, which may be hazardous to your health.
- **NEVER** open the objective lens of an active unit in bright light, including daylight. In the daytime the objective lens must be covered by cap. A tiny hole in the cap provides enough light for daytime testing.
- **NEVER** aim an active unit at intense light sources, such as lights, headlamps, campfires, the Moon, etc.
- **NEVER** reverse the polarity of a battery.
- **NEVER** connect the unit to any external power supplies.
- **ALWAYS** remove battery when not in use for a long period.
- **ALWAYS** keep the objective lenses covered when not in use.
- **ALWAYS** store the device in a warm dry place.

Precautions

NVS 7 is a sophisticated precise optical instrument equipped with electronics. It should be handled with due care:

- Unit contains fragile components. Avoid impacts, dust, moisture and sharp changes of temperature.
- Do not touch the optical surfaces other than for cleaning. Doing so may damage the anti-reflection coating.
- Clean optical surfaces with professional lens cleaning supplies.
- Use only a soft clean cloth to clean the exterior of the device.
- Keep the device away from sources of heat, such as heating appliances, sunlight or central heating.
- Switch off the unit and remove the battery during the extended periods of non-operation.
- Do not apply an excessive force or pressure to the lens assembly, movable parts and thread connections.
- Small dark and/or light spots may be seen in the field of view due to considerable optical magnification of the eyepiece. This does not affect the operational capabilities of the device.

CONTENTS

| | |
|---|----|
| 1. OVERVIEW | 3 |
| 2. DELIVERY SET | 5 |
| Standard delivery set..... | 5 |
| Optional accessories | 5 |
| 3. SPECIFICATIONS | 6 |
| Unit specifications | 6 |
| Main tube parameters | 7 |
| Spatial frequency-contrast characteristic | 8 |
| Field of view cleanness..... | 8 |
| 4. UNIT DESIGN..... | 9 |
| 5. OPERATION INSTRUCTIONS..... | 12 |
| Installing battery | 12 |
| Switching the unit on..... | 12 |
| Switching the unit off | 13 |
| Operating at night | 13 |
| Adjusting to individual vision..... | 13 |
| Focusing | 14 |
| Interpupillary distance | 14 |
| Installation of interchangeable lenses | 14 |

| | |
|---|----|
| 6. TROUBLESHOOTING | 16 |
| No green light through eyepieces | 16 |
| Image is unclear | 16 |
| Image flashes | 16 |
| Condensation accumulates on the parts | 16 |
| Visibility decreased or disappeared | 16 |
| 7. WARRANTY | 17 |
| 8. CUSTOMER SUPPORT | 18 |
| 9. ACCEPTANCE CERTIFICATE..... | 19 |

1. OVERVIEW

NVS 7 (the unit) is optoelectronic binocular intended for observation of objects and orientation at night or under dark conditions. The unit is equipped with a generation 2+ or 3 image intensifier tube, which amplifies low light, such as moonlight, starlight or man-made light.

Add-on lens can be attached to the unit to increase magnification.

Some typical activities where NVS 7 can be useful:

- Law enforcement
- Wildlife observation
- Security
- Search and rescue
- Hunting

Features

- Built-in infrared illuminator allows observation in total darkness (i.e. cave or dark room);
- Soft rubber eyecup allows comfortable viewing

Please read all the instructions carefully prior to using the unit.
Manufacturer reserves the right to introduce minor design
changes without notice.

2. DELIVERY SET

Standard delivery set

| | QUANTITY |
|--|----------|
| Binocular configuration: NVS 7 unit with 4x, 5x or 8x lens | 1 |
| Lens cap | 1 |
| Neck strap | 1 |
| Soft case | 1 |
| Manual | 1 |
| Warranty card | 1 |
| AA battery | 2 |
| Lens cleaning kit | 1 |

Optional accessories

Hard case

Exact delivery set is subject to the specific contract terms.

3. SPECIFICATIONS

Unit specifications

| Model | 2XT 4x / 5x / 8x | 3XT 4x / 5x / 8x |
|--|---|---------------------|
| Image Intensifier Tube (IIT) | Gen. 2+ | Gen. 3 |
| Apparent field of view | 10° / 8° / 5° | |
| Eye relief | 25 mm | 25 mm |
| 4x / 5x / 8x Objective focal length / F-number | 100 mm - F1.5 / 130 mm - F2.3 / 216.4 mm - F2.0 | |
| Interpupillary distance | 57-73 mm | |
| Focus range:4x / 5x / 8x | 10 m - ∞ / 10 m - ∞ / 20 m - ∞ | |
| Dioptric correction | ±5 | |
| Battery type | 2 standard AA batteries | |
| Battery life | Over 80 hours without IR; over 30 hours with IR | |
| Low battery indicator | √ | |
| IR ON indicator | √ | |
| Waterproof | MIL-STD-810 | |
| Sizes: 4x / 5x / 8x | 165x120x70 mm / 230x136x82 / 240x130x130 mm | |
| Weight: 4x / 5x / 8x | 0.690kg / 0.800kg / 1.470 kg | |

NOTE: As the design is being continuously improved the actual specifications may be better than those given above.

Main tube parameters

| Model | NVS 7-2 XT | NVS 7-3 XT |
|---------------------|-------------------|-------------------|
| Generation | 2+ | 3 |
| IIT Model | NCXT4322 | N3XT4322 |
| ITT Resolution, min | 57 lp/mm | 57 lp/mm |

| Image Intensifier Type (Generation/Grade) | 2+ XT | 3 XT |
|--|---|-------------------------------|
| Photocathode operating diameter, mm | 17.5 | |
| Photocathode type | S-25 | GaAs |
| Photocathode sensitivity, min : | | |
| Integral | 600 $\mu\text{A}/\text{lm}$ | 1,600 $\mu\text{A}/\text{lm}$ |
| Spectral at $\lambda = 850 \text{ nm}$ | 45 mA/W | 180 mA/W |
| Light amplification | $>35,000 \text{ fl}/\text{fc}$ | |
| Image magnification | 1x | |
| Max dark background brightness | $1 \cdot 10^{-3} \text{ cd}/\text{m}^2$ | |
| Signal-to-noise ratio | 18 | 20 |
| Current consumption, max | 20 mA | 25 mA |
| Voltage | $2.8 \pm 0.8 \text{ V}$ | |
| MTBF, hours | 10K | 10K |
| Operating temperature range | $-50^\circ\text{C} \dots +55^\circ\text{C}$ | |

Spatial frequency-contrast characteristic

| Frequency, lines/mm | Contrast transfer coefficient (XT) |
|---------------------|------------------------------------|
| 2.5 | 0.88 |
| 7.5 | 0.72 |
| 15.0 | 0.50 |

Field of view cleanness


| SPOTS DIAMETER IN MICRONS | ZONE 1 Ø5.6MM | ZONE 2 Ø5.6-Ø14.7MM | ZONE 3 Ø14.7-Ø17.5MM |
|------------------------------|------------------|------------------------|-------------------------|
| > 230 | 0 | 0 | 0 |
| 150 - 230 | 0 | 1 | 1 |
| 75 - 150 | 0 | 1 | 2 |

4. UNIT DESIGN



NVS7 – 4x

1. On-Off, IR switch
2. Lens focus adjustment ring
3. Eyepiece focus adjustment rings
4. Eyepieces
5. Battery compartment cover
6. Objective lens

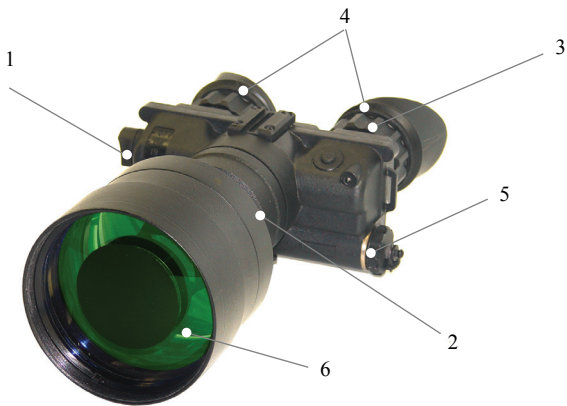

NVS7 – 5x

1. On-Off, IR switch
2. Lens focus adjustment ring
3. Eyepiece focus adjustment ring
4. Eyepieces
5. Battery compartment cover
6. Objective lens



NVS7 – 8x

1. On-Off, IR switch
2. Lens focus adjustment ring
3. Eyepiece Focus adjustment rings
4. Eyepieces
5. Battery compartment cover
6. Objective lens
7. Objective lens cover
8. Tripod mount

5. OPERATION INSTRUCTIONS

Installing battery

Unpack the device. Unit is supplied with battery not installed.

Prior to installing the battery, make sure the switch is in the OFF position and the lens cap is on.

Unscrew the battery compartment cover (5) and install 2 fresh AA batteries. Observe the correct polarity indicated on the housing. Screw in the battery compartment cover back.

Switching the unit on

In daylight put on the lens cap prior to switching the unit on.

To check if the unit is operational switch it ON (1) and look through eyepiece (4). You should see greenish-lit screen. If the screen is not lit check the battery.

When the unit is ON user may see a circular indicator through the eyepiece (Fig. 1). It is hardly noticeable when not active.

Flashing indicates low battery. For uninterrupted operation keep fresh batteries ready and replace them in time.

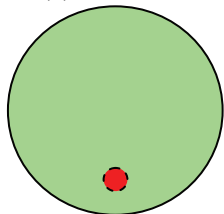


FIGURE 1
Low battery indicator

Solid red dot indicates that the IR illuminator is on.

In the daytime with lens cap on it is normal to observe a fuzzy image. Switching on the unit device in the daytime is intended for testing purposes only.

Switching the unit off

After you have finished using the device, turn it off by rotating switch (1) to OFF position. Put protective lens cap (ex.NVS7-8x, 7) on the lens. Remove the battery from the battery compartment to avoid damaging of the device in case of electrolyte leakage.

Operating at night

Take off the lens cover from the lens (6). Turn on the device using switch. If lighting is insufficient, turn on the IR illuminator (1) by turning switch. The red indicator (Fig. 1) will go on. IR illuminator is effective when observing an object located not far from the viewer.

| |
|--|
| The IR illuminator is visible to anybody with a night vision device. |
|--|

Adjusting to individual vision

Turn on the device. Direct the device at an object placed within 8-20 m from the viewer. Obtain the sharpest image possible on the eyepiece (4) screen by focusing the eyepiece lens (3) and then the objective lens (2).

Focusing

To obtain sharp image at other distance adjust the lens focus (2)leaving eyepiece setting intact. You should be able to obtain a sharp image for distances from 2-20 m to infinity, depending on the objective lens magnification.

If you wear eyeglasses or NBC protective mask, you may like to fold the rubber eyecup.

Interpupillary distance

The unit is designed to accommodate interpupillary distance of 57-73 mm without any additional adjustment and should be comfortable for 99% of adults.

Installation of interchangeable lenses

| |
|---|
| Do not apply an excessive force when changing the lenses. |
|---|

1. Make sure the unit is off (1).
2. Remove the lens cap
3. Detach the current lens: hold the lens by its base and rotate it counter-clockwise. Once the lens has been removed, store it in a safe, clean space.
4. Screw in (clockwise) new lens.

The threads are very fine (to prevent humidity penetration) and can be damaged easily. Do not apply force to the lens rotation. If lens does not screw in smoothly make sure that the threads match.

Unit is ready for operation immediately after the lens change.

Warning: Forcing installation of the lens may damage the thread and cause costly repairs to both the binoculars and the lens that are not covered by warranty.

6. TROUBLESHOOTING

No green light through eyepieces

Check that the batteries are installed properly.

Check the charge of the batteries. Replace them if they are weak.

Image is unclear

Check if the lenses are foggy or dusty. Clean them if necessary.

If the image is still unfocused – adjust the eyepieces; see 5.5 and 5.6 for details.

Image flashes

Image may flash during the first two minutes after activation. It may continue flashing if exposed to bright light (even with the lens cap on!).

Condensation accumulates on the parts

When the unit is brought from the cold into a warm environment internal condensation may appear. The unit has to be warmed up for up to two hours to regain full operational capacity.

Visibility decreased or disappeared

Bright light sources (the Moon, projectors or headlights) may cause visibility to degrade or even completely disappear. Move the device away from the light source immediately. The image will be restored within two minutes.

Adverse atmospheric conditions such as fog, haze or extremely dark environments will decrease visibility.

7. WARRANTY

NEWCON warrants this product against defects in materials and workmanship for one year from the date of the original purchase. Longer warranty is available, subject to the terms of the specific sales contract. Should your Newcon product prove to be defective during this period, please deliver the product securely packaged in its original container or an equivalent, along with the proof of the original purchase date, to your Newcon Dealer.

Newcon will repair (or, at its option, replace with the same or comparable model), the product or part thereof, which, on inspection by Newcon, is found to be defective in materials or workmanship.

*What This **Warranty Does Not Cover:***

NEWCON is not responsible for warranty service should the product fail as a result of improper maintenance, misuse, abuse, improper installation, neglect, damage caused by disasters such as fire, flooding, lightning, improper power supply, or service other than by a NEWCON Authorized Service.

Postage, insurance and shipping costs incurred while presenting your NEWCON product for warranty service are your responsibility.

8. CUSTOMER SUPPORT

Should you experience any difficulties with your Newcon Optik product, consult this manual first.

If the problem remains, contact our customer support department at +1(416) 663-6963 or toll free at 1-877-368-6666 (North America only). Our operating hours are 9am-5pm, Monday - Friday, Eastern Standard Time.

Under no circumstances should the equipment be sent to Newcon without authorisation from our technical support department.

Newcon accepts no responsibility for unauthorized returns.

To locate NEWCON Authorized Dealer call
+1(416) 663-6963 or fax +1(416) 663-9065

Email: newconsales@newcon-optik.com

Web: www.newcon-optik.com

The defective products should be shipped to:

US Customers:

2498 Superior Ave. Cleveland, OH 44114, USA

From all other countries:

105 Sparks Ave., Toronto ON, M2H 2S5, CANADA

9. ACCEPTANCE CERTIFICATE

Image intensifier tube serial number: _____

| | Minimum | Measured |
|--|--------------------------------|----------|
| Resolution, lp/mm | 57 | |
| Photocathode sensitivity, integral, $\mu\text{A}/\text{lm}$ | 600 (Gen. 2+) 1600 (Gen. 3) | |
| Light amplification | 35000 | |

Date of production: _____

Quality Inspector's signature: _____

NIGHT VISION DEVICE

NVS 7-2/4x XT

NVS 7-3/5x XT

NVS 7-3/4x XT

NVS 7-2/8x XT

NVS 7-2/5x XT

NVS 7-3/8x XT

Unit serial number: _____

The unit complies with all technical specifications and has passed the inspection.

Date of production: _____

Quality Inspector's signature: _____

Quality Assurance Seal

NEWCON OPTIK™

Printed in Canada

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>