


# Quick Start Guide


DVP5990  
DVP5992  
DVD Video Player

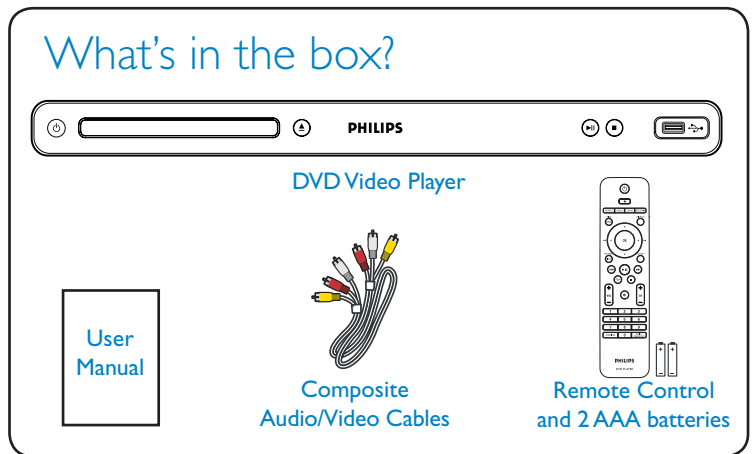

## I Connect


Basic Audio/Video Connections

### Composite Video CVBS (Good Quality)

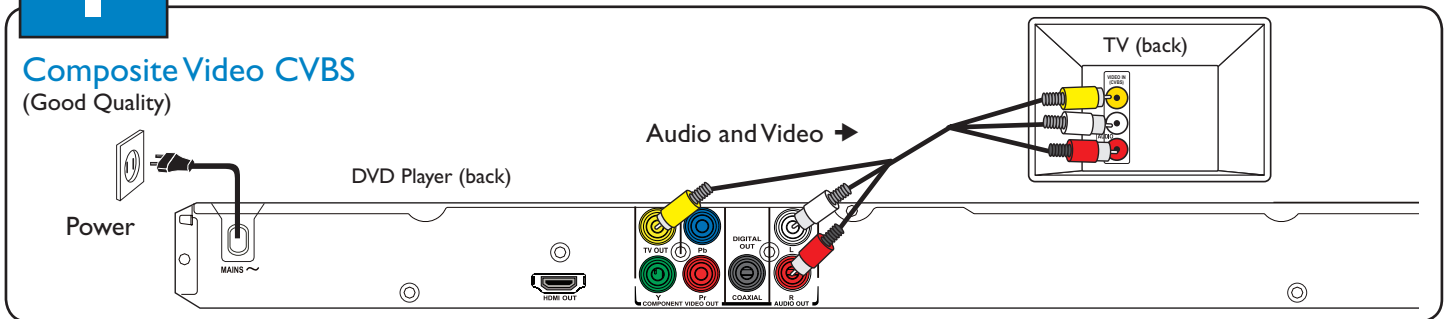


OR

### Component Video (Better Quality)

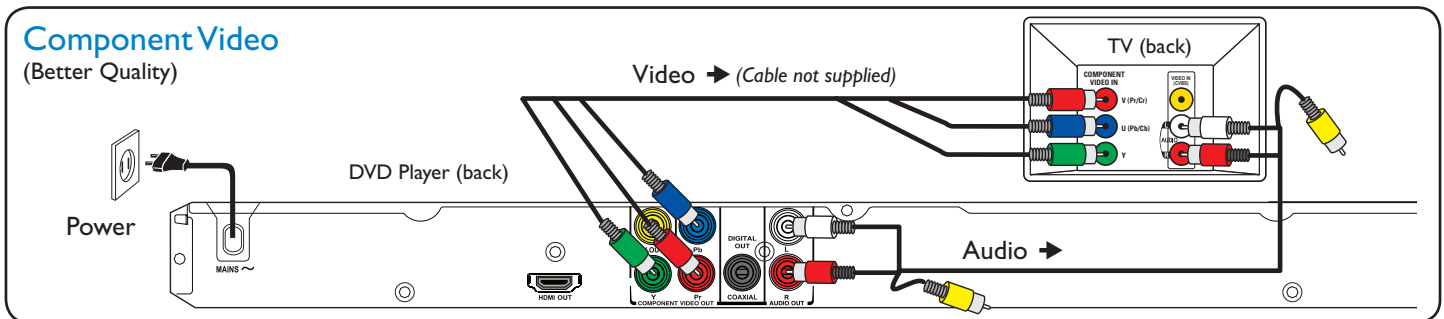


OR

### HDMI (Best Quality)

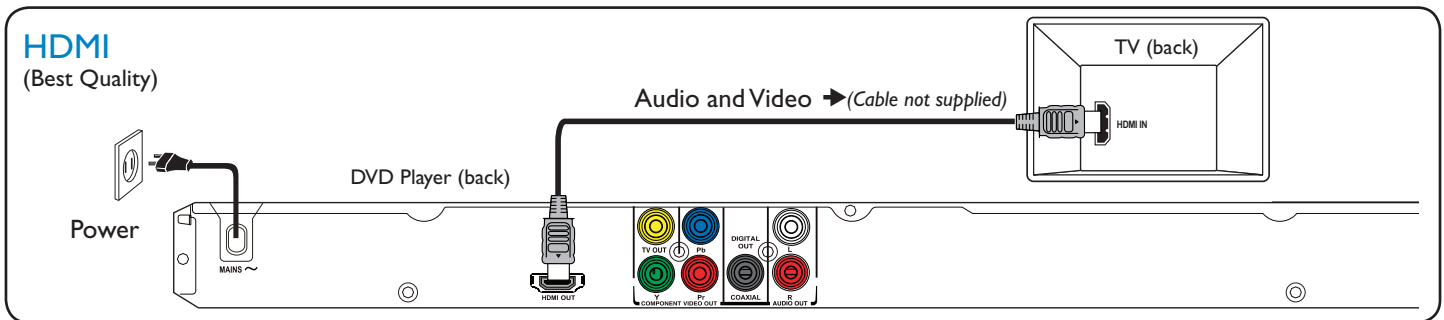


OR


### RF Modulator

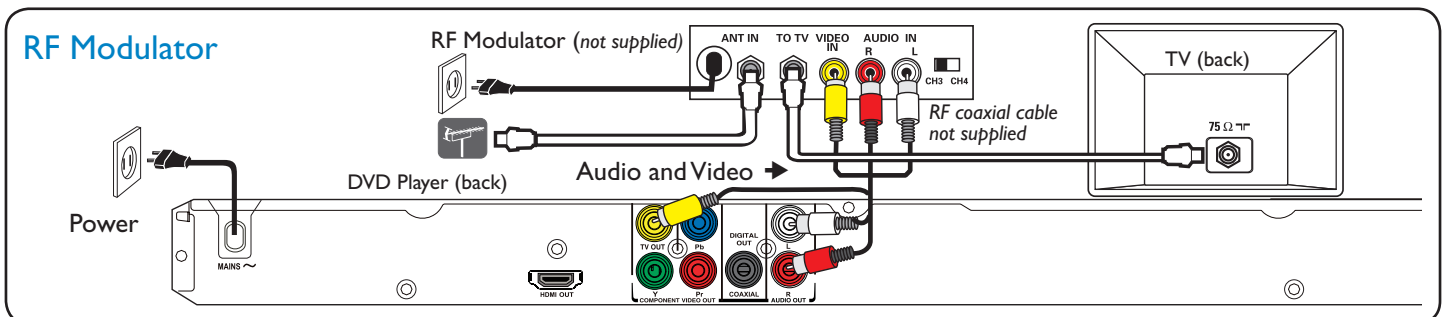


# 2 Set up

## A Finding the viewing channel

- 1 Press  on this unit to turn it on.

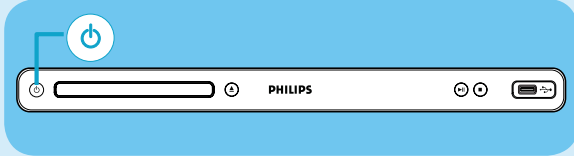







- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

**Note** To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT,  button) until you see the Video In channel. If you are using a RF modulator, set the TV to channel 3 or 4.
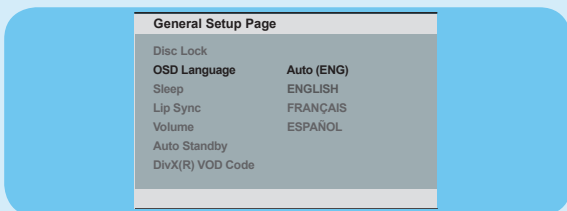
## B Select the display language on the screen

- 1 Press **SETUP**.  
The { General Setup Page } appears.



- 2 Use   keys to select { OSD Language } and press .
- 3 Use   keys to select a language and press **OK** to confirm. (For Philips 'EasyLink' TV, { Auto } must be selected.)
- 4 Press **SETUP** to exit.

**Note** The language set here is only for the menus that are shown on the TV while operating this unit, not for the DVD disc menu.

There are various setup options (Audio Setup, Video Setup, Preference) available on this unit. Refer to the user manual for more information.

## Need help? User Manual

See the user manual that came with your Philips DVD Player.

### Online

Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome).


 
 

### Hotline



Call 1-888-PHILIPS (1-888-744-5477) for our operators.


# 3 Enjoy
 
## A Start disc playback

- 1 Playback may start automatically when a disc has been loaded in the disc tray.

**Note** If a disc menu appears on the TV, use     keys to navigate in the DVD menu.


- 2 Press  to start playback.
- 3 To stop playback, press .

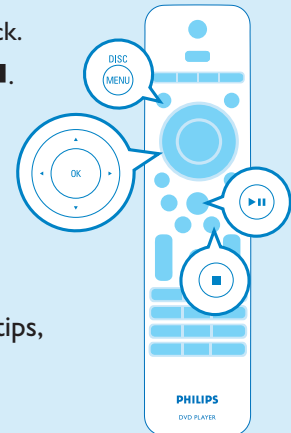

## Troubleshooting

For more troubleshooting tips, see the user manual.
 
### No power

- Check if the AC power cord is properly connected.
- Press  on the top panel of this unit to turn on the power.

### No picture

- Check connection to TV and ensure the plugs are firmly in place.

### No sound or distorted sound

- Check audio connections and make sure that the connected audio device is turned on.
- For HDMI connection, check if your TV's HDMI or Digital setting is set to ON. Contact your TV manufacturer for detailed information.

### Remote control does not work

- Check the batteries are loaded correctly or replace the batteries with new ones.
- Reduce the distance between the remote control and this unit.
- Point the remote control directly toward the IR sensor.

2008 © Philips Consumer Electronics  
A Division of Philips Electronics North America Corp  
P.O. Box 671539 Marietta, GA 30006-0026  
All rights reserved.

Printed in China  
sgptt-0805/37\_03



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>