

FARBERWARE®

SPECIAL SELECT



USE & CARE INSTRUCTIONS

**DUAL THERMAL CARAFE COFFEEMAKER
FOR MODELS: FSCM200M (White), FSCM200RM (Red),
FSCM200BM (Black), FSCM200CBM (Cobalt Blue)**

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of an accessory not evaluated for use with this appliance may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the Power Switch(es) OFF ("O"), then remove the plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Be certain Water Reservoir Cover(s), Filter Basket(s) and Filter Basket Cover(s) are securely in place before operating appliance.
14. Scalding may occur if the Water Reservoir Cover(s), Filter Basket(s) or Filter Basket Cover(s) are removed during the brewing cycles.
15. The Thermal Carafes are designed to be used with this appliance. They must never be used on a range top.
16. Do not use a cracked Thermal Carafe.
17. Do not clean Thermal Carafes with cleansers, steel wool pads, or other abrasive material.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This appliance generates heat and escaping steam during use. Use proper precautions to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Use **water only** in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
4. **DO NOT** attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
5. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
6. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.** Contact Consumer Service for examination and repair.
8. Do not leave this appliance unattended during use.
9. The appliance must be left to cool down sufficiently before adding more water to avoid splattering.
10. Always use fresh, cool water in your appliance. Warm water or other liquids, except as listed in cleaning section, may cause damage to the appliance.
11. **DO NOT** put Thermal Carafes into a microwave.
12. **DO NOT** lift Filter Basket Cover(s) until brewing is complete, and all parts have cooled.
13. This Carafe is designed for use with this appliance. It must never be used on a range top.
14. Do not use a damaged Thermal Carafe or a Carafe having a loose or weakened Handle.

POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or place mats between the appliance and the finish of the countertop or tabletop.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

 
 
ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

GETTING TO KNOW YOUR **FARBERWARE®** FSCM200M (White), FSCM200RM (Red), FSCM200BM (Black), FSCM200CBM (Cobalt Blue) DUAL THERMAL CARAFE COFFEEMAKER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

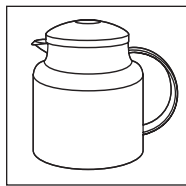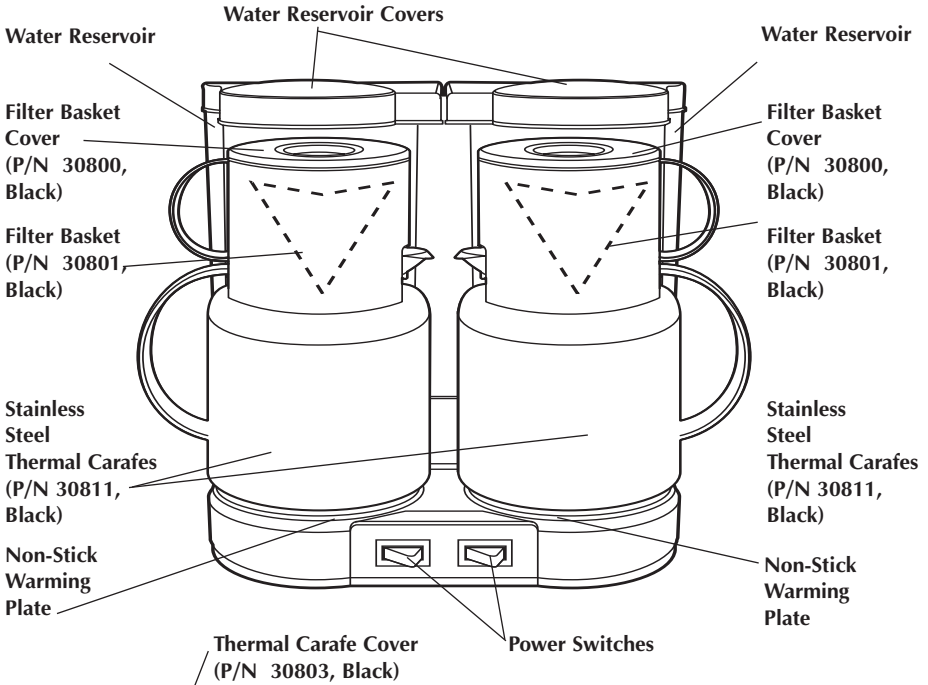

Covered Thermal Carafe

NOTE: When ordering replacements parts, please add the suffix letter "W" to the part number for WHITE replacement parts; the suffix letter "R" for RED replacement parts; the suffix letters "CB" to the part number for COBALT BLUE replacement parts.

BEFORE USING YOUR FARBERWARE® DUAL THERMAL CARAFE COFFEE MAKER

In order to assure perfect tasting coffee, thoroughly clean both Thermal Carafes, Thermal Carafe Covers and Filter Baskets in warm, soapy water, before using your Coffee Maker. Rinse well and dry thoroughly. Wipe unit with a soft, slightly damp cloth or sponge to remove any packing dust.

CAUTION: Never immerse the appliance, cord or plug in water or other liquid.

Before brewing coffee for the first time, allow cold water to cycle through your Coffee Maker without coffee or the use of a paper filter; this will clean the Water Reservoir prior to your first use.

IMPORTANT: Always use cold water when brewing coffee.

COFFEE FILTERS

Cone-shaped paper filters are available locally at grocery stores and where Coffee Makers are sold. Standard #2 cone-shaped filters should be used. Permanent gold filters may also be purchased, eliminating the need for disposable papers filters.

The use of basket-style paper filters is not recommended, since they do not conform to the shape of the Filter Basket and may cause coffee to back up and spill over during brewing.

BREWING COFFEE

Your Dual Carafe Coffee Maker is a 2-in-1 unit. Each side works independently of the other. You can choose to brew 2 pots at once, or 1 at a time.

NOTE: The amount of brewed coffee will always be less than the amount of water placed into Coffee Maker, since about 10% is absorbed by coffee grounds and filter.

 
1. Be sure both Power Switches are in the OFF ("O") position.
2. Plug Coffee Maker into a 120V AC electrical outlet.
3. Fill 1 or both Thermal Carafes with cold water. These Carafes hold approximately 32 ounces of water each.

NOTE: FILL CARAFES TO 1/2 INCH BELOW THE MOUTH OF THE CARAFE. DO NOT FILL CARAFES TO THE VERY TOP.

4. Lift the Water Reservoir Covers and carefully pour water into 1 or both of the Water Reservoirs. Close Covers.

NOTE: DO NOT FILL PAST THE "FILL HOLE" IN THE WATER RESERVOIR AS THIS WILL CAUSE WATER TO SPILL FROM UNIT.

5. Place Filter Basket(s) securely onto 1 or both of the Thermal Carafes.
6. Place a paper #2 cone-shaped filter(s) into 1 or both of the Filter Baskets.
7. Fill 1 or both Filters with desired amount of coffee. Add 1 level tablespoon of coffee for each cup of coffee desired. If using a scoop, use 1 scoop (equivalent to 2 tablespoons) for every 2 cups of coffee. Increase or decrease the amount of coffee used to suit your individual taste.
8. Place the Filter Basket Cover(s) onto 1 or both of the Filter Baskets.

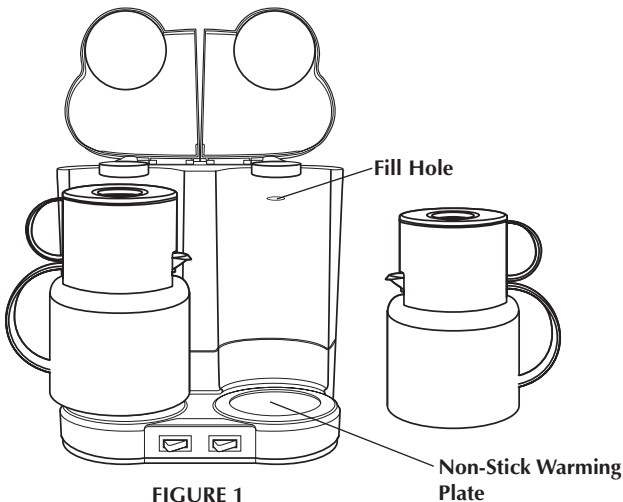

BREWING COFFEE (Continued)

9. Carefully grasp the Handle of the Thermal Carafe(s) to move Filter Basket(s) with Cover(s) and place in position on the Non-Stick Warming Plate. (See Figure 1)
10. Press the Power Switch(es) to the ON ("I") position. When pressed, the Switch will illuminate, indicating the brewing process has started.
11. After the brewing process has finished, remove the Carafe(s) from the Warming Plate(s) and press the Power Switch(es) OFF ("O"). Carefully grasp the Filter Basket(s) by the Handle, remove from Thermal Carafe(s) and discard the coffee grounds.
12. Place the Thermal Carafe Cover(s) onto the Carafe and close it tightly. To serve coffee, turn the Lid(s) counter-clockwise, a slight turn, until the arrow is pointing directly at the handle of each Thermal Carafe.



NOTE: The non-stick coated Dual Warming Plate which holds the Thermal Carafes is specially designed to maintain a lower temperature which will not harm the Thermal Carafes. It is safe to keep the Thermal Carafes on the Warming Plate after the brewing is complete. The Plate will get hotter during the brew cycle, but will cool considerably upon completion.

WARNING: Warming Plate is hot! Do not touch Warming Plate during or after brewing.

BREWING A THIRD POT OF COFFEE

It is recommended that the Coffee Maker should be in OFF ("O") position for 10 minutes between cycles, in order to allow unit to cool. While unit is in OFF position, dispose of used coffee filter(s), and rinse Thermal Carafe(s), Filter Basket(s) and Filter Basket Cover(s) in water. Place fresh filter(s) into 1 or both of the Filter Baskets. Repeat brewing procedure.

IMPORTANT: If Coffee Maker is not allowed to cool before immediate repeated use, water placed in Carafes may become overheated. A spray of steam could be released from openings, creating a risk of burns.

HINTS FOR GREAT TASTING COFFEE

- A clean Coffee Maker is essential for making great tasting coffee. Regular cleaning is highly recommended.
- Always use fresh, cold water in your Coffee Maker.
- Finer drip grinds promote fuller extraction and provide rich, full-bodied coffee. Regular grind will require slightly more coffee per cup to provide the strength of a finer grind.
- Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.
- For optimum coffee, buy whole beans and grind them finely just before brewing.
- Do not re-use coffee grounds since this will greatly impair coffee flavor.
- Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.
- Small oil droplets on the surface of brewed, black coffee is due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Overextraction may also cause oiliness, indicating a need to clean your Coffee Maker.
- Your Dual Thermal Coffee Maker is the perfect solution for households that prefer 2 separate blends of coffee. Now you can offer family and friends caffeinated or decaffeinated coffee prepared at the same time! Choose from coffee varieties and a wide array of flavored coffees.

BREWING TEA

This unit is ideal for serving a “mixed” crowd: tea drinkers and coffee drinkers. When brewing tea, make sure that your Filter Basket and Carafe are thoroughly clean. If the unit has been used previously for coffee, wash the pieces with warm, soapy water and rinse well. Follow directions for making coffee except instead of putting coffee in the Filter Basket, place loose tea into the paper filter. For your first pot of tea, we suggest 1 level teaspoon of loose tea per cup. Adjust the strength by using more or less tea.

USER MAINTENANCE INSTRUCTIONS

Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

CARING FOR YOUR CARAFE

A damaged Carafe may result in possible burns from hot liquid.

To avoid breaking a Carafe:

1. Do not allow all liquid to evaporate from Carafe while on the Warming Plate. Do not heat Carafe when empty. If this happens, discard Carafe.
2. Discard Carafe if damaged in any manner. A chip or crack could result in breakage.
3. Never use abrasive scouring pads or cleansers as they will scratch and weaken the glass.
4. Do not place the Carafe on or near a hot gas or electric burner, in a heated oven, or in a microwave.
5. Avoid rough handling and sharp blows.
6. Do not clean Thermal Carafes in the dishwasher. The glass liners cannot withstand the pressure and may break.

TO CLEAN

After regular use:

Unplug from outlet and allow unit to cool for 10 minutes. Thoroughly clean Thermal Carafes, Thermal Carafe Covers and Filter Baskets in warm soapy water. Rinse well and dry thoroughly. Wipe unit with a soft cloth to dry.

Once a month:

Since mineral deposits from tap water can form a coating in the Coffee Maker, causing slower brewing times and possibly affecting the flavor of the coffee, we recommend the following cleaning:

Pour 8 ounces of vinegar into each of the Thermal Carafes and fill each Carafe with cold water. Carefully pour the water from each of the Carafes into each of the Water Reservoirs. Without coffee or filter paper, switch the unit to the ON ("I") position and let the water run through the unit into the Thermal Carafes. Discard water after it has run through the machine. Rinse thoroughly.

Do not use any chemicals or abrasive cleaners.

IMPORTANT: Do not clean Thermal Carafes in the dishwasher.

The glass liners cannot withstand the pressure and may break.

Never immerse the appliance, cord or plug in water or any other liquid.

TO STORE

Unplug appliance, and allow to cool. There is a convenient Cord Storage area at the back of the machine. Simply feed the cord inside the storage area and store in its box or in a clean, dry place.

FARBERWARE®

ONE-YEAR LIMITED WARRANTY

Warranty: This Farberware® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

SERVICE AND REPAIR: SHOULD THE APPLIANCE MALFUNCTION, YOU SHOULD FIRST CALL TOLL-FREE 1 (888) 881-8101 BETWEEN THE HOURS OF 9:00 AM AND 5:00 PM CENTRAL STANDARD TIME AND ASK FOR CONSUMER SERVICE STATING THAT YOU ARE A CONSUMER WITH A PROBLEM. PLEASE REFER TO MODEL NUMBER: FSCM200M (White), FSCM200RM (Red), FSCM200BM (Black), or FSCM200CBM (Cobalt Blue) WHEN YOU CALL.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (888) 881-8101.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$12.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1-888-881-8101
E-mail: Farberware-electric@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products, visit our website: www.eSalton.com

©2004 Salton, Inc. All rights reserved.

FARBERWARE® is a registered trademark of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>