

A NEW GENERATION OF FARBERWARE
FARBERWARE®
FOR A NEW GENERATION OF COOKS

ACCENTS



USE & CARE INSTRUCTIONS 2 SLICE TOASTER

FAC200T

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the CANCEL Button, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.

SAVE THESE INSTRUCTIONS
THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water!
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use, immediately press the CANCEL Button and unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
6. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
7. Do not use this appliance in an unstable position.
8. Use the Toaster on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Toaster could cause it to malfunction.

WARNING: ELECTRICAL SHOCK HAZARD. Never attempt to dislodge food inside the Toaster while the Toaster is plugged in. Doing so could cause an electrical shock hazard or a risk of fire.

CAUTION: This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.

CAUTION:

DO NOT toast pastries with runny fillings or frosting.

DO NOT toast torn slices of bread.

DO NOT place buttered bread or wrapped food into the Toaster.

DO NOT toast small-size breads, mini-baguettes, breadsticks, etc.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

GETTING TO KNOW YOUR **FARBERWARE® 2** SLICE TOASTER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

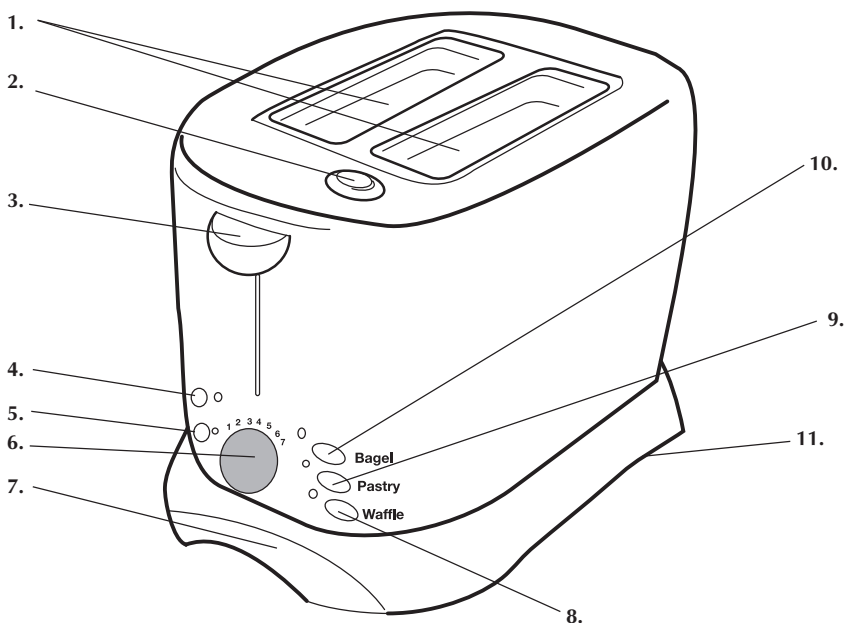


Figure 1

- | | |
|--------------------------------|--------------------------------------|
| 1. Toasting Slots | 7. Crumb Tray (P/N 22464) |
| 2. CANCEL Button | 8. WAFFLE Button |
| 3. Toasting Lever | 9. PASTRY Button |
| 4. FROZEN Button | 10. BAGEL Button |
| 5. REHEAT Button | 11. Cord Storage Wrap
(not shown) |
| 6. Adjustable Browning Control | |

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing that requires disassembly other than cleaning must be performed by a qualified appliance repair technician.

CAUTION: Do not immerse Toaster, cord, or plug in water or any other liquid.

CLEANING

CAUTION: Be sure the Toaster is unplugged before cleaning.

Wipe the Toaster exterior with a clean, damp cloth. Do not use abrasive cleaners. Do not put cord, or plug in water or liquid.

CRUMB TRAY: Remove the Crumb Tray at bottom of the Toaster. Pull the Crumb Tray away from the bottom of the Toaster, and allow the crumbs to fall out.

We suggest that you do this over a sink or over a garbage can.

Wipe the Crumb Tray with a clean, damp cloth. Replace the Crumb Tray, making sure to push firmly so that it is fully inserted in the bottom of the Toaster.

EXTERIOR: Wipe surfaces with a clean, damp cloth. Do not use abrasive cleansers, as they may scratch the surfaces.

STORAGE

Unplug unit, allow to cool, and clean before storing.

Store Toaster in its box in a clean, dry place.

Never store Toaster while it is hot or still plugged in.

Never wrap cord tightly around the appliance, use the Cord Storage area on the bottom of the Toaster.

Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

BEFORE USING FOR THE FIRST TIME

1. Remove all packaging materials including those which may be inside the Toasting Slots or Toasting Lever slot.
2. Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
3. Do not put the Toaster, cord or plug in water.
4. Be sure the Crumb Tray is pushed all the way into the Toaster.
5. Unwrap power cord from Cord Storage Area on underside of Toaster and plug into a 120V AC outlet.
6. Turn the Adjustable Browning Control to (1), the lightest setting.
7. Lower the Toasting Lever until it locks in place. Operate without bread once or twice to burn off any manufacturing residue. You may notice a slight amount of smoke; this is normal and will stop as the heating elements continue to heat.

OPERATING INSTRUCTIONS

TOASTING BREAD

1. Be sure no bread or other objects are inside the Toasting Slot. Place Toaster on a flat, level, heat resistant surface and plug the power cord into a 120V AC electrical outlet.
2. Turn the Adjustable Browning Control to desired setting: (1) is the lightest setting and (7) is the darkest. You may want to experiment with the Adjustable Browning Control to determine your preference.
- 3 Remove all protective wrappings from food before placing into the Toasting Slots. Avoid toasting torn bread slices that may get lodged in Toasting Slot.
4. Insert the bread into the Toasting Slots. Lower the Toasting Lever until it locks into place. The Centering Guides will automatically center the bread for even toasting. When the bread is lowered into position, it will automatically begin to toast.

NOTE: The Toasting Lever will not lock into position unless the Toaster is plugged in!

NOTE: When toasting a single slice, the bread may be placed in either Toasting Slot.

NOTE: To prevent a fire hazard, never place bread over the opening of the Toaster, but always place it into the Slots.

OPERATING INSTRUCTIONS (CONTINUED)

NOTE: DO NOT change the Adjustable Browning Control selection during the TOAST cycle. First press the CANCEL Button; then turn the Browning Control to adjust the browning level. Replace bread and toast until the desired toast color is achieved.

5. When the toast reaches the selected browning level, it will pop up automatically.
6. Remove bread from Toasting Slots. Use care when removing bread as the bread and Toaster will still be hot.
7. Unplug cord from wall outlet when not in use.

IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.

CANCEL BUTTON

To stop or interrupt any Toasting Cycle, press the CANCEL Button, located on the top of the Toaster. The bread will automatically rise and the Toaster will turn off.

TOASTING BAGELS, PASTRIES AND WAFFLES

The BAGEL, PASTRY, and WAFFLE Cycles are especially helpful when toasting bagels, English muffins, toaster pastries or frozen waffles.

1. Always slice bagels or English muffins into equal halves before toasting. Place one half in each of the Toasting Slots. Use slices that fit freely into the Slots. The Self-Adjusting Centering Guides will hold food upright for uniform side-to-side toasting.

NOTE: When toasting a single bagel, English muffin or toaster pastry, the toaster food may be placed in either Toasting Slot.

2. Place your Toaster on a flat, level surface.
3. Plug the Toaster into a 120V AC electrical outlet.
4. Turn the Adjustable Browning Control to desired setting.
5. Press the BAGEL Button for bagels or English muffins; press the PASTRY Button or the WAFFLE Button for pastries or frozen waffles. You will hear an audible beep, indicating that your selection has been made. The Light next to the selected Button will illuminate, indicating the Toaster is ON and in the proper toasting Cycle.
6. Lower the Toasting Lever to lock into position; toasting will begin.

OPERATING INSTRUCTIONS (CONTINUED)

NOTE: You may press the appropriate toasting Cycle Button before or after the Toasting Lever is lowered.

NOTE: Do not use this Toaster for toasting pastry items with runny-type frosting or open fillings.

NOTE: Non-frozen (or thawed) pastries should be toasted using the default TOAST Cycle. Follow the package instructions.

NOTE: If you are toasting FROZEN foods, please see ADVANCED MODES section following.

7. When the bagel or toaster food reaches the selected color, it will pop up automatically. The Bagel, Pastry or Waffle Indicator Light will remain on.

NOTE: The Toaster will remain in the last selected Cycle after toasting. If you wish to revert back to default TOAST Cycle or change Cycles, you must press the appropriate Button before toasting the next food.

ADVANCED MODES

When used in conjunction with the 4 Toasting Cycles: BREAD, BAGELS, PASTRIES, WAFFLES, the 2 Advanced Modes: FROZEN or REHEAT make toasting effortless and perfect every time.

TOASTING FROZEN BREAD AND TOASTER FOODS

Take the guesswork out of toasting frozen bread and other toaster foods.

1. Turn the Adjustable Browning Control to your preferred setting.
2. Place frozen bread, waffles, etc. into Toasting Slot(s).
3. Press the FROZEN Button. You will hear an audible beep, indicating that your selection has been made. The Light next to the FROZEN Button will illuminate, indicating the Toaster is ON and in the proper toasting Mode. Toasting time will be automatically altered to result in the same degree of browning you would get with unfrozen (thawed) bread.
4. Press the appropriate Toasting Cycle Button (BAGEL, PASTRY, WAFFLE). The Light will illuminate next to the selected Cycle Button.

NOTE: There will be NO Indicator Lights illuminated when toasting non-frozen (or thawed) BREAD.

OPERATING INSTRUCTIONS (CONTINUED)

NOTE: Your Toaster will remain in the last selected CYCLE/MODE after toasting. To change or clear Cycles or Modes, press the Button next to the Indicator Light again and the Light will go out. Press the new selection, a beep will sound and the corresponding Light will illuminate. Check to make sure the proper selections have been made.

5. Lower the Toasting Lever to lock into position; toasting will begin.

REHEATING BREAD AND FOODS

1. Insert the toast or toaster food into the Toasting Slot(s). Do not reheat buttered bread or pastries.

NOTE: There is NO need to adjust the Browning Control when using the REHEAT Cycle.

2. Press the REHEAT Button. A beep will sound, the Light will illuminate. Lower the Toasting Lever and the Toaster will begin reheating. The Toasting Lever will rise in a very short period of time. Watch it carefully.

REMOVING LODGED FOODS

If a piece of bread or any other toaster food becomes lodged in either of the Toasting Slots, unplug the Toaster and allow it to cool. Hold the Toasting Lever down. Turn the Toaster upside down and shake the food loose.

IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.

IMPORTANT POINTS

NOTE: Your Toaster will remain in the last selected CYCLE/MODE after toasting. To change or clear Cycles or Modes, press the Button next to the Indicator Light again and the Light will go out. Press the new selection, a beep will sound and the corresponding Light will illuminate. Check to make sure the proper selections have been made.

NOTE: There will be NO Indicator Lights illuminated when toasting non-frozen (or thawed) BREAD.

- Remove all protective wrappings from food before placing in the Toasting Slot.
- For best results, clean the Crumb Tray frequently.
- Different breads require different color settings. Raise Toasting Lever manually or press the CANCEL Button at any time to check toast color.
- Do not block top opening. Do not place any object over the top opening.
- Do not toast buttered bread or buttered pita bread. Melted butter will cause fire.
- Bread which has been toasted but not buttered may be reheated. Use the REHEAT Cycle.
- When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted on the lighter settings.
- Never immerse Toaster, cord or plug in water or other liquid.
- **Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.**

FARBERWARE®

ONE-YEAR LIMITED WARRANTY

Warranty: This Farberware® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (888) 881-8101 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number FAC200T when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (888) 881-8101.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1-888-881-8101
E-mail: Farberware-electric@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products, visit our website: www.eSalton.com

©2004 Salton, Inc. All rights reserved.

FARBERWARE® is a registered trademark of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®

1/04 PRINTED IN CHINA

P/N 61449

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>