

EL-6900

 
OPERATION MANUAL

NOTICE

- SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.

- SHARP assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, such as stolen credit card numbers, loss or alteration of stored data, etc.
- The information provided in this manual is subject to change without notice.



Part Names

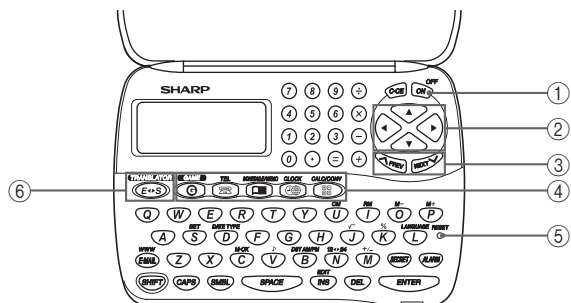

- Power ON/OFF key
- Cursor keys
- Search keys
- Mode keys
- RESET switch
- TRANSLATOR key

- Purple colored functions are operated by pressing [SHIFT] ("SHIFT" is turned on) and the appropriate keys.
- In this manual, only the display symbols necessary for explanation of this product are shown.

 The following notations are used for key operations.

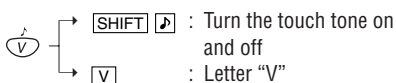

Using the Organizer for the First Time

Be sure to perform the following operations before using the Organizer for the first time.

- Remove the isolating film that is affixed to the battery holder on the back of the unit.
- Press the RESET switch with a ball-point pen or similar object. "RESET?" is displayed.
- Press [SHIFT] [ENTER] to initialize the Organizer. After "RESET!" is displayed, Home clock is displayed. (See "Clock Mode".) You have deleted all the memory contents now.

NOTES

- If the Organizer is subjected to strong, extraneous electrical noises or shocks during use, an abnormal condition may occur in which no keys (including [ON]) will respond. Press the RESET switch and press [SHIFT] [ENTER] to delete all the memory contents.
- To minimize battery consumption, the Organizer is designed to automatically turn off when no key has been pressed for approximately 7 minutes.
- The key touch tone is turned on and off by pressing [SHIFT] [T]. When the tone is turned on, "✓" is turned on.

Changing the Guidance Language

Guidance messages can be displayed in 7 languages – English, Dutch, Portuguese, Italian, German, French, and Spanish. After initializing the Organizer, the default setting is English.

To change the language, press [SHIFT] [LANGUAGE] followed by [PREV] or [NEXT] to select the desired language, then press [ENTER].

Entering Characters

- Alphanumeric letters, symbols, and "+ - × ÷ ." can be entered into the dot display area (the 1st line).
- Numbers and some characters (only space, -, and F and P in Telephone mode) can be entered into the number display area (the 2nd and the 3rd lines).
- Basically letters are entered in capital letters ("CAPS" is turned on). To enter small letters, press [CAPS] to turn "CAPS" off.

Entering symbols and letters with an accent mark

- To enter a symbol, press [SMBL] repeatedly until the desired symbol appears:
@#%\$¥€ () ~ ' : / \ _ & < > ß ! ? ¡ ¢ ø μ ¢
- To enter a letter with an accent mark, press [SHIFT] [SHIFT] to turn "SHIFT LOCK" on, and press the appropriate key repeatedly. (Refer to the "QUICK REFERENCE GUIDE" inside the cover.)
- To turn "SHIFT LOCK" off, press [SHIFT] again.

Making corrections

Move the cursor to the character to be corrected. Enter the correct character to replace the previous one.

Cursor

The cursor () indicates the position for entering a character. Move the cursor with the cursor keys ([] [] [] []).

Inserting characters

 
Each time [INS] is pressed, a space is inserted at the cursor position to allow you to enter a character.

Deleting characters

Press [DEL] to delete the character at the cursor position. Press [CCE] to clear all the characters that you have entered and not stored yet.

Clock Mode

Home clock

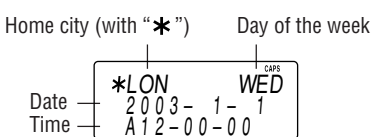

Each time you press [CLOCK], the clock switches between Home and World clocks. (For World clock, "*" is not displayed.)

1. Before setting the clock

- The default setting for the date is "YYYY/MM/DD" (year-month-day). To change the setting to "MM/DD/YYYY" (month-day-year) or "DD/MM/YYYY" (day-month-year):
 - Press [CLOCK] once or twice to display Home clock (with "*").
 - Press [DATE TYPE].
 - Press [PREV] or [NEXT] to select the desired type.
 - Press [ENTER] to store the new setting.
- To change the 12-hour clock to the 24-hour clock, press [12-24] ("A" or "P" is cleared). Each time you press [12-24], the clock switches.
- In the period of daylight saving time/summer time, press [DST] in advance ("#" is displayed).

2. Setting the clock

- Press [CLOCK] once or twice to display Home clock (with "*").
- Press [SHIFT] [SET] to start setting. The cursor starts to flash on the city name.
- Press [PREV] or [NEXT] to select the desired time zone. (Refer to the list of cities described below.)
 - Enter the city name, if needed (6 characters or under). Only one changed name for Home clock can be stored.
- Press [] to move the cursor to the year.
- Enter the year (4 digits), the month, and the day (2 digits each).
 - The built-in calendar extends from January 1st, 1901, to December 31st, 2098.
- Press [AM/PM] to select "A" (morning) or "P" (afternoon) for the 12-hour clock.
- Enter the time (hours and minutes).

Note: P12-00: noon, A12-00: midnight
- Press [ENTER]. The clock starts from "00" seconds.

Notes

- To enter a single-digit date or time, enter "0" and the digit (e.g. "02").
- If you enter an invalid date or time, "ERROR!" appears briefly. Enter the correct date and time and press [ENTER].

| Zone No. | Display | City | Zone No. | Display | City |
|----------|---------|------------|----------|---------|-----------------|
| 0 | TNG | TONGA | 10 | MOW | MOSCOW |
| 1 | WLG | WELLINGTON | 11 | CAI | CAIRO |
| 2 | NOU | NOUMEA | 12 | PAR | PARIS |
| 3 | SYD | SYDNEY | 13 | LON | LONDON |
| 3.3 | ADL | ADELAIDE | 14 | AZO | AZORES ISLANDS |
| 4 | TYO | TOKYO | 15 | -2H | 2hrs behind LON |
| 5 | HKG | HONG KONG | 16 | RIO | RIO DE JANEIRO |
| 6 | BKK | BANGKOK | 17 | CCS | CARACAS |
| 6.3 | RGN | YANGON | 18 | NYC | NEW YORK |
| 7 | DAC | DHAKA | 19 | CHI | CHICAGO |
| 7.3 | DEL | NEW DELHI | 20 | DEN | DENVER |
| 8 | KHI | KARACHI | 21 | LAX | LOS ANGELES |
| 8.3 | KBL | KABUL | 22 | ANC | ANCHORAGE |
| 9 | DXB | DUBAI | 23 | HNL | HONOLULU |
| 9.3 | THR | TEHRAN | 24 | MID | MIDWAY |

3. Using World clock

- Press [CLOCK] once or twice to display World clock (without "*").
- Press [PREV] or [NEXT] to select the desired city.

4. Changing the cities between Home and World clocks

You can change the home city for a city in another time zone without adjusting the stored correct time.

- Press [CLOCK] once or twice to display World clock (without "*").
- Press [PREV] or [NEXT] and select the desired city to be set as the new home city.
- Press [SHIFT] [SET] to change the cities between Home and World clocks.
 - The previous home city is now set as the world city (without "*").
- Press [CLOCK] to check the home city.
 - The selected city in step 2 is set as the home city (with "*").
- Press [CLOCK] to recheck the world city, and press [PREV] or [NEXT] to select the new world city, if needed.

5. Setting daylight saving time (DST: summer time)

- Press [CLOCK] once or twice to display Home or World clock.
- Press [DST]. " #" is displayed. The time is set 1 hour ahead. To clear DST, press [DST] to clear "#". The time is set 1 hour behind.

Notes

- DST can be set independently in either Home or World clock.
- When DST is set for one world city, it is used for all cities displayed in World clock.

6. Setting alarms

The Organizer has 3 kinds of alarm:

- Daily alarm beeps every day at the alarm time (for 1 minute), when "☞" is turned on.
 - Hourly alarm beeps every hour when minutes reach "00", when "☞" is turned on.
 - Schedule alarm .. beeps at the time for all the schedule entries (for 1 minute), when "☞" is turned on. (Refer to "Schedule Mode".)
- Press any key to stop the alarm beeping.

Telephone Mode

Telephone mode is composed of two directions of storage memory. Pressing [TEL] toggles between "1" and "2" on the display.

Use these files for convenience, e.g. business and private files.

A telephone entry consists of name, address, E-mail address, web address (URL) and number fields.

Storing telephone entries

- Press [TEL] once or twice to display the Telephone mode screen.

| | |
|-------|--------|
| NAME? | 1 CAPS |
|-------|--------|
- Enter the name, e.g. SMITH [SPACE] ROBERT, and press [ENTER].
- Enter the address, e.g. 18 [SPACE] EAST [SPACE] ROAD, and press [ENTER].
- Enter the E-mail address, e.g. sharpsec.com_

| | |
|---------------|--------|
| sharpsec.com_ | 1 CAPS |
|---------------|--------|

 - The E-mail address is automatically entered in small letters.
- Enter the web address (URL), e.g. WWW.SHARPPUSA.COM, and press [ENTER].

Setting/Changing the daily alarm time

- Press [CLOCK] once or twice to display Home clock (with "*").
- Press [ALARM] to display the daily alarm screen. (The display differs between the 12-hour and 24-hour clock.)

| |
|---------|
| ALARM |
| A 12-00 |
- Press [SHIFT] [SET].
- Enter the time.
- Press [ENTER].
 - The daily alarm time is set.

Turning the alarms on and off

An alarm sounds only when the respective symbol (☞, ☞, or ☞) is turned on.

Display Home clock (press [CLOCK] once or twice) and press [ALARM] to display the daily alarm screen.

Each time you press [ALARM] while the daily alarm screen is displayed, the combination of symbols switches.

Note

- Alarms sound even when the Organizer is turned off.

Telephone Mode

- Enter the phone number, and then the fax number if needed, e.g. 012-3456-7890

| | |
|-------------|--------|
| *NUMBER? | 1 CAPS |
| 2-3456-7890 | |
| 3456-7891 | |

F [SPACE] [SPACE] [SPACE] 3456-7891, and press [ENTER].

- "STORED!" appears briefly, then the Telephone mode screen is displayed. The telephone entry is now stored.

| Field | Number of characters | Allowable characters |
|---|------------------------|--|
| The 1st line: Name, address, E-mail address and web address (URL) | 36 characters or under | Alphabetic letters, numbers, symbols, "+ - × ÷ .", space |
| The 2nd and the 3rd lines: Phone number | | Numbers, space, -, F (Fax), P (Pager) |

Notes

- The symbol "NAME", "ADDRESS", "E-mail", or "URL" is turned on while entering in each field.
- To skip entry of an address, E-mail address, web address (URL), or number, press [ENTER] when "ADDRESS?", "E-MAIL?", "URL?", or "NUMBER?" is displayed. However, entering a person's name cannot be skipped.

Schedule Mode

Schedule mode is used for storing schedule details (36 characters or under), date and time (year, month, day, hour, and minute).

In the 1st line the same characters are allowable as in Telephone mode.

Pressing [SCHEDULE/MEMO] toggles between Schedule and Memo mode.

1. Storing schedule entries

- Press [SCHEDULE/MEMO] once or twice to display the Schedule mode screen.

| | |
|-----------|------|
| SCHEDULE? | CAPS |
|-----------|------|
- Enter the details and press [ENTER].
- Enter the date and time.
 - The types of date and time are the same as the types set for the clock.
 - To enter a single-digit date or time, enter "0" and the digit (e.g. "02").

- Press [ENTER] to store in the memory.

Notes

- Schedules for the following dates can be stored: January 1901 to December 2098.
- If an attempt is made to store an entry without a date or time, or with an invalid date or time, "ERROR!" appears briefly. Enter the correct date and time and press [ENTER].

2. Alarm for Schedule mode

When the schedule alarm ("☞") is turned on, it is set for all the schedule entries. Beeping sounds for 1 minute when the time for a schedule entry is reached. Press any key to stop the alarm. The schedule alarm cannot be set for an individual entry.

Memo Mode

Notes or other pieces of information that are not appropriate for Telephone or Schedule mode can be entered for convenience.

In the 1st line the same characters are allowable as in Telephone mode. In the 2nd and the 3rd lines you can enter numbers, -, and space. (36 characters or under can be entered in each line.)

Storing memo entries

- Press [SCHEDULE/MEMO] once or twice to display the Memo mode screen.

| | |
|-------|------|
| MEMO? | CAPS |
|-------|------|

- Enter the memo item and numbers.

E.g. UNION BANK

| | |
|-------------|------|
| UNION BANK | CAPS |
| 01 | |
| 272-0011223 | |

- Press [ENTER] to store in the memory.

Notes for storing and recalling entries

- When the memory is full, "MEMORY FULL!" appears briefly, and the entry cannot be stored.
- When the symbol "▶" or "◀" is turned on, more information exists. Press [] or [] to switch the display.

Checking details of entries in Telephone mode

- To display each field on the 1st line, follow the symbol "▼" or "▲" and press [] or []. (The symbol above the 1st line shows each field.)

Recalling entries – Telephone, Schedule, Memo –

First press the desired mode key.

[NEXT]: Recalls entries in forward order

[PREV]: Recalls entries in reverse order

Sequential search

Press [NEXT] or [PREV] in each mode.

Direct search

- Enter the first characters (8 characters or under) of the person's name, schedule details, or memo item, and press [NEXT] or [PREV]. Then press [NEXT] or [PREV] to continue performing a direct search.

Sorting order

- Telephone and memo entries are stored by the first character of the person's name or memo item in the following order (case sensitive): space numbers (0 to 9) letters (A, a to Z, z) @#\$%&'()*~/:; _&<>ß!?!; ÷ ø μ ¢ + - × ÷. ÁÁÁ ÁÁÁ á á á á á á á ÉÉÉ Éé é é é í í í í í í í ÓÓÓ Óó ó ó ó ö ö ö ö ö ö ö ÜÜÜ Üü ü ü ü ŠŠ Š š š š š ŸŸ Ÿ Ÿ Ÿ
- Schedule entries are stored by date and time.

Note

- When there is no (further or relevant) entry to be recalled, "NOT FOUND!" appears briefly, and the display returns to the mode screen.

Editing or deleting entries – Telephone, Schedule, Memo –

Editing

- Recall the entry to be edited.
- Press [EDIT]. The cursor starts to flash.
 - In Telephone mode press [ENTER] several times to display each field (the address field and so on).
- Press [], [], [], or [] to move the cursor to the position to be edited.
- Enter, insert, or delete characters (refer to "Entering Characters").
 - To cancel editing, press [CCE].

- Press [ENTER] several times (until "STORED!" appears briefly) to finish editing and to store the entry.

Deleting

- Recall the entry to be deleted.
- Press [DEL].
 - "DELETE?" is displayed.
 - To cancel the deletion operation, press [CCE].
- Press [ENTER] to delete the entry.

Calculator Mode

The Organizer can calculate numbers of up to 10 digits. Press **[CALC/CONV]** several times to display the Calculator mode screen (Calculator → Currency conversion → Unit conversion → Calculator...).

Calculation

Be sure to press **[CCE]**, **[CCE]**, and **[CM]** to clear the display and memory before performing a calculation.

Note

- When \ominus , \oplus , \otimes , or \oslash is pressed, the respective symbol, +, -, ×, or ÷ is displayed. (In the examples in this manual, these symbols are not described.)

If an error occurs

If the calculation result or the integer section in the numerical value in the memory exceeds 10 digits or if a number is divided by zero (0), an error occurs ("ERR" is displayed).

Calculation examples

| Example | Operation | Display |
|--|--|-------------|
| (-24)÷2=4=-5.5 | [CCE] \ominus 24 \div 2 \ominus 4 \ominus | -5.5 |
| 34+57=91 | 34 \oplus 57 \ominus | 91 |
| 45+57=102 | 45 \oplus 57 \ominus | 102 |
| | (The addend becomes a constant.) | |
| 68×25=1700 | 68 \otimes 25 \ominus | 1700 |
| 68×40=2720 | 40 \ominus | 2720 |
| | (The multiplicand becomes a constant.) | |
| 200×10%=20 | 200 \otimes 10 $\%$ | 20 |
| 9÷36=25% | 9 \div 36 $\%$ | 25 |
| 200+(200×10%)=220 | 200 \oplus 10 $\%$ | 220 |
| 500-(500×20%)=400 | 500 \ominus 20 $\%$ | 400 |
| 4 ⁵ =(4 ⁵) ² =4096 | 4 \otimes 5 \otimes 2 \ominus | 4096 |
| 1/8=0.125 | 8 \oslash \ominus | 0.125 |
| 25×5=125 | [CM] 25 \otimes 5 [M+] | 125 |
| -) 84÷3=28 | 84 \div 3 [M-] | 28 |
| +) 68+17=85 | 68 \oplus 17 [M+] | 85 |
| | [RM] | 182 |
| √25=5 | 25 $\sqrt{\quad}$ \ominus | 5 |
| 1234567890×145=179012344050 | 1234567890 \otimes 145 \ominus | ERR |
| | [CCE] | 17.90123440 |
| | [CCE] | 17.90123440 |
| | (17.90123440×10 ¹⁰)=1790123440000 | |

Currency/Unit Conversion Mode

1. Setting a currency rate

- Press **[CALC/CONV]** several times to display the currency conversion mode screen (refer to "Calculator mode").
Example: 1 CAD (Canada dollars) = 0.66 USD (US dollars)
- Press **[NEXT]** **[NEXT]** **[NEXT]** to change the display and press **[SHIFT]** **[SET]**. The initial character of "CAD" starts to flash.
 - You can change each currency name by entering characters (up to 4 in each) and using **[▶]**, if needed.
- Press **[ENTER]**. "0" starts to flash.
- Enter the rate (up to 10 digits).
0.66
- Press **[ENTER]** to store in the memory.

2. Converting currency/unit

You need to set the conversion rate before making the currency conversion.

Example: Convert 500 CAD into USD using the rate that you have set.

- Display the screen: "CAD → USD".
- Enter the value to be converted.
500
- Press **[▶]** to convert CAD into USD.
 - To convert in reverse order (e.g. 200 USD into CAD), enter **200** and press **[◀]**.
 - You can use the unit conversion in the same manner. You cannot change the units or the rates for units.
 - The conversion result may have a slight error as a result of rounding off the number (e.g. up to 2 decimal places for currency conversions). Use the conversion result for reference.

6. Press [ENTER] and display the Game mode screen.

- When you have no more chips to bet, the game is over.
- To quit the game, press **[CCE]** or any mode key. Your chips are stored for the next time.
- To return your chips to 30, press **[DEL]** and **[ENTER]** on the Game mode screen.

ALPHA ATTACK

Type in characters (A to Z, 0 to 9) displayed on the 1st line to clear them. The game is divided into 20 levels in speed.

- Press **[GAME]** to display the following Game mode screen.
- Enter the level number (2 digits from 01 to 20).
 - 01: slow, 20: fast
- Press **[ENTER]** to start a game.
- Press the same key as the first character at the left end of the 1st line. (In this case, press keys in the order: E → Y → 3 → K → W.)
 - Pressing the correct key in the correct order deletes the character.
 - When 12 characters are displayed in each level, the game continues in the faster level (up to 20).
 - When no more characters can be displayed, the game is over. The Game mode screen with the level when the game is over is displayed.

Game Mode

Press **[GAME]** to play the game "BLACKJACK".

Each time you press **[GAME]**, the display switches between "ALPHA ATTACK" and "BLACKJACK".

BLACKJACK (Twenty-one)

Make your "hand" (the total of the numbers on the cards) close to 21, without going over 21.

- Press **[GAME]** to display the following Game mode screen.
- Press **[ENTER]** to start a game. The left 2 cards are dealt for you. (One is facing up and one is facing down.)
- Agree the left-displayed maximum bet (up to 10) or enter the fewer bet. Pressing **[▶]** also can bet to the maximum.
- Press **[SPACE]** to see your hand.
Your hand: J 2 8, 10, 20
The dealer's hand: 4
Your bet: 10, 20
Your chips: 20
• "J", "Q", and "K" are counted as 10.
• "A" can be counted as 1 or 11.
• When first 2 cards are "A" and a face card ("J", "Q", or "K"), your hand is "BLACKJACK".
- Press **[ENTER]** to stop being dealt and hold your hand. The dealer's hand and the results are displayed.
Your total: J 2 8, 20, 20
The dealer's total: 3 2 K 4, 19, 20
Your bet: 20, 20
Your chips: 20
• When you win, your total flashes and your bet is doubled.
• When you win with "BLACKJACK", your bet is tripled.

Word Translation Function

This device offers an English-Spanish bi-directional word translation function.

- Press **[E↔S]** to enter the English → Spanish translation mode.

ENG → SPA

- Press **[E↔S]** twice (or **[E↔S]** then **[◀]**) to enter Spanish → English mode.
- Enter the desired source word and press **[ENTER]**.
"English..." or "Spanish..." is displayed while conducting search. The matching English or Spanish word will then be displayed.
 - When the symbol "▶" is turned on, more letters exist. To view remaining letters of long words that cannot be accommodated on the screen, use **[▶]** to scroll right.

- If there is no matching word, "NOT FOUND!" is displayed. The word next in alphabetical order will then be displayed.
- Press **[NEXT]** or **[PREV]** to scroll through word list, or edit entry using the keyboard, and press **[ENTER]** for another search.
- Press **[◀]** or **[▶]** to return to the source word.

Caution

- Spanish words stored in this device are those of Spain.
- Only the masculine form of the noun will be displayed for nouns with both masculine and feminine forms.
- Sometimes, two identical words will appear in the word list.
- Enter European characters and spaces correctly. Otherwise, the unit may not be able to complete the search.

Memory Storage

1. Checking memory storage

- Press **[TEL]** or **[SCHEDULE/MEMO]** to display "NAME?", "SCHEDULE?", or "MEMO?".
 - Press **[SHIFT]** **[MCK]**.
The number of remaining bytes is displayed briefly.
CAPACITY 6254
- Notes**
- The Organizer can store up to 34070 bytes in the memory (excluding the Calculator mode memory).
 - One byte is required per character (in the 1st line) for telephone, schedule, and memo entries.
 - One byte is required for 2 digits in the number part (in the 2nd and the 3rd lines) of telephone and memo entries. (When there is an odd number of digits in a number entry, the last digit occupies 1 byte.)

- In addition to the memory size for characters (in the 1st line) and numbers (in the 2nd and the 3rd lines), each entry requires the following memory size:
Telephone entry 6 bytes
Schedule entry 8 bytes (including date and time)
Memo entry 3 bytes

2. Deleting all the memory contents

Perform steps 2 and 3 as described in the section, "Using the Organizer for the First Time".

- To cancel the deletion operation, press **[CCE]** instead of **[SHIFT]** **[ENTER]** in step 3.

Secret Function

1. Registering a password and storing secret entries

Up to 6 characters can be registered as the password.

- One password is valid for Telephone, Schedule, and Memo modes.

If the password is forgotten, you cannot delete the password only. You have to delete all the memory contents. (Perform steps 2 and 3 as described in the section, "Using the Organizer for the First Time".) As a safeguard, make a written record of the password.

Registering a password

- Press **[TEL]** or **[SCHEDULE/MEMO]** to display "NAME?", "SCHEDULE?", or "MEMO?".
- Press **[SECRET]**.
PASSWORD?
- Enter the password (case sensitive), e.g. **ABC**.
- Press **[SECRET]** to register it.
 - The display returns to the screen in step 1 with the symbol "●●●".
 - If "ERROR!" appears briefly, a password has already been registered. Enter the correct password or delete the password and all the memory contents.
- Press **[SECRET]** **[SECRET]** to turn Secret function on. "●●●" disappears.

Storing secret entries

- Enter characters in Telephone, Schedule, or Memo mode when "●●●" is not displayed (Secret function is on).
 - When "●●●" is displayed, press **[SECRET]** **[SECRET]** to turn Secret function on.
- Press **[SECRET]** before pressing **[ENTER]** to store. "●●●" appears.
- Press **[ENTER]** to store a secret entry in the memory.
 - "STORED!" appears briefly, and the display returns to the mode screen without "●●●" (Secret function is on).
 - You cannot display the secret entry until you turn Secret function off.

2. Turning Secret function on and off

When Secret function is on, "●●●" is not displayed.

- You can display, edit, or delete entries except secret entries.
- You can enter new entries as secret or non-secret.

When Secret function is off, "●●●" is displayed.

- You can display, edit, or delete secret entries only. (You cannot display non-secret entries.)
- You cannot enter a new entry.

Turning Secret function off

- Press **[TEL]** or **[SCHEDULE/MEMO]** and check that "●●●" is not displayed.

Caring for Your Organizer

- Do not carry the Organizer in the back pocket of slacks or trousers.
- Do not drop the Organizer or apply excessive force to it.
- Do not subject the Organizer to extreme temperatures.

- Since this product is not waterproof, do not use it or store it where fluids can splash onto it.
- Clean only with a soft, dry cloth.
- Use only a SHARP approved service facility.

Replacing Battery

Battery used

| Type | Model | Quantity |
|-----------------|--------|----------|
| Lithium battery | CR2032 | 1 |

- Improper replacement of the battery may change or lose the memory contents.*
- Be sure to write down any important information stored in the memory before replacing the battery.*
- Make sure the power is turned off before replacing the battery.*
- Do not press **[OFF]** until the battery replacement procedure is completed.*

1. Precautions

Since improper use of the battery may cause leakage or explosion, strictly observe the following instructions.

- Insert the battery with the positive side (+) correctly facing up.
- Never throw the battery into a fire because it might explode.
- Keep the battery out of the reach of children.

Because the battery in the Organizer was installed at the factory, it may become depleted before the specified expiration time is reached.

2. Battery replacement

If the display becomes dim and difficult to read, immediately replace the battery with a new one. Continued use of the Organizer with an exhausted battery can alter or clear the memory contents.

- Do not use a metallic object to pry out the battery. The Organizer will be subjected to an electrical shock and all the memory contents will be cleared.*
- Complete the replacement of the battery within 1 minute, otherwise all the memory contents may be cleared.*

- Press **[OFF]** to turn the power off.
- Loosen the screw and remove the battery holder cover on the back of the unit.
- Remove the exhausted battery by prying it out from the holder with the corner of the holder cover. (Fig. 1)
- Install a new battery with the positive side (+) facing up into the holder.
- Replace the holder cover and secure it with the screw.
- Press **[ON]** to turn the power on.
 - If nothing appears on the display, press the RESET switch and press **[CCE]**.
 - Do not press **[SHIFT]** **[ENTER]**. Pressing **[SHIFT]** **[ENTER]** clears all the memory contents.
- Set the clock.



Fig. 1

When removing the battery, use the side opposite the curved corner of the battery holder cover.

Specifications

- Model:** EL-6900
- Product name:** Electronic Organizer
- Display:** 3 lines of 12 digits
- Memory capacity:** 34070 bytes
- Clock mode:**
Accuracy: ± 60 seconds/month at 25°C/77°F
Display: Year, month, day, day of the week, hour, minute, second, AM/PM
Clock function: 12-hour/24-hour format (switchable), 3 kinds of date type (switchable), world clock function, daylight saving time (summer time) display, daily alarm, hourly alarm
- Telephone mode:** Entering and recalling of telephone entry (name, address, E-mail address, phone number, and web address (URL))
- Schedule mode:** Entering and recalling of schedule entry (details, year, month, day, hour, and minute), schedule alarm
- Memo mode:** Entering and recalling of memo entry
- Calculator mode:** 10 digits (with calculation status symbols), arithmetical calculations, percentage, square root, memory calculation, etc.
- Currency/unit conversion mode:** 5 kinds of currency conversion (editable) and 9 kinds of unit conversion

LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the service.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized service. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

| | |
|--|--|
| Your Product: | Electronic Organizer |
| Warranty Period for this Product: | One (1) year parts and labor from date of purchase. |
| Additional Items Excluded from Warranty Coverage: | Any consumable items such as paper, maintenance cartridge, ink cartridges supplied with the Product or to any equipment or any hardware, software, firmware, fluorescent lamp, power cords, covers, rubber parts, or peripherals other than the Product. |
| Where to Obtain Service: | At a Sharp Authorized Service Center located in the United States. To find out the location of the nearest Sharp Authorized Service Center, call Sharp toll free at 1-800-BE-SHARP. |
| What to do to Obtain Service: | Ship (prepaid) or carry in your Product to a Sharp Authorized Service Center. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully. |

PRODUCT SUPPORT

If you have read the ORGANIZER operation manual, but you still require product support, you can:

Call a Sharp Customer Assistance Center
630-378-3590
(7am to 7pm CST M-F)

Visit our Web Site
<http://www.sharppusa.com>

Send an E-mail
pdasupport@sharpsec.com

Write to our Customer Assistance Center
Sharp Electronics Corp.
Customer Assistance Center
Att: WIZARD HELP
1300 Naperville Drive
Romeoville, IL 60446

Online Shopping (Purchase additional peripherals, etc.)
URL: www.sharpplace.com



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>