 


**SHARP**

MODEL :

**KZ-2S01W**

**TOASTER  
INSTRUCTION MANUAL**

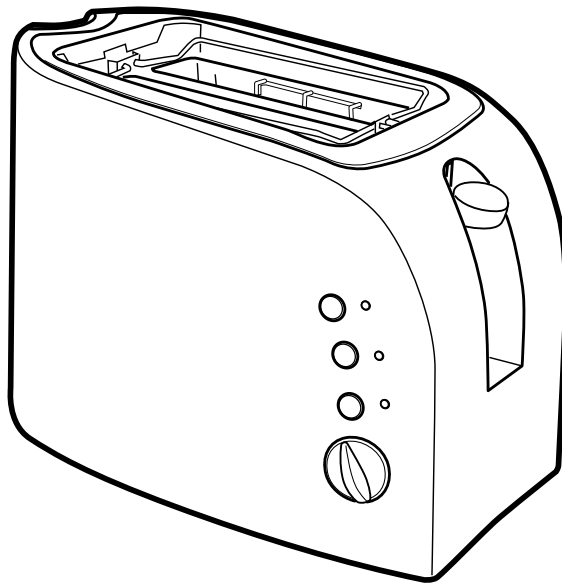

Please read these instruction carefully before operating the appliance.

 
# IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:

Carefully read all instructions before operating the appliance

1. Make sure that your mains voltage corresponds to the voltage stated on the rating label of the toaster.
2. Do not touch hot surface. Use handles or knobs only.
3. To protect against electrical shock, do not immerse the toaster or power cord and plug, in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.  
WARNING: Only allow children to use the appliance without supervision when adequate instructions have been given so that the child is able to use the appliance in a safe way and understands the hazards of improper use.
5. Unplug the unit before cleaning and when not in use.
6. Do not operate any appliance with a damaged cord or plug, or if the unit appears to be faulty. If its main cord is damaged, it must be replaced by a qualified person.
7. To prevent damage, do not let the cord hang over edge of table or counter, or touch hot surface.
8. Do not place on or near a heat source such as gas or electric cook-top, or oven.
9. Do not use the appliance for other than its intended use.
10. Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.  
WARNING: Extra care should be taken when removing toasted items less than 85mm.
11. Bread may burn, therefore this toaster must not be used near or below curtains and other combustible materials, and must be supervised at all times.
12. Do not use other accessories or attachments on this appliance.
13. Don't attempt to dislodge food when toaster is in operation, always unplug the toaster and wait until it cools before removing the food.
14. Take care when removing food from the toaster, the surfaces may still be hot and could cause a burn.
15. This appliance has been incorporated with a grounded plug. Please ensure the power outlet in your house is correctly earthed.
16. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
17. Keep the appliance and its cord out of reach of children.
18. Don't use the appliance outdoors.
19. This appliance is intended for household use.

## KNOW YOUR TOASTER

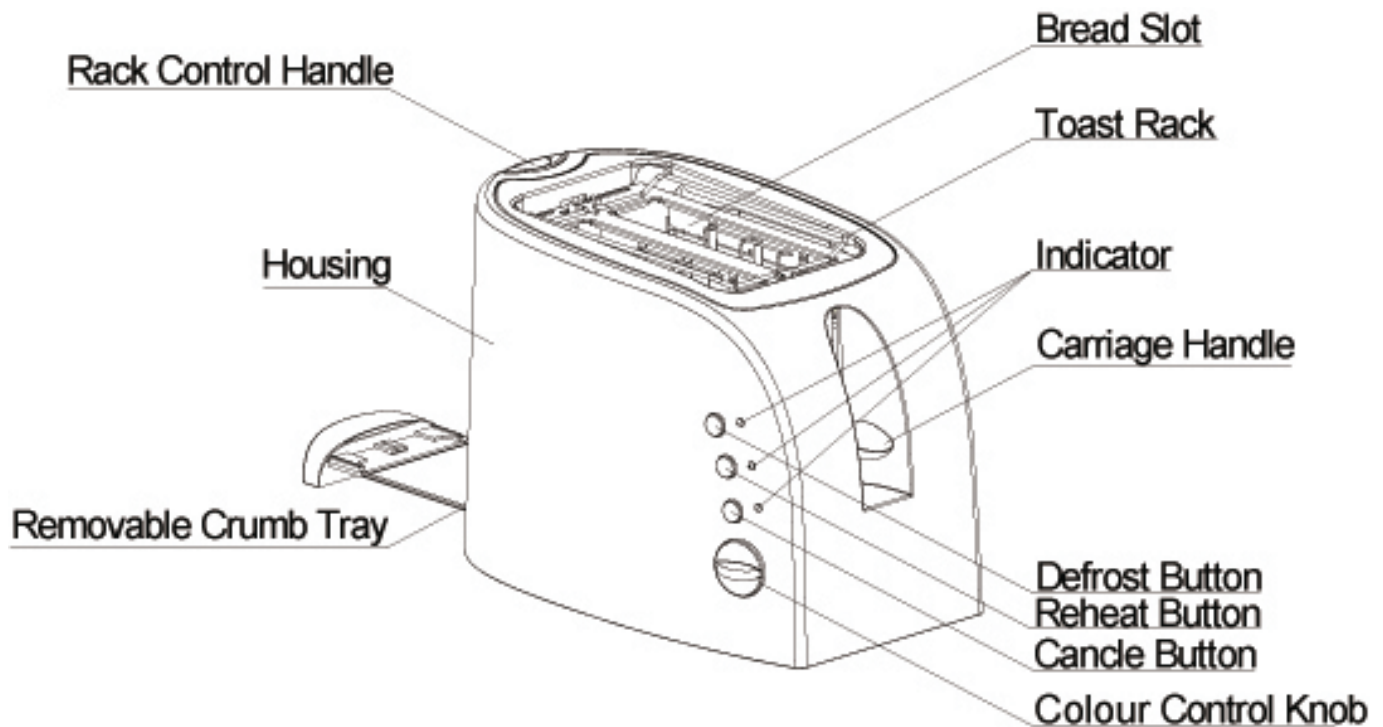

## OPERATION

When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct ODOUR on initial use. This is normal and not detrimental to the performance of the toaster.

## USING YOUR TOASTER

1. Remove all protective wrappings prior to toasting.
2. Put bread slice into the bread slot, which can be inserted two slices at most every time. Ensure that the items for toasting are not too thick or too large for the toasting slots.

If only toasting one side or irregular bread, the bread must be put on the toast rack which only can toast one piece every time. When toasting on the toast rack, press down rack control handle to make it uplift, then put the bread on the toast rack. Raise the rack control handle to reset the rack when not in use.

**NOTE: a). Make sure the crumb tray is completely positioned in place before using.**

**b). Before toasting on the toast rack, let the appliance cool down.**

3. Insert the power cord into the power outlet.
4. Set the desired browning setting. There is 5 settings, the lowest "1" is for light

and the highest “5” is for dark. The bread slice can be toasted to golden color at the middle position.

**NOTE: a). Toasting colour for one slice is darker than that for 2 slices at the same level.**

**b). If toasting continuously, toasting colour will tend to be darker with continuous use on the same setting.**

5. Press carriage handle down until it is positioned in place, the indicator at the side of **Cancel button** will be illuminated, and the toasting process will commence.

**NOTE: The carriage handle can only be latched when the appliance is connected to the power supply.**

6. Once the bread has been toasted to the preset colour, the carriage handle will automatically pop up. Also you can uplift the carriage handle a little to remove the bread readily (see fig.1).

 


Fig.1

**NOTE: During toasting, you may also observe the toasting colour. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, but never handle lift carriage to cancel toasting.**

7. Reheated toasted bread, press the **Reheat button** and the lamp beside it will illuminate. In this mode toasting time is fixed, and the carriage handle will automatically spring up at the end of the reheating process.

8. Toasting frozen bread, set colour control knob to your desired colour, press carriage handle down, press Defrost button and the lamp beside it will be illuminated, in this mode it will be toasted to your desired colour.

## CAUTION

1. If toaster starts to smoke, Press **Cancel button** to stop toasting immediately.
2. Avoid toasting the food with extremely runny ingredients such as butter.
3. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
4. The bread slot is only applicable for toasting regular bread slice, like the irregular bread or round bread, you can toast it on the toast rack.
5. In order to achieve uniform colour we recommend that you should wait minimum 30s between each toasting so that colour control can reset automatically.

## CLEANING AND MAINTENANCE

1. Before cleaning, unplug from the appliance and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use, the power cord can be stored at the bottom of toaster.
5. When not use or storage, the power cord may be wound under the bottom of toaster.

## ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!  
Please remember to respect the local regulations:  
hand in the non-working electrical equipments to an  
appropriate waste disposal centre.

# SHARP

## REPLACEMENT WARRANTY

### *Consumer Electronic Products*

#### **Congratulations on Your Purchase!**

This Sharp product is warranted against faults in material and manufacture for the period as stated in the table below.

Should you need to make a claim against this warranty please take your product back to the place of purchase.

This warranty does not extend to defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, lack of maintenance, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim. This warranty is in addition to and in no way limits, varies or excludes any implied rights and remedies under any relevant legislation in the country of sale.

Australian customers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The criteria of a major failure is defined in the Australian Consumer Law. Should you require any assistance with a major failure please contact Sharp Customer Care.

#### **WARRANTY PERIOD**

Microwave Oven	12 months
Small Home Appliances	12 months

**SHARP**  
SHARP CORPORATION OF  
AUSTRALIA PTY. LIMITED  
A/BV 40 003 039 405  
1 Huntingwood Drive  
Huntingwood NSW 2148

SHARP CORPORATION OF  
NEW ZEALAND LIMITED  
59 Hugo Johnston Drive  
Penrose, Auckland

SPform 040 (DECEMBER 2012)

**IMPORTANT NOTICE: This warranty applies only to products sold in Australia & New Zealand**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>