

THE  
SHARPER  
IMAGE

#### ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for the life of the original purchaser from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

SI PRODUCTS Consumer Relations  
Service Center Dept. 168  
3000 Pontiac Trail  
Commerce Township, MI 48390  
No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resold products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit: [www.siproducts.com](http://www.siproducts.com)

For service or repair - do not return this unit to the retailer.

Contact SI PRODUCTS Consumer Relations at 1-888-856-6781.

©The Sharper Image. All rights reserved. THE SHARPER IMAGE name and logo are registered trademarks.

THE  
SHARPER  
IMAGE

# Adjustable Temperature Control Wine Chiller



**Instruction Manual and  
Warranty Information**

KP-W400

**1** year  
limited warranty



### Enjoy your wine at the perfect temperature every time.

Thank you for purchasing The Sharper Image® Adjustable Temperature Control Wine Chiller. This product, along with the entire The Sharper Image collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment. Now you can spend less time waiting for wine to chill and more time entertaining and enjoying your favorite bottle with family and friends. .

## IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

### READ ALL INSTRUCTIONS BEFORE USING

#### DANGER - TO REDUCE THE RISK OF ELECTRIC SHOCK:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry - DO NOT operate in a wet or moist condition.

#### WARNING - TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE OR INJURY TO PERSONS:


- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.

#### Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.


- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by The Sharper Image; specifically any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electrocution or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.
- DO NOT use outdoors.

### SAVE THESE INSTRUCTIONS

 Fig. 1

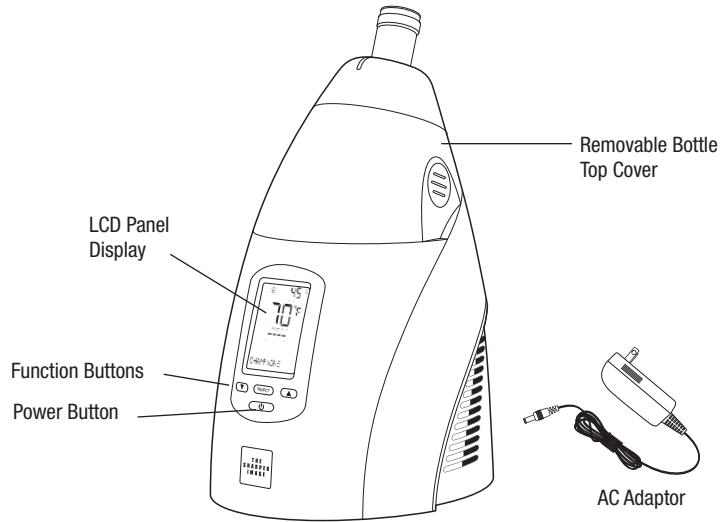

**LCD layout**

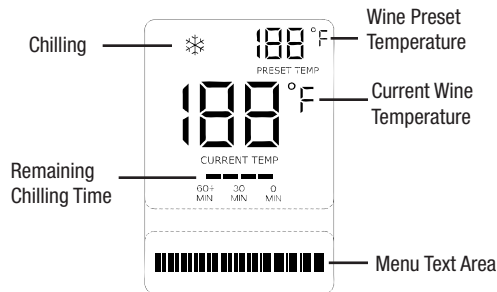 

## Adjustable Temperature Control Wine Chiller – Operation Instruction

### 1) Preparation for First Time Use

Unpack and locate the following items:

- Wine bottle chiller unit
- AC / DC power supply adaptor (Fig.1)

### 2) Setting °F and °C Temperature


 
 
- Plug the DC power jack of the AC/DC power adaptor to the DC socket of the wine chiller; then connect the AC plug of the power supply adaptor to a main outlet.
- Press both  power button and SELECT button simultaneously and hold for two seconds; the LCD will display the default in Fahrenheit 'F' (flashing) and 'C' (solid). Use the  left symbol and  right symbol buttons to change between the 'F' and 'C' (Fig. 2).
- Press SELECT button to accept the flashing option and set for 'F' or 'C'. The wine chiller will restart automatically.



Fig. 2

### 3) Using the Wine Chiller

- Plug the DC power jack of the AC/DC power adaptor to the DC socket of the wine chiller; then connect the AC plug of the power supply adaptor into a main outlet (Fig1).
- Place a bottle of wine into the wine chiller and cover with the top cover (Fig.3).



Fig. 3

- Press **⏻** power button once to switch the chiller on. When power is on, the LCD displays 'WELCOME' in blue back light for 3 seconds (Fig. 4).

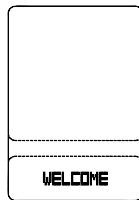 


Fig. 4

- Next, the screen displays 'LAST – TYPE – LIB' and 'LAST' will now start flashing (Fig.5). The screen menu gives you three options for finding and selecting your wine and proper preset temperature.
  - 1) The 'LAST' selection recalls the last wine setting previously used.
  - 2) 'TYPE' allows you to select by grape type; red, white or champagne.
  - 3) 'LIB' selection is the wine library for selecting wine by country first and the grape type.

**Note:** To make a choice select an option at any time in the menu, push 'SELECT' button when that option is flashing on the screen.



Fig. 5

### 3.1) Selecting Last Temperature Setting

To repeat the same chilling temperature as the previous use, simply select 'LAST' when it is flashing and press SELECT button and the chiller will recall the previous setting and start chilling the wine immediately.

### 3.2) Selecting by Type

- To select by the wine type press **◀** arrows **▶** until 'TYPE' option is flashing on the screen and press SELECT. Screen will display 'RED- WHT- CHAMP' (Fig.5). 'RED' will start flashing first. Press **▶** right symbol button or **◀** left symbol button to move between options. Press SELECT to accept the option you want when it is flashing. When the flashing selection is accepted the ice icon will flash and unit will start to chill bottle. (refer to Fig.6 showing Champagne as example)



Fig. 6



Fig. 7

**NOTE:** Each type of wine has a general preset temperature based on wine type, 45°F / 7°C for Champagne, 48°F / 9°C for white wine and 64°F / 18°C for red wine.

### 3.3) Selecting Wine by Country

- Use **◀** arrows **▶** to scroll between options on opening screen (Fig.5) until 'LIBRARY' is flashing. Press 'SELECT' button. The screen will display 'COUNTRY-TYPE' (Fig.8) The 'COUNTRY' icon will flash. Press **▶** right symbol button once and the 'TYPE' will start flashing. Press SELECT button to accept the flashing option you want.



Fig. 8

- To select wine by 'COUNTRY', press SELECT when the option is flashing and the screen will display countries in alphabetical order.
- Press ◀ or ▶ left/right symbol button to scroll through the 'COUNTRY' menu list. Press SELECT button to accept the appropriate country name as it appears.

#### COUNTRY LIST

ARGENTINA  
 AUSTRALIA  
 CHILE  
 FRANCE  
 GERMANY  
 ITALY  
 NEW ZEALAND  
 SOUTH AFRICA  
 SPAIN  
 USA

Once the country is selected, the screen display will show red or white for selection. Once red or white has been selected the wine names will be displayed on the screen. Wines and preset temperatures are stored in the wine chiller memory for each country.

For example: Select 'ITALY'; then 'RED'; then "AMARONE" and its preset temperature will display on the LCD by flashing (Fig.9).



Fig. 9

- Press the ◀ or ▶ left / right symbol button once to select the next or previous wine in the library.
- Press and hold the ◀ or ▶ left/right symbol button to move forward or backward through selections. At the end of the list, there is an "EXIT" option so that you can select it to return to the wine library menu or press the arrow button to return to the top of the wine list of the same country.
- At the end of every list, there is an "EXIT" option so that you can select it to return to the wine library menu or press the arrow button to return to the top of the wine list of the same country.

- 4) When the correct wine is found in the menu, press SELECT to accept that selection. The wine name and pre-set temperature will stop flashing. Then, the wine chiller will begin to operate.

**NOTE:** User can amend the preset temperature in mid-process before the chiller begins to operate with the ◀ or ▶ left and right symbol button. While the wine name and preset temperature are still flashing, press the ▶ right arrow button once, to increase the preset temperature by one degree, and press the ◀ left symbol button once to reduce the preset temperature by one degree. Then press 'SELECT'.

#### 5) Start COOLING/WARMING

The cooling fan runs at its highest speed with ice icon flashing. The wine chiller will show the wine temperature after 4 minutes. The estimate remaining chilling time is represented by the status bar underneath the current temperature (Fig.10).

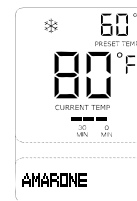 


Fig. 10

- Four bars, “60+ MIN”, “30 MIN” and “0 MIN” icons are on if the estimate remaining chilling time is 60 minutes.
- Three bars, “30 MIN” and “0 MIN” icons are on if the estimate remaining chilling time is less than one hour and more than 45 minutes.
- Two bars, “30 MIN” and “0 MIN” icons are on if the estimate remaining chilling time is less than 30 minutes and more than 15 minutes.
- Single bar and “0 MIN” icons are on if the estimate remaining chilling time is less than 15 minutes.

## 6) Ready to serve

When the actual temperature reaches the pre-set temperature, “READY” will display on the lower LCD screen (Fig.11 and the ice icon will stop flashing. The wine chiller will then sound 3 beeps.

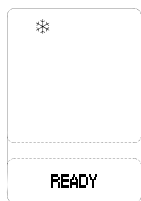 



Fig. 11

The temperature will be maintained at pre-set temperature automatically. The cooling fan will switch to a lower speed automatically to minimize the fan noise.

- Press SELECT button once at any time after the unit is powered on and the wine chiller will return to the wine library menu.
- To turn chiller off, press  power button and hold for 1 second. Chiller will beep once and turn off automatically.

## MAINTENANCE

### To Store

You may leave the unit on display or you can store it in its box in a cool, dry place.

### To Clean

Use only a soft dry cloth to clean the enclosure of the unit. NEVER use liquids or abrasive cleaner to clean.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>