

Sunbeam

Café Moka

6 cup caffè maker in brushed stainless steel

Instruction Booklet
MM8400

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	2
Features of your Café Moka	4
Using your Café Moka	6
Moka coffee guide	9
Troubleshooting Guide	10
Cleaning	11

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

- 上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید که احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น

เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığınızdan emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM CAFÉ MOKA.

- Always operate the appliance on a flat, level surface.
- Do not operate without water in the base.
- Boiling water will scald. Do not leave a boiling or hot caffè maker near or where children may touch it.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
- Do not allow the power cord to come into contact with the hot/metal surfaces of the appliance.
- Your Café Moka must only be used with the power base supplied.
- Do not move the caffè maker while switched on.
- This appliance has been manufactured to make coffee. Other than ground coffee never use any other extracts as these may block the filtering holes.
- Keep hands away from hot/metal surfaces.
- Only operate the appliance when connected to a power outlet, never use it directly on the stove top.
- Ensure that the pressure release valve in the base of the caffè maker is not covered by water. The maximum amount of water that can be placed in the caffè maker base is 350mLs.
- Switch off and unplug the appliance at power outlet before cleaning.

Sunbeam's Safety Precautions

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Features of your Sunbeam Café Moka

Upper stainless steel caffè chamber

Holds the freshly brewed moka coffee.

Stainless steel base


The base can be filled with enough water to make 6 cups of moka coffee.


Stainless steel concealed element

The element is concealed in the base of the caffè maker for longer element life. The smooth stainless floor reduces scale build up and allows for easy cleaning.

360 degree cordless power base

Designed to allow you to place the caffè maker on the base in any direction.

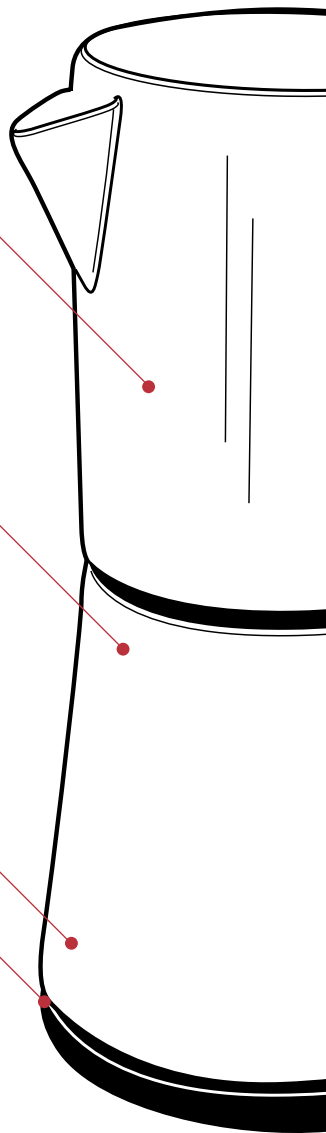

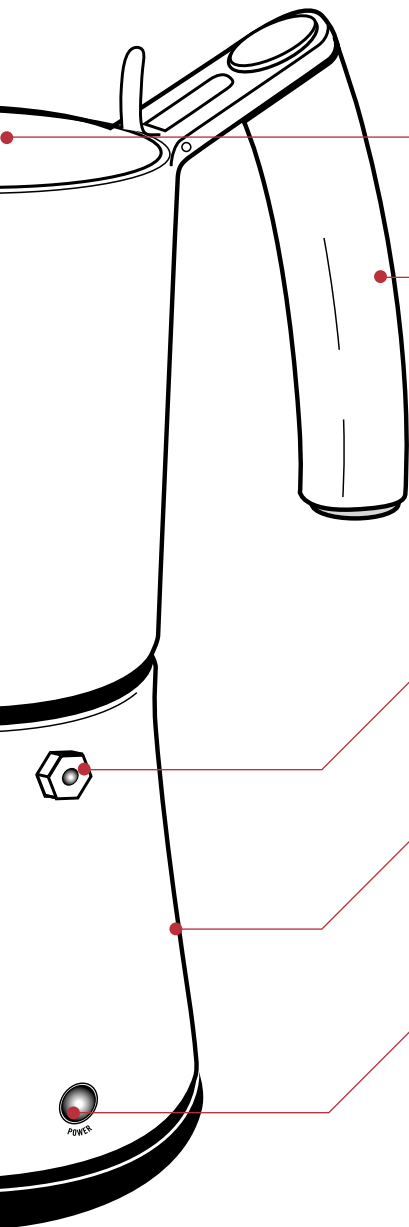

Hinged lid

Contoured handle

Designed for easy handling and pouring.

Pressure release valve

Ensure that the pressure release valve is at no time covered by water.

Stylish brushed stainless steel design

Long life stainless steel to suit any kitchen décor.

Neon power switch with auto cut out

Lights up to indicate that the caffè maker is on and brewing. Switches the caffè maker off automatically.

Using your Sunbeam Café Moka

1. Place your caffè maker on a flat, level surface.
2. Unscrew the upper caffè chamber from the base, by holding the base with one hand and turning the upper caffè chamber anticlockwise with the other, see figure 1.

Figure 1



Pressure release valve
(Do not fill water
above this level).



Figure 2

3. Remove the stainless steel filter, and fill the base with fresh, cold water, see figure 2. Clear instructions indicating the correct quantity of water required for a standard coffee are shown in the Moka Coffee Guide on page 9.

Note: Do not fill water above level of pressure release valve.

Note: Do not operate the Sunbeam Café Moka without water in the base and ensure the water is cold. Do not use hot water for faster operation.

4. Insert the stainless steel filter into the base, see figure 3.



Figure 3

Using your Sunbeam Café Moka (continued)

- Using the measuring spoon supplied, fill the stainless steel filter with a medium-fine espresso grind, see figure 4. Level off and with the other end of the measuring spoon, use the tamper to push (pack) down the coffee grinds, see figure 5. Wipe around the edge of the filter to remove any coffee grinds, see figure 6.

Figure 4



Figure 5


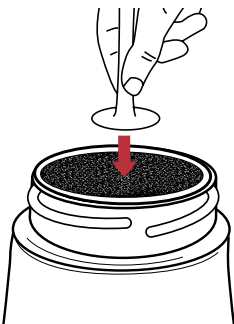


Figure 6



- Secure the upper caffè chamber to the base, by holding the base with one hand and screwing/turning the upper caffè chamber clockwise with the other, see figure 7.

Figure 7

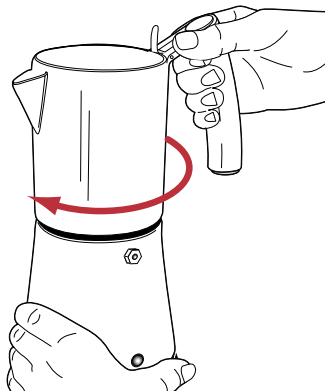

- Place the caffè maker onto the power base and connect the plug into a 230/240 volt AC power outlet. Turn the power on.


Important: Only operate the appliance when connected to a power outlet, never use it

Using your Sunbeam Café Moka (continued)

directly on the stove top.

8. Press the power button. The neon light will illuminate to indicate the caffè maker is on and brewing, see figure 8.


Figure 8

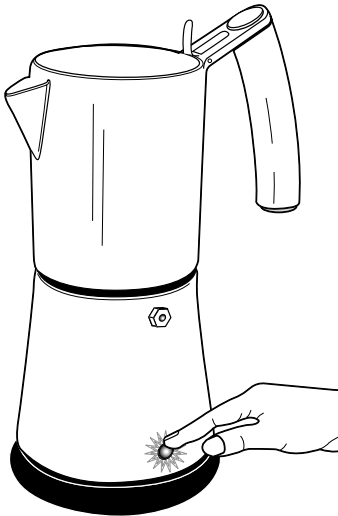

9. The coffee will start to be released after approximately 2 minutes. The caffè maker will switch off automatically once all the water has passed through the coffee grinds and into the upper caffè chamber.

10. Lift the caffè maker from the power base and pour the moka coffee into cups.
11. When making consecutive cups of coffee, allow the base of the caffè maker cool down. Once cooled unscrew the upper caffè chamber from the base, by holding the base with one hand and turning the upper caffè chamber anticlockwise with the other, see figure 1.
12. Lift the filter with the used coffee grinds from the base.
13. To remove the used coffee grinds from the filter simply turn the filter upside down over a bin and spoon out the used coffee grinds, see figure 9.

Figure 9

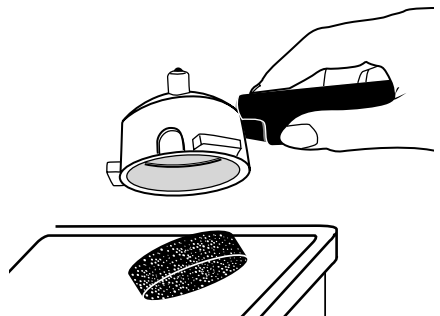

Moka Coffee guide

For best results regardless of the amount or strength of coffee being made, the stainless steel filter needs to be completely filled with ground coffee. Using the measuring spoon supplied, this is approximately 6 level scoops of ground coffee.

For a softer tasting coffee we recommend that using the measuring spoon supplied that you fill the stainless steel filter with only 4 level scoops of ground coffee and to produce 6 cups of coffee fill the base with 250mLs of water.

Number of coffee's made (35mLs)	Water quantity
1	80mLs
2	110mLs
3	145mLs
4	180mLs
5	215mLs
6	250mLs

Troubleshooting guide

Problem	Possible cause	What to do
No coffee is released into the upper caffè chamber.	No water in the base.	Fill the base with water
	Upper caffè chamber filter may be blocked.	Clean using warm soapy water and a fine bristled brush and if necessary clean using a pin.
	The filter is blocked as the coffee grounds are too fine or tamped down too hard.	Ensure you are using a medium-fine grind of coffee and do not compact/tamp the coffee grinds so firmly.
	The filter is blocked.	Empty out the filter and clean with a bristled brush under water to remove any coffee granules blocking the filter holes. If necessary clean using a pin.
The coffee takes a long time to flow into the upper caffè chamber.	Coffee grounds are too fine or tamped down too hard.	Ensure you are using a medium-fine grind of coffee and do not compact/tamp the coffee grinds so firmly.
	The filter is blocked.	Empty out the filter and clean with a bristled brush under water to remove any coffee granules blocking the filter holes. If necessary clean using a pin.
	Upper caffè chamber filter may be blocked.	Clean using warm soapy water and a fine bristled brush and if necessary clean using a pin.
Coffee leaks from between the upper caffè chamber and the base of the Sunbeam Café Moka.	The rubber seal is worn or damaged.	Contact a Sunbeam Service Centre.
	Upper caffè chamber filter may be blocked.	Clean using warm soapy water and a fine bristled brush and if necessary clean using a pin.

Cleaning

Important: Before cleaning the caffè maker ensure that the appliance has cooled down. Always disconnect the caffè maker from the power outlet before cleaning.

Never immerse the caffè maker switch area, cord or power base in water, or allow moisture to come into contact with these parts.

As the coffee making process involves extracting oils out of coffee grinds, deposits of these oils build up over time and affect the taste of the coffee and operation of the caffè maker. Cleaning to remove these oils is essential to ensure the caffè maker continues to produce good tasting coffee and to keep it operating effectively.

Stainless steel filter

The stainless steel filter should be washed after each use by rinsing it under warm water. Firstly remove the used coffee grinds from the filter by simply turning the filter upside down and spoon out the used coffee grinds into bin, see figure 9. Wash at regular intervals in warm soapy water using a mild detergent.

Should the holes in the filter become clogged with coffee granules use a fine bristled brush and if necessary clean using a pin.

Upper caffè chamber filter

The filter located in the underside of the upper caffè chamber also needs cleaning at regular intervals. Should the holes in the filter become clogged with coffee granules, clean using warm soapy water and a fine bristled brush and if necessary clean using a pin, see figure 10.

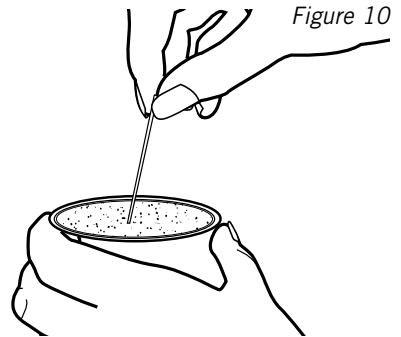


Figure 10

Upper caffè chamber rubber seal

This seal is located in the underside of the upper caffè chamber and creates a seal against the base of the caffè maker when making coffee.

Over time this seal loses its elasticity and will require replacement. An indication that the seal is deteriorating is when steam escapes from around the base and the upper caffè chamber during use.

Upper caffè chamber

The stainless steel upper caffè chamber may be washed with warm, soapy water. Rinse with clean water and dry.

The brushed stainless steel exterior

The stainless steel surface may be wiped over with a damp cloth and polished with a soft dry cloth.

Note: Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the caffè maker, as these will scratch the stainless steel surface.

'Sunbeam' is a registered trademark of Sunbeam Corporation. Café Moka is a trademark of Sunbeam Corporation.

Made in China. Designed and engineered in Australia. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 12 Month Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2004.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

For more information or advice on this or any other Sunbeam appliance, visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand 0800 786 232.



Consumer Hotline


Australia

1800 025 059

New Zealand

0800 786 232

www.sunbeam.com.au

 is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2004.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>