



Instrucciones PDF

Usted puede leer las recomendaciones de la guía del usuario, la guía técnica o la guía de instalación para AEG-ELECTROLUX L61270WDBI. Encontrarás las respuestas a todas sus preguntas sobre la AEG-ELECTROLUX L61270WDBI en el manual del usuario (información, especificaciones, consejos de seguridad, tamaño, accesorios, etc). Las instrucciones detalladas para la utilización aparecen en la Guía del usuario.

Manual de instrucciones AEG-ELECTROLUX L61270WDBI
Instrucciones de uso AEG-ELECTROLUX L61270WDBI
Manual de usuario AEG-ELECTROLUX L61270WDBI
Guía del usuario AEG-ELECTROLUX L61270WDBI
Modo de empleo AEG-ELECTROLUX L61270WDBI

LAVAMAT 61270 WDBI
LAVAMAT 61470 WDBI

EN WASHER DRYER
ES LAVADORA-SECADORA

USER MANUAL 2
MANUAL DE INSTRUCCIONES 40



[Tus instrucciones](#)
[AEG-ELECTROLUX L61270WDBI](#)

Manual de resumen:

· If the appliance has a child safety device, we recommend to activate it. **CHILD SAFETY DEVICE** · When you activate this device, you cannot close the door. This prevents children or pets to be closed in the drum. To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counterclockwise, until the groove is vertical. **CARE AND CLEANING** · Deactivate the appliance and disconnect the mains plug from the mains socket. · Do not use the appliance without the filters. Make sure that the installation of the filters is correct. An incorrect installation causes water leakages. **ENGLISH 5 INSTALLATION** · The appliance is heavy, be careful when you move it.

· Do not transport your appliance without the transit bolts, you can damage internal components and cause leakages or malfunctions. · Do not install and connect a damaged appliance. · Make sure to remove all packaging and transport bolts. · Make sure that the mains plug is disconnected from the mains socket during installation. · Only a qualified person must do the electrical installation, the plumbing and the installation of the appliance.

This to prevent the risks of structural damage or injury. · Do not install or use the appliance where the temperature is less than 0 °C. · When you install the appliance on a carpet floor, make sure that there is air circulation between the appliance and the carpet. Adjust the feet to have the necessary space between the appliance and the carpet. · The first time you use the appliance, make sure that the water hoses and the couplings do not have leakages.

Electrical connection · Make sure that the appliance is earthed. · Make sure that the electrical information on the rating plate agrees with the power supply. ·

Always use a correctly installed shockproof socket. · Do not use multiple plugs and extension cables. There is a risk of fire. · Do not replace or change the mains cable. Contact the service centre. · Make sure not to cause damage to the mains plug and cable. · Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.

· Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. **DISCARD THE APPLIANCE** Disconnect the mains plug from the mains socket. 2. Cut off the mains cable and discard it. 3. Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation (only for front-loading appliances). 1.

Water connection · Do not connect the appliance with old hoses already used. Only use new hoses. · Make sure not to cause damage to the water hoses. · Do not connect the appliance to new pipes or pipes not used for a long time. Let the water flow for some minutes, then connect the inlet hose.

TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 820 / 630 mm 640 mm 220-230 V 2000 W 10 A 50 Hz 6 www.aeg.com Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum wash load Maximum dry load Cotton Cotton Cotton big capacity Synthetics Spin speed Maximum Minimum Maximum IPX4 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 7 kg 3 kg 4 kg 2 kg 1200 rpm (L 61270 FL) 1400 rpm (L 61470 FL) 1) Connect the water inlet hose to a water tap with a 3/4" thread. **ENGLISH 7 PRODUCT DESCRIPTION** 1 2 7 8 9 3 4 5 6 1 Detergent dispenser 2 Control panel 3 Door handle 4 Rating plate 5 Drain pump 6 Feet for the appliance level 7 Water drain hose 8 Mains cable 9 Water inlet hose 10 Feet for the appliance level 10 **ACCESSORIES** 1 2 1 Spanner To remove the transit bolts. 2 Plastic caps 4 3

To close the holes on the rear side of the cabinet after the removal of the transit bolts.

3 Anti-flood inlet hose To prevent possible leakage 4 Plastic hose guide To connect the drain hose on the edge of a sink. 8 www.aeg.com **CONTROL PANEL** 1 2 3 4 5 6 7 8 9 10 A B C 1 Programme selector dial 2 SPIN button (Centrif..



[Tus instrucciones](#)

[AEG-ELECTROLUX L61270WDBI](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>