

Breville

Br

Breville is a registered trademark of Breville Pty. Ltd.

Breville Customer Service Center US Customers

✉ 19400 S. Western Ave
Torrance
CA 90501-1119

☎ Service Center: 1 (866) BREVILLE

Email askus@brevilleUSA.com

www.breville.com

Canada Customers

✉ Anglo Canadian
2555, Avenue Aviation
Pointe-Claire (Montréal) Québec
H9P 2Z2

☎ Service Center: 1 (866) BREVILLE

Fax (514) 683-5554

Email askus@breville.ca

www.breville.com

© Copyright. Breville Pty. Ltd. 2007.

Keurig, Keurig Brewed, Brewing Excellence One Cup at a Time, and K-Cups are trademarks or registered trademarks of Keurig, Incorporated.

Covered by U.S. Patents Numbers 7,165,488; D513572 and 5,840,189;

and other U.S. and foreign patents pending.

Due to continual improvements in design or otherwise, the product you purchase may differ slightly from the one illustrated in this booklet.



Model BKC600XL Issue 2/07 Packaging Code: NA

Model B

Breville

Gourmet Single Cup Brewer™

Model BKC600XL



FILENAME: BKC600XL Book IB AMEND.qxp
BREVILLE > BR9013 > IW / GW / GC
A5 Instruction Booklet PMS 8403C and BLACK

Ver. 01
11/10/07
4.53PM

BLACK

PMS 8403C

ARTWORK SCALE 100%
PRINTED HERE AT 100%

Contents

	Page
Breville recommends safety first	4
Know your Breville Gourmet Single Cup Brewer™	6
Operating your Breville Gourmet Single Cup Brewer™	8
Installing the water filter	8
One-time priming process	9
Brewing a K-Cup®	10
Brewing with the My K-Cup®	12
Stopping the brew process	15
Brewing hot water	15
Refilling the water tank	15
Purging the brewer	16
Menu and programming options	17
Setting the 'CLOCK SET' feature	17
Setting the 'ON-OFF TIME' feature	17
Setting the 'AUTO OFF' feature	19
Setting the 'BREW TEMP' feature	20
Setting the 'BREW SIZE' feature	20
Care and cleaning	22
Cleaning the brewer housing	22
Cleaning the K-Cup® holder	22
Cleaning the My K-Cup®	22
Cleaning the water tank and lid	23
Cleaning the water filter	23
Descaling the brewer	23
Storage	24
Trouble shooting	25
One year limited warranty	27
French	F1

Congratulations

on the purchase of your new Breville Gourmet Single Cup Brewer™

Your Brewer has been jointly designed and engineered by Breville-Australia and Keurig-USA. Enjoy your Breville Brewer with over 150 varieties of Keurig K-Cups® from 13 gourmet partners.

Breville



For more information on K-Cups® or K-Cup® ordering, call Breville Customer Service on 1-866-BREVILLE or visit www.breville.com

Breville recommends safety first

IMPORTANT SAFEGUARDS

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

READ ALL INSTRUCTIONS AND SAVE THESE FOR FUTURE REFERENCE



- This appliance is for household use only.
- Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- To protect against fire, electrical shock and injury to persons, do not immerse the appliance, cord or plug in water or any other liquid.
- Do not leave the appliance unattended when in use.
- Close supervision is necessary when the appliance is used by or near children.
- Always use the appliance on a dry, level surface.
- Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
- Do not touch hot surfaces. Use handles and knobs where available.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- The use of accessory attachments not recommended by Breville may cause a risk of injury to persons, fire or electric shock.
- Do not overfill the Water Tank.
- Always keep the Water Tank Lid on the Water Tank unless you are refilling it.
- Use only water in this appliance. Do not put any other liquids or foods in the Water Tank except as instructed in Care and Cleaning (page 23).
- There are two sharp needles that puncture the K-Cup[®]. One on the underside of the Brewing Chamber Head, and the other in the base of the K-Cup[®] Holder. To avoid risk of injury, do not put your fingers in the Brewing Chamber or K-Cup[®] Holder.
- There is extremely hot water in the K-Cup[®] Holder during the brewing process. To avoid risk of injury, do not raise the Safety Locking Arm or open the Brewing Chamber during the brewing process.
- To turn off the appliance, press and release the Power Switch on the lower back, right side of the Brewer to the 'OFF' status and then remove the plug from the wall outlet.
- Always switch the appliance to the 'OFF' status and then remove the plug from the wall outlet when the appliance is not being used and before cleaning. Allow the appliance to cool before reassembling or removing parts and before cleaning the appliance.
- Strictly follow the Care and Cleaning instructions (page 22).
- This appliance is equipped with a power cord having a grounding wire with a grounding plug. The appliance must be grounded using a 3-hole properly grounded outlet. In the event of an electrical short circuit, grounding reduces the risk of electrical shock.
- If the outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

- Do not, the thro use an a
- Consult instructi doubt ex properly
- Regular actual a if dama malfunction applianc 1-866-E adjustm
- For any Breville

SHORT CIRCUIT

Your Brevi or property children to marked el the applian can be pu grounding



- Do not, under any circumstances, cut or remove the third (ground) prong from the power cord or use an adapter.
- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.
- Regularly inspect the supply cord, plug and actual appliance for any damage. Do not operate if damaged in anyway or after the appliance malfunctions. Immediately cease use of the appliance and call Breville Customer Service at 1-866-BREVILLE for examination, repair or adjustment.
- For any maintenance other than cleaning, call Breville Customer Service at 1-866-BREVILLE.

Your Breville appliance comes with the unique Assist™ Plug, conveniently designed with a finger hole in the power plug for easy and safe removal from the wall outlet. For safety reasons it is recommended you plug your Breville appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances. If the electric circuit is overloaded with other appliances, your Brewer may not function properly. Use in conjunction with a power strip or extension cord is not recommended.

Note

SHORT CORD INSTRUCTIONS


Your Breville appliance is fitted with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision. If an extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally and (3) the extension cord must include a 3-prong grounding plug.

SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY.



TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT REMOVE THE BASE PANEL. NO USER SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL ONLY.

Know your Breville Gourmet Single Cup Brewer™

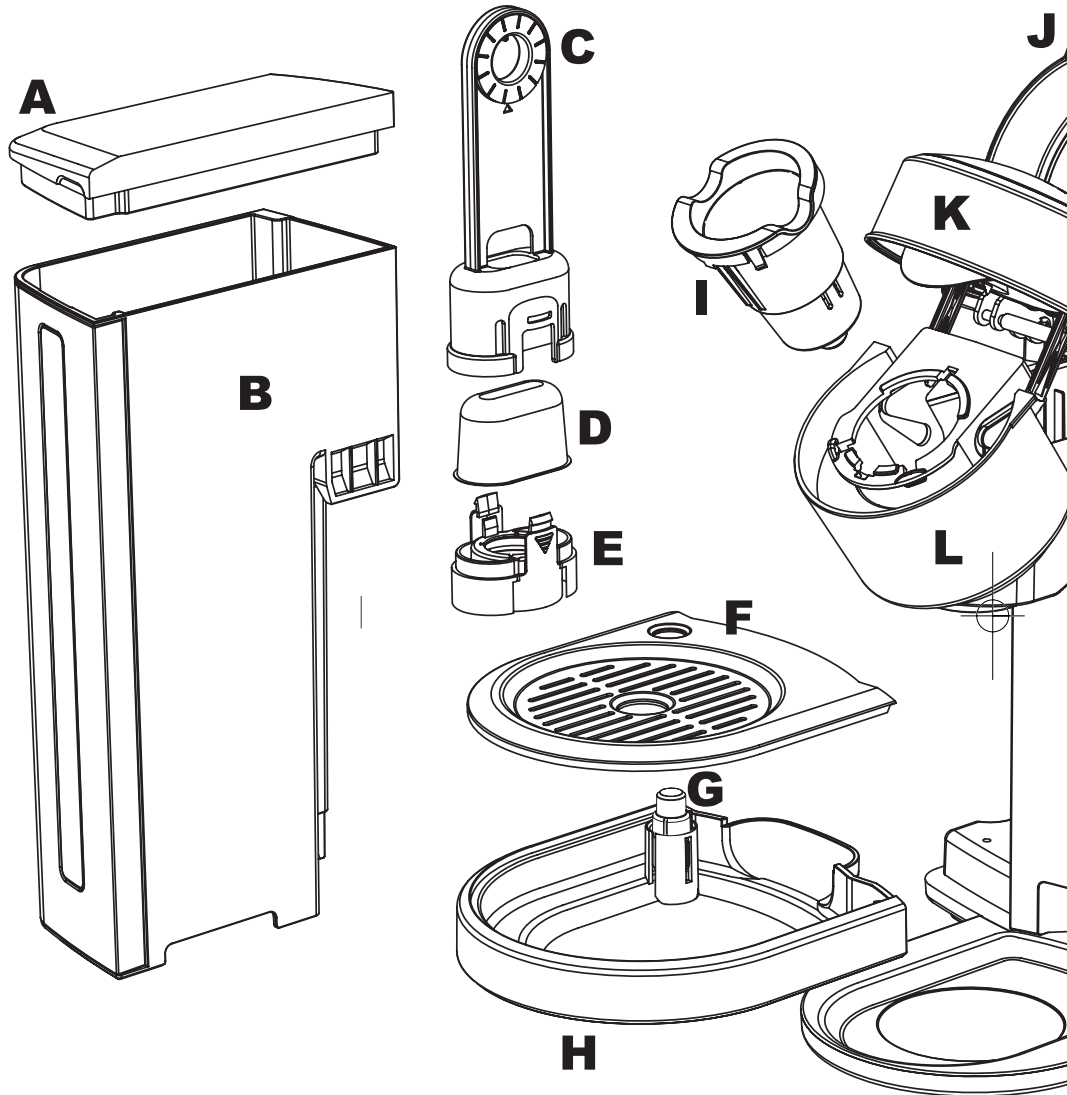

A Water tank lid

B Water tank

C Upper filter holder

D Replaceable charcoal filter

E Lower filter holder

F Drip tray plate

G Drip tray level indicator

H Drip tray

I K-Cup® holder

J Safety locking arm

K Brewing chamber head

L Brewing chamber

M LCD screen

N Control panel

O My K-Cup® /K-Cup® holder storage

P My K-C


Q My K-C

R My K-C

S My K-C

T Power S

M

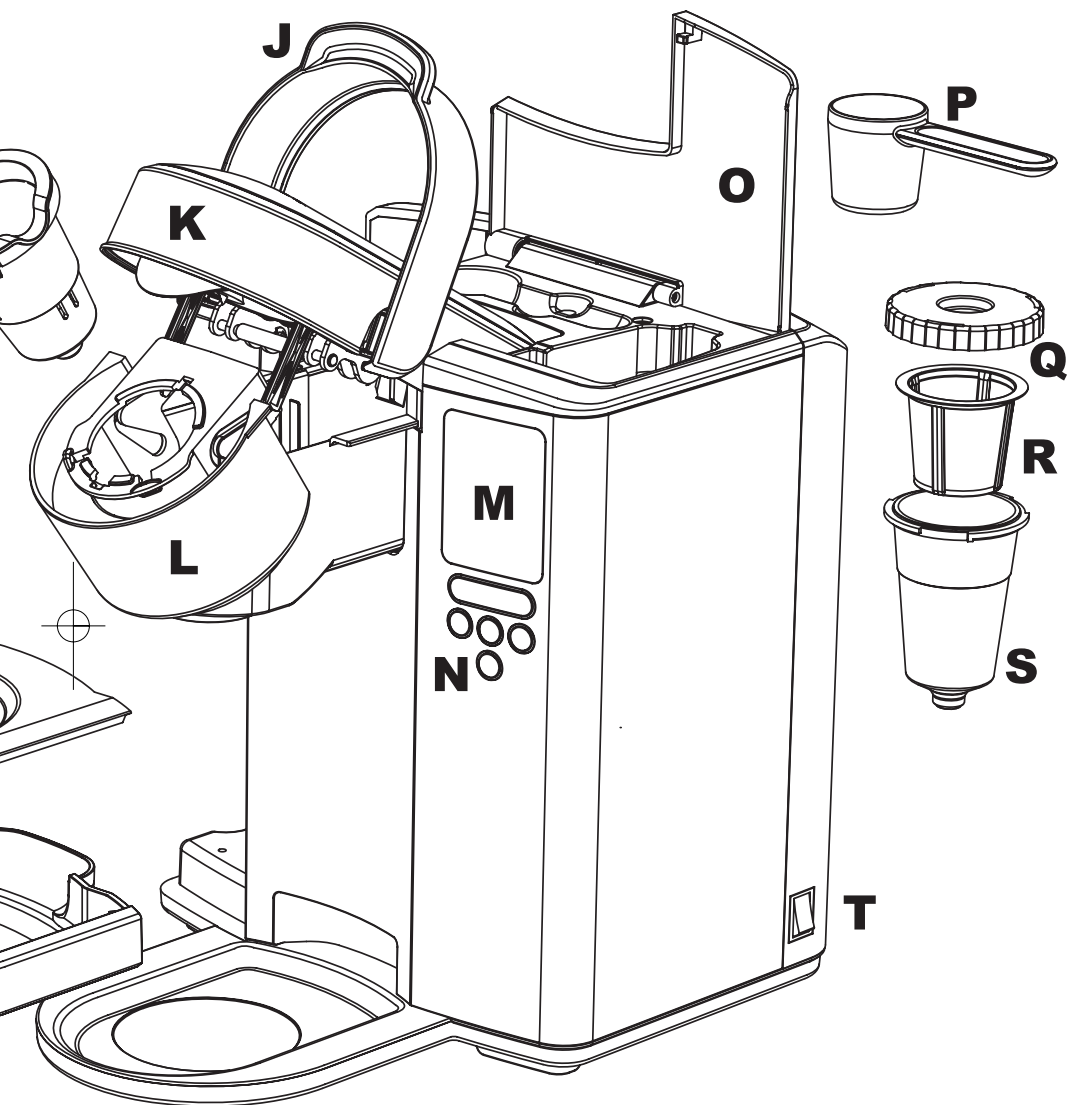

- P My K-Cup[®] measuring scoop
- Q My K-Cup[®] lid
- R My K-Cup[®] filter basket
- S My K-Cup[®] holder
- T Power Switch

der storage

To order replacement Charcoal Filters, call Breville Customer Service on 1-866-BREVILLE or visit www.breville.com

Note

Operating your Breville Gourmet Single Cup Brewer™

Installing the water filter

For the best tasting gourmet coffee, tea or hot cocoa, Breville recommends using bottled or filtered water.

The Water Filter provided with the Brewer can significantly reduce substances that affect the smell and taste of water such as free chlorine, certain pesticides and organic impurities as well as traces of heavy metals.

The Water Filter can be removed from the Brewer.

If you choose to install the Water Filter, it is recommended to replace the Charcoal Filter every 2 months or 60 tank refills, more often if you have hard water.


We recommend removing the Water Filter if using filtered water, or if you choose not to replace the Charcoal Filter every 2 months, as the filter may clog and affect the smell and taste of the water.

If you choose not to install the Water Filter, you are ready to start the One-time Priming Process (page 9).


Note

Follow these steps each time you install a new Charcoal Filter to ensure it filters optimally.

1. Remove the Water Tank from the Brewer by gripping the handle located on the left side of the Water Tank, then lift upwards.

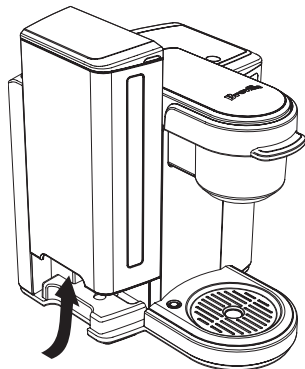

2. Remove the Water Tank Lid.
3. Rinse the Water Tank with fresh water and replace back onto the Brewer.
4. Remove the Upper and Lower Filter Holder and Charcoal Filter from the polybag. Unwrap the Charcoal Filter from its protective plastic.
5. Soak the Charcoal Filter for 5 minutes then rinse for 30 seconds. It is normal to see a grey residue after soaking the filter.
6. Wash the Lower Filter Holder, ensuring the stainless steel mesh is free of residue.
7. Insert the Charcoal Filter into the Upper Filter Holder, then attach the Lower Filter Holder so it locks into place.

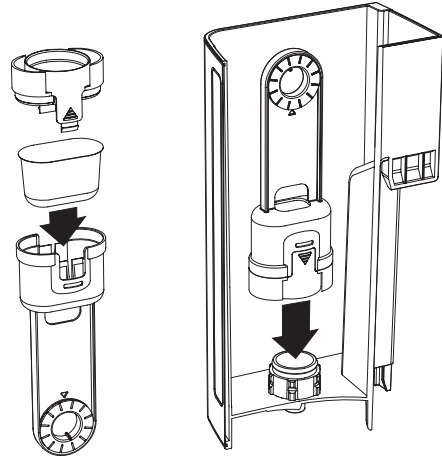

8. Set the date dial on the Upper Filter Holder 2 months ahead. This will remind you when the Charcoal Filter will need to be replaced.
9. Place the assembled Filter Holder into the Water Tank, aligning so the date dial is visible from outside the Tank. Push down hard on the assembled Filter Holder until it snaps into place.
10. Your Brewer is ready for the one-time priming process.

Replace
60 tank
To order
Breville
visit ww
We reco
choose
2 month
smell an

One-time

Priming fil
the brewin
it has been

the Br
below fr
hours to
A frozen
properly

1. Unwra
into a
2. Place
drip tr
accom
3. Fill the
approx
The W
a)

b)

wer™

Replace the Charcoal Filter every 2 months, or 60 tank refills, more if you have hard water.

To order replacement Charcoal Filters, call Breville Customer Service on 1-866-BREVILLE or visit www.breville.com.

We recommend removing the Water Filter if you choose not to replace the Charcoal Filter every 2 months, as the filter may clog and affect the smell and taste of the water.

Note

One-time priming process


Priming fills the internal tank with water and cleanses the brewing system. You cannot use your Brewer until it has been primed for its first use.

If the Brewer has been exposed to temperatures below freezing, allow the Brewer at least two hours to reach room temperature before priming. A frozen or extremely cold Brewer will not prime properly and can cause damage.

Note

1. Unwrap the power cord and plug the Brewer into a grounded outlet.
2. Place a 12 oz. mug on the Drip Tray Plate. The drip tray plate and drip tray can be removed to accommodate taller mugs and travel mugs.
3. Fill the Water Tank with water until it is approximately 1 inch below the top edge. The Water Tank can be filled in two ways:
 - a) Remove the Water Tank Lid and pour water directly into the Water Tank while it is still attached to the Brewer, then replace the Lid.
 - b) Remove the Water Tank Lid, then gripping the handle located on the left side of the Water Tank, lift upwards. Fill with water. Place the Water Tank back onto the Brewer and replace the Lid.

4. Press and release the Power Switch located on the lower back, right side of the Brewer. The Power Switch is spring loaded and will return to its original position.
5. The Water Tank LED will illuminate. The LCD screen will illuminate and indicate 'PRIME'. The 'BREW' button will illuminate and flash.

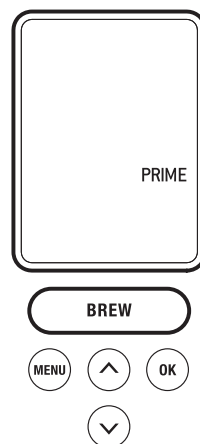

If the Water Tank is empty or not in place on the Brewer, the Water Tank LED's will flash and the LCD screen will indicate 'REFILL TANK'. None of the control panel buttons will be active until water is added to the Water Tank.

Note

6. A K-Cup® should not be used for the one-time priming process.
7. Press the 'BREW' button.
8. The Brewer will automatically fill with water and make a vibrating sound. This is normal. The Brewer will then cease to vibrate and begin heating the water. **This entire process will take approximately 4 minutes. The LCD screen will indicate 'HEATING' during this period.**

The Brewer will take about 4 minutes to heat up during the priming process.

Note

Operating your Breville Gourmet Single Cup Brewer™ continued



9. Once the water is heated, the LCD screen will no longer indicate 'HEATING'. The 'BREW' button will illuminate and flash for up to 60 seconds.
10. Press the 'BREW' button. This will start a cleansing brew which will complete the priming sequence. The LCD screen will no longer indicate 'PRIMING'. Hot water will flow into your mug. When the flow stops, discard the hot water.
12. Fill the Water Tank with water until it is approximately 1 inch below the top edge.
13. The LCD screen will indicate 'OPEN HEAD'. Open the Brewing Chamber Head by raising and lowering the Safety Locking Arm completely. The LCD screen will indicate 'READY TO BREW'.
14. The one-time priming process is now complete and you are ready for your first K-Cup® brew (page 10) or My K-Cup® brew (page 12).



11. The LCD screen will indicate 'HEATING' as the Brewer heats the water for the next brew cycle. Once the water is heated, the LCD screen may indicate 'REFILL TANK'.



Brewing a K-Cup®

1. Follow the instructions, Installing the Water Filter (page 8) and the One-time Priming Process (page 9). The Brewer should be turned on and the Water Tank should be filled and illuminated.
2. The LCD screen will indicate 'READY TO BREW'. The  and  buttons will illuminate and the 'BREW' button will illuminate and flash for up to 60 seconds.

If the 'BREW' button is not pressed in 60 seconds, the LCD screen will indicate 'OPEN HEAD' and the 'BREW' button will be disabled to prevent accidental activation. To re-activate the brew sequence, open the Brewing Chamber Head by raising and lowering the Safety Locking Arm completely.

Note

3. Place a cup or mug on the Drip Tray Plate. The drip tray plate and drip tray can be removed to accommodate taller mugs and travel mugs.
4. Raise the Safety Locking Arm. The Brewing Chamber will open toward you.
5. Select a K-Cup®.


6. Place in the lid or

There are
K-Cup®
Chamber
K-Cup®
put your
K-Cup®

7. Lower
Brewing
When
indica
button
illumin



continued

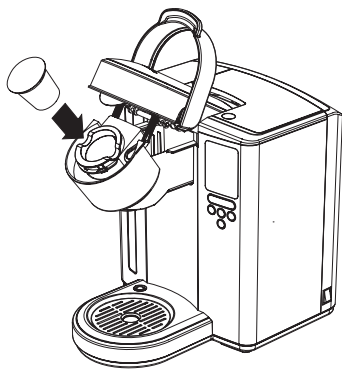
6. Place the K-Cup[®] in the K-Cup[®] Holder (located in the Brewing Chamber). Do not remove the foil lid or puncture the K-Cup[®].


 


There are two sharp needles that puncture the K-Cup[®]. One on the underside of the Brewing Chamber Head and the other in the base of the K-Cup[®] Holder. To avoid risk of injury, do not put your fingers in the Brewing Chamber or K-Cup[®] Holder.

Note

7. Lower the Safety Locking Arm to close the Brewing Chamber Head over the K-Cup[®] Holder. When closed completely, the LCD screen will indicate 'READY TO BREW'. The  and  buttons will illuminate and the 'BREW' button will illuminate and flash for up to 60 seconds

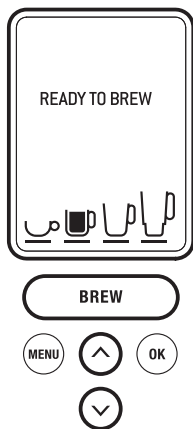



- a) The LCD screen will indicate the default brew size (7.25 oz.). To choose a different size, press the  button to go up in size or the  button to go down in size.

Select from a stronger small cup (5.25 oz. serving), a small mug (7.25 oz. serving), a large mug (9.25 oz. serving) or a travel mug (11.25 oz. serving).

The small mug (7.25 oz. serving) is the default brew size. To program your favorite brew size, refer to Setting the 'BREW SIZE' feature (page 20).

Note

- b) Once the brew size is selected, press the 'BREW' Button. The 'BREW' button will stop flashing, the  and  buttons will no longer be lit. The LCD screen will indicate 'BREWING' and the selected brew size.



If the 'BREW' button is not pressed in 60 seconds, the LCD screen will indicate 'OPEN HEAD' and the 'BREW' button will be disabled to prevent accidental activation. To re-activate the brew sequence, open the Brewing Chamber Head by raising and lowering the Safety Locking Arm completely.

Note

Operating your Breville Gourmet Single Cup Brewer™ continued

- The LCD screen will indicate 'BREWING', however there may be a short pause before the brewing process begins. The process lasts about 60 seconds and ends with a burst of air to remove all liquid from the K-Cup®.

There is extremely hot water in the K-Cup® Holder during the brewing process. To avoid risk of injury, do not raise the Safety Locking Arm or open the Brewing Chamber during the brewing process. Following the brew, the LCD screen will indicate 'HEATING' as the Brewer heats the water for the next brew cycle. This process lasts about 15 seconds. The pump will make a vibrating sound. This is normal.

Note

- Raise the Safety Locking Arm, remove and dispose of the used K-Cup®. Use caution as the K-Cup® will be hot.
- Enjoy your first cup of gourmet coffee, tea or hot cocoa!
- The LCD screen will indicate 'READY TO BREW', indicating that the next K-Cup® can be inserted for the next brew cycle.

Brewing with the My K-Cup® Accessory


The Breville Gourmet Single Cup Brewer™ comes with a My K-Cup® accessory. The dishwasher safe, reusable My K-Cup® allows you to use your own grind of coffee so you can adjust the amount and type of coffee to suit your tastes. Along with the included measuring scoop, this accessory conveniently stores in the easy open compartment on top of the brewer.

- Follow the instructions, Installing the Water Filter (page 8) and the One-time Priming Process (page 9). The Brewer should be turned on and the Water Tank should be filled and illuminated.
- The LCD screen will indicate 'READY TO BREW'.

If the 'BREW' button is not pressed in 60 seconds, the LCD screen will indicate 'OPEN HEAD' and the 'BREW' button will be disabled to prevent accidental activation. To re-activate the brew sequence, open the Brewing Chamber Head by raising and lowering the Safety Locking Arm completely.

Note

- Place a cup or mug on the Drip Tray Plate. The drip tray plate and drip tray can be removed to accommodate taller mugs and travel mugs.
- Open the storage compartment located on top of the Brewer by pressing the finger indent on the right side. Remove the My K-Cup® accessory.
- Disassemble the My K-Cup® accessory by removing the Lid from the Holder in a counter-clockwise direction. Remove the Filter Basket from the Holder.
- Wash the My K-Cup® Lid, Filter Basket and Holder in warm soapy water prior to first use. Rinse and dry thoroughly.
- Insert the Filter Basket into the Holder.

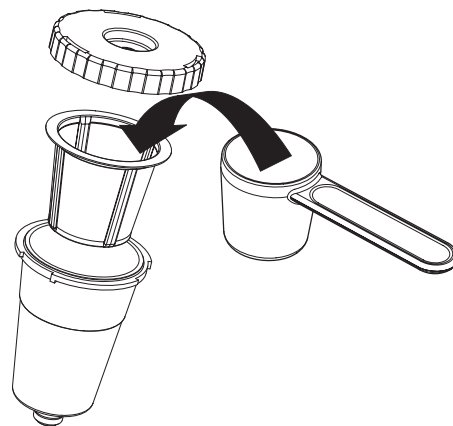

- Use the Filter Plate to catch coffee grounds. Place the Filter Plate on the Drip Tray Plate. The amount of coffee you prefer is more than the ground coffee there. Upper and lower to sea

- 1 level scoop of coffee. We recommend 1 level scoop serving. Or, if you prefer a cup 5.25 oz. If you prefer a cup 5.25 oz. 1. Start with 1 level scoop of coffee. Press the Brew button. 2. Expect a strong brew. 3. Avoid overfilling the cup. Poor coffee.

- Raise the Safety Locking Arm to open the Brewing Chamber.
- Place a cup or mug on the Drip Tray Plate. a. Remove the Drip Tray Plate and Drip Tray. b. Insert the Filter Basket into the Holder.

continued

8. Use the My K-Cup[®] Measuring Scoop to fill the Filter Basket with 1 level scoop maximum of coffee. 1 level scoop is equivalent to 2 tablespoons. Alternatively, there are line markings on the inside of the Filter Basket that indicate 1 tablespoon and 2 tablespoons so you can adjust the amount of coffee to your personal preference. **Do not fill the Filter Basket with more than one level scoop of coffee or tamp the grinds.** Ensure the coffee remains loose and there are no coffee grinds remaining on the upper rim of the Filter Basket. Screw on the Lid to seal.

1 level scoop = 2 tablespoons



We recommend this for the small mug 7.25 oz. serving.


Or, if you like a stronger brew, select the small cup 5.25 oz. serving.

If you grind your own beans:

1. Start with a coarser grind similar to a French Press grind.
2. Experiment with grinds similar to drip brewing grinds.
3. Avoid a fine espresso grind setting that could clog the Filter Basket or result in poor extraction.



Note

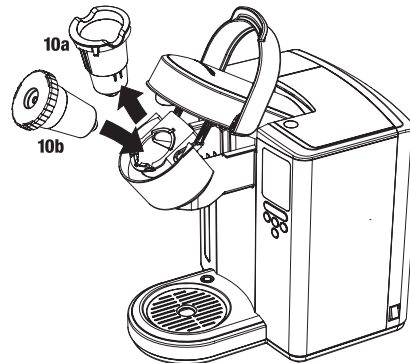
9. Raise the Safety Locking Arm. The Brewing chamber will open toward you.
10. Place the assembled My K-Cup[®] Holder into the Brewing Chamber. To do this:
- a. Remove the K-Cup[®] Holder from the Brewing Chamber (10a). Store the K-Cup[®] Holder in the My K-Cup[®] Storage compartment located on top of the Brewer.
 - b. Insert the assembled My K-Cup[®] Holder into the Brewing Chamber (10b), ensuring to align the arrow  on the My K-Cup[®] Lid with the arrow  in the Brewing Chamber.





There are two sharp needles used to puncture the K-Cup[®] and My K-Cup[®] Holder. One in the base of the K-Cup[®] Holder, the other on the underside of the Brewing Chamber Head. To avoid risk of injury, use caution when inserting or removing the K-Cup[®], K-Cup[®] Holder, or My K-Cup[®] Holder.

Note

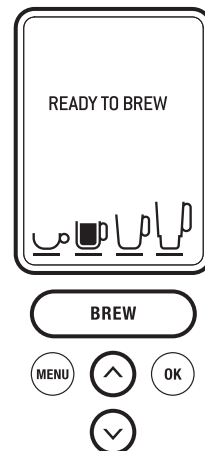11. Lower the Safety Locking Arm to close the Brewing Chamber Head over the My K-Cup[®] Holder. When closed completely, the LCD screen will indicate 'READY TO BREW'. The  and  buttons will illuminate and the 'BREW' button will illuminate and flash for up to 60 seconds.





Operating your Breville Gourmet Single Cup Brewer™ continued

- a. The LCD screen will indicate the default brew size (7.25 oz.). To choose a different size, press the  to go up in size or the  button to go down in size.

Select from a stronger small cup (5.25 oz. serving), a small mug (7.25 oz. serving), a large mug (9.25 oz. serving) or a travel mug (11.25 oz. serving). The small mug (7.25 oz. serving) is the default brew size. To program your favorite brew size, refer to Setting the 'BREW SIZE' feature (page 20).

Note

- b. Once the brew size is selected, press the 'BREW' Button. The 'BREW' button will stop flashing, the  and  buttons will no longer be lit. The LCD screen will indicate 'BREWING' and the selected brew size.



If the 'BREW' button is not pressed in 60 seconds, the LCD screen will indicate 'OPEN HEAD' and the 'BREW' button will be disabled to prevent accidental activation. To re-activate the brew sequence, open the Brewing Chamber Head by raising and lowering the Safety Locking Arm completely.

Note

12. The LCD screen will indicate 'BREWING', however there may be a short pause before the brewing process begins. The process lasts about 60 seconds and ends with a burst of air to remove all liquid from the My K-Cup® Holder.

There is extremely hot water in the My K-Cup® Holder during the brewing process. To avoid risk of injury, do not raise the Safety Locking Arm or open the Brewing Chamber during the brewing process.

Following the brew, the LCD screen will indicate 'HEATING' as the Brewer heats the water for the next brew cycle. This process lasts about 15 seconds. The pump will make a vibrating sound. This is normal.

Note

13. Raise the Safety Locking Arm, remove the assembled My K-Cup® Holder. Use caution as the My K-Cup® Holder will be hot.
14. Disassemble the My K-Cup® Holder by removing the Lid from the Holder in a counter-clockwise direction. Remove the Filter Basket from the Holder, discard the grounds and rinse out the Filter Basket and Holder.
15. Enjoy your first cup of gourmet coffee, tea or hot cocoa!

The My ground

a) Use a K-Cu

b) Use a K-Cu

After bre the K-Cu Brewing

To repla Locking

Insert K-aligning

with the Use cau

needle o Head th

Stopping

To stop br and releas Brewer to hot cocoa and the LE longer be 'ON-OFF T panel butt back on.

You may your nex recomm Brewing then dis the brew

continued

The My K-Cup[®] accessory is designed for **ground** coffee only. Do not:

- a) Use a K-Cup[®] or coffee pod in the My K-Cup[™] Filter Basket.
- b) Use the My K-Cup[®] Filter Basket with the K-Cup[®] Holder

After brewing with the My K-Cup[®] accessory, the K-Cup[®] Holder must be inserted into the Brewing Chamber in order to brew a K-Cup[®].

To replace the K-Cup[®] Holder, raise the Safety Locking Arm, and remove the My K-Cup[®] Holder. Insert K-Cup[®] Holder into the Brewing Chamber, aligning the arrow ▲ on the K-Cup[®] Holder with the arrow ▼ in the Brewing Chamber. Use caution when doing this as there is a sharp needle on the underside of the Brewing Chamber Head that punctures the K-Cup[®].

Note

Stopping the brew process

To stop brewing after the process has started, press and release the Power Switch on the right side of the Brewer to the 'OFF' status. The flow of coffee, tea or hot cocoa will stop, the heating element will shut off and the LED's illuminating the Water Tank will no longer be lit. The LCD screen will indicate the time, 'ON-OFF TIME' and 'AUTO OFF'. None of the control panel buttons will be active until the Brewer is turned back on.

You may get less coffee, tea or hot cocoa during your next brew. After a terminated brew, we recommend that you follow the instructions for Brewing hot water (page 15). Your next brew will then dispense the correct volume according to the brew size you have selected.

Note

Brewing hot water

The Brewer is able to dispense a cup of hot water for making hot chocolate in a packet, for use in cooking, for making soups, etc. Follow the instructions Brewing a K-Cup[®] (page 10), without inserting a K-Cup[®].

After brewing a hot cocoa K-Cup[®], or stopping the brew process mid-cycle, we recommend running a hot water brew cycle.

Note

Refilling the water tank

The LCD screen will indicate 'REFILL TANK' when the water level in the Water Tank is low or if the Water Tank has been removed.

1. Fill the Water Tank with water until it is approximately 1 inch below the top edge. The Water Tank can be filled in two ways:
 - a) Remove the Water Tank Lid and pour water directly into the Water Tank while it is still attached to the Brewer, then replace the Lid.
 - b) Remove the Water Tank Lid, then gripping the handle located on the left side of the Water Tank, lift upwards. Fill with water. Place the Water Tank back onto the Brewer and replace the Lid.
2. The LCD screen will indicate either:
 - a) 'OPEN HEAD'. Raise and lower the Safety Locking Arm completely.
 - b) 'HEATING' as the Brewer heats the water for the next brew cycle. This process lasts about 15 seconds. The pump will make a vibrating sound. This is normal.
3. Once the Safety Locking Arm is opened and lowered, or the water is heated, the LCD screen will indicate 'READY TO BREW', indicating the brew cycle can begin. The ☺ and ☻ buttons will illuminate and the 'BREW' button will illuminate and flash for up to 60 seconds.

Operating your Breville Gourmet Single Cup Brewer™ continued

Menu

If the 'BREW' button is not pressed in 60 seconds, the LCD screen will indicate 'OPEN HEAD' and the 'BREW' button will be disabled to prevent accidental activation. To re-activate the brew sequence, open the Brewing Chamber Head by raising and lowering the Safety Locking Arm completely.


Do not remove the Water Tank during the brewing process.

Note

Purging the brewer

If the Brewer has not been used for more than one week, you should renew the water from the inner tank by purging the brewer.

1. If there is water in the Water Tank, remove the Water Tank Lid, then gripping the handle located on the left side of the Water Tank, lift upwards. Discard the water, rinse and refill with bottled or filtered water. Place the Water Tank back onto the Brewer and replace the Lid.
2. If there is no water in the Water Tank, refill with water. Place the Water Tank back onto the Brewer and replace the Lid.
3. Ensure the Brewer is turned on. Raise and lower the Safety Locking Arm on the Brewer without inserting a K-Cup®.
4. The LCD screen will indicate 'READY TO BREW' and the 'BREW' button will illuminate and flash.

5. The LCD screen will indicate the default brew size (7.25 oz. serving unless programmed otherwise). Select the largest brew size (11.25 oz. serving) by pressing the  button on the control panel.
6. Place a 12 oz. mug on the Drip Tray Plate. The drip tray plate and drip tray can be removed to accommodate taller mugs and travel mugs.
7. Press the 'BREW' button. Hot water will flow into your mug. When the flow stops, discard the hot water.
8. Repeat this process 2 more times to completely renew the water from inner tank.

Setting

Setting the time w

You must
TIME' fe

1. Press option blinking
2. Press indica
3. Press appropr indica

4. Once 'OK' b that th
5. Press appropr
6. Once the 'O menu

continued


 
Menu and programming options


Setting the 'CLOCK SET' feature


 
Setting the clock is optional. When the clock is set, the time will appear on the LCD screen.


You must set the clock if using the 'ON-OFF TIME' feature.

Note

1. Press the 'MENU' button. The menu programming options will appear on the LCD screen with a blinking indicator on 'CLOCK SET'.
2. Press the 'OK' button. The hour will blink, indicating the hour is ready to be set.
3. Press the  or  button to reach the appropriate hour. If the hour has passed 12, the indicator switches from AM to PM.

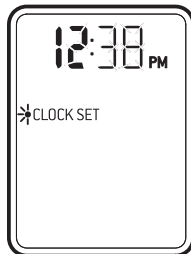

4. Once the appropriate hour is reached, press the 'OK' button. The minutes will blink, indicating that the minutes are ready to be set.
5. Press the  or  button to reach the appropriate minute.
6. Once the appropriate minute is reached, press the 'OK' button. The LCD screen will return to the menu programming options.

7. To exit the menu programming options, press the 'MENU' button. Alternatively, press the  button to reach 'EXIT MENU' and press the 'OK' button. The LCD screen will return to the main screen and indicate the time selected.

If power is interrupted to the Brewer, the clock will need to be reset. Programmed brew size and brew temperature settings are remembered and restored automatically. All other settings will be restored automatically after the clock is reset.

Note

Setting the 'ON-OFF TIME' feature

This feature allows you to program the specific time when the Brewer will automatically turn on and/or off. By programming your Brewer to automatically turn on, you will not have to wait for the Brewer to heat the water in the Water Tank. It will take the Brewer approximately 3 1/2 minutes to heat the water from room temperature.

You must set the clock if using the 'ON-OFF TIME' feature.


An alternative to setting the 'ON-OFF TIME' feature is to leave the Brewer on all the time. We recommend this so your Brewer is always ready to brew a fresh cup of gourmet coffee, tea or hot cocoa.


To turn the Brewer off at any time, press and release the Power Switch on the lower back, right side of the Brewer. The clock will remain on if set, however you can not activate the brew cycle. Press and release the Power Switch again to restore power to the Brewer. You will have to wait for the water to heat up before the Brewer is ready to brew.



Note

Menu and programming options continued

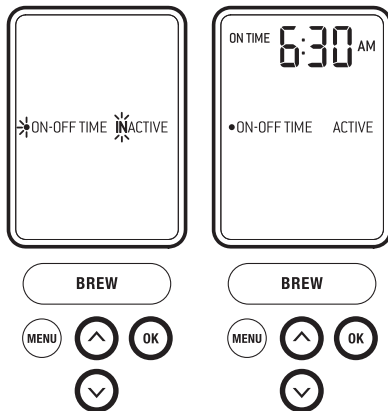

Setting the 'ON-OFF TIME' feature continued

1. Press the 'MENU' button. The menu programming options will appear on the LCD screen with a blinking indicator on 'CLOCK SET'.
2. Press the  button to reach 'ON-OFF TIME'.
3. Press the 'OK' button.





4. Press the  or  button to see the two options:
 - a. 'ON-OFF TIME' will be 'INACTIVE', indicating that the Brewer will not turn on or off automatically. Press the 'OK' button to select this option. The LCD screen will return to the menu programming options.
 - b. 'ON-OFF TIME' will be 'ACTIVE', indicating the Brewer will automatically turn on and/or off according to the specific times you set. Press the 'OK' button to select this option.


Setting the 'ON TIME'

- i. The LCD screen will display 'ON TIME', indicating that the time you wish the Brewer to automatically turn on is ready to be set. The hour will blink, indicating the hour is ready to be set.
- ii. Press the  or  button to reach the appropriate hour. If the hour has passed 12,

the indicator switches from AM to PM.

- iii. Once the appropriate hour is reached, press the 'OK' button. The minutes will blink, indicating that the minutes are ready to be set.
- iv. Press the  or  button to reach the appropriate minute.
- v. Once the appropriate minute is reached, press the 'OK' button. The LCD screen will display 'OFF TIME', indicating that the time you wish the Brewer to automatically turn off is ready to be set.

Setting the 'OFF TIME'

 

- i. Follow the instructions (ii to iv) for Setting the 'ON TIME'.
 - ii. Once the appropriate time is reached, press the 'OK' button. The LCD screen will return to the menu programming options
5. To exit the menu programming options, press the 'MENU' button. Alternatively, press the  button to reach 'EXIT MENU' and press the 'OK' button. The LCD screen will return to the main screen and indicate whether you have activated the 'ON-OFF TIME' feature.



If you wish to set the 'OFF TIME' feature, press the 'MENU' button. The LCD screen will display 'OFF TIME' and the minutes will blink, indicating that the minutes are ready to be set.

Setting

This feature allows you to set the Brewer to automatically turn off for 2 hours from the time you set.




1. Press the 'MENU' button. The LCD screen will display 'OFF TIME' and the minutes will blink, indicating that the minutes are ready to be set.
2. Press the  button to reach 'OFF TIME'.
3. Press the 'OK' button.
4. Press the  button to reach 'EXIT MENU' and press the 'OK' button.


If you want to brew outside the 'ON TIME' and 'OFF TIME' selected, press and release the Power Switch on the lower back, right side of the Brewer to restore power. You will have to wait for the water to heat up before the Brewer is ready to brew.

Note


Setting the 'AUTO OFF' Feature


This feature automatically turns the Brewer off after 2 hours from the last brew.

1. Press the 'MENU' button. The programming options will appear on the LCD screen with a blinking indicator on 'CLOCK SET'.
2. Press the  button to reach 'AUTO OFF'.
3. Press the 'OK' button.
4. Press the  or  button to see the two options:

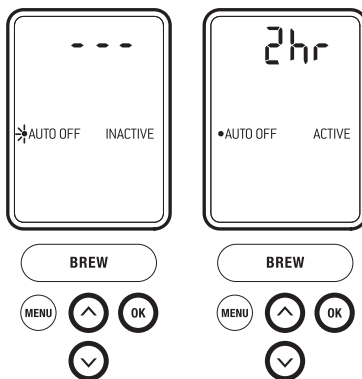

- a) 'AUTO OFF' will be 'INACTIVE' and the LCD screen will display '- - -', indicating that the Brewer will not turn off automatically. Press the 'OK' button to select this option. The LCD screen will return to the menu programming options.


- b) 'AUTO OFF' will be 'ACTIVE' and the LCD screen will display '2 hr', indicating the Brewer will automatically turn off after 2 hours. Press the 'OK' button. The LCD screen will return to the menu programming options.
5. To exit the menu programming options, press the 'MENU' button. Alternatively, press the  button to reach 'EXIT MENU' and press the 'OK' button. The LCD screen will return to the main screen and indicate whether you have activated the 'AUTO OFF' feature.

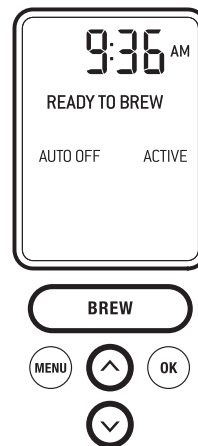



Menu and Programming Options continued

Setting the 'BREW TEMP' feature

The Brewer brews coffee at a preset temperature of 192°F. You can adjust this temperature down by 5°F if you prefer a cooler cup of coffee, tea or hot cocoa.

 
1. Press the 'MENU' button. The programming options will appear on the LCD screen with a blinking indicator on 'CLOCK SET'.
2. Press the  button to reach 'BREW TEMP'.
3. Press the 'OK' button. The LCD screen will indicate the default brew temperature, 192°F or the pre-programmed brew temperature.



4. Press the  or  button to reach the appropriate brew temperature. The temperature can only be set between 187°F and 192°F.

The Brewer will remain at the selected temperature for subsequent brews

Note


5. Press the 'OK' button. The LCD screen will return to the menu programming options.
6. To exit the menu programming options, press the 'MENU' button. Alternatively, press the  button to reach 'EXIT MENU' and press the 'OK' button. The LCD screen will return to the main screen.


When using the Brewer at high altitudes (over 5,000 feet), if boiling occurs, use the 'BREW TEMP' feature to lower the temperature.

Note

Setting the 'BREW SIZE' feature

 This feature allows you to avoid scrolling through brew sizes if a particular size is chosen most often.



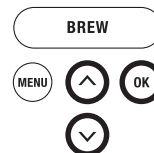1. Press the 'MENU' button. The menu programming options will appear on the LCD screen with a blinking indicator on 'CLOCK SET'.
2. Press the  button to reach 'BREW SIZE'. Press the 'OK' button. The LCD screen will indicate the default brew size (7.25 oz.).



3. Press  button



Select fr
a small r
oz. servi

4. Once
button
progra
5. To exit
'MENU'
to rea
The L
and in

- will return
- press
- he
- ess the
- to the
3. Press the  button to go up in size or the  button to go down in size.

Select from a stronger small cup (5.25 oz. serving), a small mug (7.25 oz. serving), a large mug (9.25 oz. serving) or a travel mug (11.25 oz. serving).

Note

- over
- W
- Note
4. Once the brew size is selected, press the 'OK' button. The LCD screen will return to the menu programming options.
 5. To exit the menu programming options, press the 'MENU' button. Alternatively, press the  button to reach 'EXIT MENU' and press the 'OK' button. The LCD screen will return to the main screen and indicate the brew size selected.
- rough
- st often.
- gramming
- with a 
- ZE'.
- will

Care and cleaning

Before cleaning, ensure the Brewer has been turned off. Switch off at the wall outlet, unplug the power cord and allow the machine to cool.

Cleaning the brewer housing

Regular cleaning of the Brewer's housing and external components is recommended.

1. Never immerse the Brewer in water or other liquids. Wipe the housing with a soft, damp cloth then dry thoroughly.

Do not use abrasive scouring pads or cleaners when cleaning the housing as they may scratch the surface.


Note

2. The Drip Tray and Drip Tray Plate can accumulate up to 12 oz. of overflow. The water level indicator visible through the Drip Tray Plate will pop up when this occurs. The Drip Tray and Drip Tray Plate should then be removed, emptied and cleaned. To remove the Drip Tray assembly, slide it toward you, keeping it level at all times to avoid spilling. Wash both parts in warm soapy water with a soft cloth, then rinse and dry thoroughly. The Drip Tray and Drip Tray Plate are also top-shelf dishwasher safe.

Cleaning the K-Cup® Holder

Regular cleaning of the K-Cup® Holder is recommended.

1. Raise the Safety Locking Arm and remove the K-Cup® Holder from the Brewing Chamber (refer to Brewing with the My K-Cup® Accessory, page 12)
2. Disassemble the K-Cup® Holder by pulling downwards on the Funnel located at the base of the Holder.

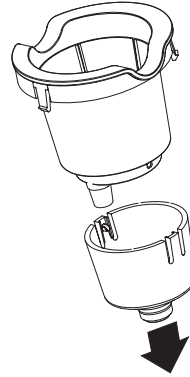

3. Wash both parts in warm soapy water with a soft cloth, then rinse and dry thoroughly. The K-Cup® Holder and Funnel are also top-shelf dishwasher safe.

The K-Cup® Holder houses a needle in the inside base. Should a clog arise due to coffee grinds, it can be cleaned using a paper clip or similar tool. Insert the paper clip into the Needle to loosen the clog and push it out. To avoid risk of injury, do not put your fingers in the K-Cup® Holder.

Note

4. After cleaning, place the Funnel back onto the K-Cup® Holder.
5. Place the assembled K-Cup® Holder back into the Brewing Chamber, aligning the arrow ▲ on the K-Cup® Holder with the arrow ▼ in the Brewing Chamber. Use caution when doing this as there is a sharp needle on the underside of the Brewing Chamber Head that punctures the K-Cup®.

Cleaning the My K-Cup® accessory

Regular cleaning of the My K-Cup® accessory is recommended.

1. Remove the assembled My K-Cup® Holder from the Brewer by raising the Safety Locking Arm. Use caution as the My K-Cup® Holder will be hot.

2. Disassemble the Lid and direct the Lid into the Drip Tray Holder.
3. Wash the Lid in warm soapy water, then rinse and dry thoroughly. The Lid is also top-shelf dishwasher safe.
4. Store the Lid on the My K-Cup® Holder shelf of the Brewer.

Cleaning the Drip Tray

1. Wipe the Drip Tray with a soft cloth, then dry thoroughly. The Drip Tray is also top-shelf dishwasher safe.
2. Wash the Drip Tray Plate in warm soapy water, then rinse and dry thoroughly. The Drip Tray Plate is also top-shelf dishwasher safe.

Rinse the Drip Tray Plate to ensure that all coffee grinds remain on the Drip Tray Plate. Do not supply it to the Drip Tray.

Cleaning the Brewing Chamber

Regular cleaning of the Brewing Chamber is recommended. We suggest that the Brewing Chamber Head be replaced every 6 months.

1. Disassemble the Brewing Chamber Head by pulling downwards on the Lower Safety Locking Arm. Discard the Brewing Chamber Head.
2. Wash the Brewing Chamber Head in warm soapy water, then rinse and dry thoroughly. The Brewing Chamber Head is also top-shelf dishwasher safe.

2. Disassemble the My K-Cup® Holder by removing the Lid from the Holder in a counter-clockwise direction. Remove the Filter Basket from the Holder, discard the grounds.
3. Wash the Lid, Filter Basket and Holder in warm soapy water with a soft cloth, then rinse and dry thoroughly. All parts K-Cup® Holder are also top-shelf dishwasher safe.
4. Store the assembled My K-Cup® Holder in the My K-Cup® Storage compartment located on top of the Brewer.

Replace the Charcoal Filter every 2 months, or 60 tank refills, more if you have hard water.

Note

To order replacement Charcoal Filters, call Breville Customer Service on 1-866-BREVILLE or visit www.breville.com.

We recommend removing the Water Filter if you choose not to replace the Charcoal Filter every 2 months, as the filter may clog and affect the smell and taste of the water.

Cleaning the water tank and lid

1. Wipe the Water Tank Lid with a soft, damp cloth then dry thoroughly. The Lid should not be put into the dishwasher.
2. Wash the Water Tank in warm soapy water with a soft cloth, then rinse and dry thoroughly. Do not dry the inside of the Tank with a cloth as lint may remain. The Water Tank should not be put into the dishwasher.

Rinse the Water Tank thoroughly after cleaning to ensure that no cleaners or cleaning solutions remain as they may contaminate the water supply in the Brewer.

Note

Descaling the brewer

Mineral content in water varies from place to place. Depending on the mineral content of the water in your area, calcium deposits or scale may build up in your Brewer. Scale is non-toxic, but left unattended, it can hinder the Brewer's performance. Descaling your Brewer helps maintain the heating element, and other internal parts of the Brewer that come in contact with water.

The Brewer should be descaled every 3-6 months to ensure optimal performance. It is possible for calcium deposits to build up faster, making it necessary to descale more often.

This Brewer is equipped with sensors to detect when scale buildup is interfering with the performance of the Brewer. When this is detected, the LCD screen will indicate 'DESCALE'.

Cleaning the water filter

Regular cleaning of the Water Filter is recommended. We suggest doing this when the Charcoal Filter is replaced every 2 months or 60 tank refills.

1. Disassemble the Water Filter by removing the Lower Filter Holder from the Upper Filter Holder. Discard the Charcoal Filter.
2. Wash the Upper and Lower Filter Holder in warm soapy water with a soft cloth, then rinse and dry thoroughly. Both parts are also top-shelf dishwasher safe.




Care and cleaning continued

The Brewer will continue to operate even when the LCD screen indicates 'DESCALE'.

Note

However, if you do not descale the Brewer soon after it is displayed, continued scale build-up could damage the Brewer. If this occurs, 'DESCALE' will begin to flash, alerting you to the potential damage to the Brewer if you do not descale immediately.

Promptly follow these steps each time the LCD screen indicates 'DESCALE' to ensure the Brewer functions optimally.

1. Empty the Water Tank.
2. Pour 60 oz. of vinegar into the Water Tank, filling to just below the top edge of the clear viewing area.
3. Place a 12 oz. or larger ceramic cup (do not use a plastic cup) on the Drip Tray. The Drip Tray and Drip Tray Plate can be removed to accommodate taller mugs and travel mugs.
4. Select the largest brew size (11.25 oz. serving) by pressing the  button on the control panel.
5. Run a cleansing brew without a K-Cup[®] (refer to Brewing Hot Water, page 15). Pour the contents of the cup into the sink.
6. Repeat the cleansing brew process until the Water Tank is empty, pouring the contents of the cup into the sink after each cycle. Remember to raise and lower the Safety Locking Arm between each cycle so the control panel buttons illuminate.
7. Let the Brewer stand for at least 4 hours while still on.
8. Rinse the Water Tank thoroughly and fill with fresh water.
9. Place a 12 oz. or larger ceramic cup (do not use a plastic cup) on the Drip Tray.
10. Run a cleansing brew without a K-Cup[®] (refer to Brewing Hot Water, page 15). Pour the contents of the cup into the sink.

11. Repeat the cleansing brew process until the Water Tank is empty, pouring the contents of the cup into the sink after each cycle. You may need to perform additional rinse cycles if you notice any residual taste. Remember to raise and lower the Safety Locking Arm between each cycle so the control panel buttons illuminate.
12. The machine is now ready for use.

If the LCD screen continues to indicate 'DESCALE' after completing the process, repeat the process above.

Note

Storage

Before cleaning or moving the Brewer to a different location, ensure the Brewer has been turned off. Switch off at the wall outlet, unplug the power cord and allow the machine to cool. The Water Tank should be emptied and dried thoroughly.

- Store your Brewer in its upright position to avoid water leakage from the inner tank.
- Store your Brewer in a frost free environment. Storing the Brewer in a cold environment runs the risk of water freezing inside the Brewer and causing damage. If your Brewer has been stored in an environment below freezing, ensure to let it warm to room temperature for at least 2 hours before using.
- When preparing to use the Brewer after storage, we recommend rinsing the Water Tank with fresh water and running three cleansing brews without a K-Cup[®] (refer to Brewing Hot Water, page 15).

Troubleshooting

Possible problem	Easy solution
Brewer will not switch on	<ul style="list-style-type: none"> • Plug the Brewer into an independent outlet. • Check that the Brewer is plugged in securely. • Plug into a different outlet. • Reset circuit breaker if necessary. • Make sure that the Power Switch has been turned on. The Water Tank should be illuminated. The 'BREW' button, ☺ and ☻ buttons should be illuminated.
Brewer will not brew	<ul style="list-style-type: none"> • After placing the K-Cup[®] in the K-Cup[®] Holder, or the My K-Cup[®] Holder into the Brewing Chamber, ensure the Safety Locking Arm is pushed down securely. The LCD screen should indicate 'READY TO BREW'. The ☺ and ☻ buttons should illuminate and the 'BREW' button should illuminate and flash for up to 60 seconds. • If the LCD screen indicates 'REFILL TANK', add water to the Water Tank or make sure the Water Tank is attached correctly to the Brewer (page 15). • If the LCD screen indicates 'REFILL TANK' even after refilling, contact Customer Service on 1-866-BREVILLE (1-866-273-8455). • If the 'BREW' button is not pressed in 60 seconds, the LCD screen will indicate 'OPEN HEAD' and the 'BREW' button will be disabled to prevent accidental activation. To re-activate the brew sequence, open the Brewing Chamber Head by raising and lowering the Safety Locking Arm completely. • The Exit Needle may be clogged (refer Cleaning the K-Cup[®] Holder, page 22).
Coffee is too weak or watery	<ul style="list-style-type: none"> • Reduce the brew size selection for a "stronger" tasting cup of coffee (refer to Setting the 'BREW SIZE' feature, page 20). • Try an Extra Bold K-Cup[®]. They have 30% more ground coffee in each K-Cup[®] portion pack.

There are over 150 varieties of Keurig K-Cups[®] from 13 gourmet partners. For more information on K-Cups[®] or K-Cup[®] ordering, call Breville Customer Service on 1-866-BREVILLE, or visit www.breville.com.

Note

Troubleshooting continued

Possible problem	Easy solution
Brewer dispenses a partial cup	<ul style="list-style-type: none"> • The Exit Needle may be clogged (refer to Cleaning the K-Cup[®] Holder, page 22). • The Water Tank may have been removed during brewing. Replace the Water Tank and perform a cleansing brew without a K-Cup[®] (refer to Brewing Hot Water, page 15). • If the LCD screen indicates 'DESCALE', follow the instructions, Descaling your Brewer (page 23) • If you have repeated the descale procedure on your Brewer two times and the message is still displayed, contact Customer Service on 1-866-BREVILLE (1-866-273-8455).
The time is not displayed on the LCD screen	<ul style="list-style-type: none"> • The time will not be displayed on the LCD screen unless you have set it. To set the clock, follow the instructions, Setting the 'CLOCK SET' feature (page 17). • If power is interrupted to the Brewer, you will need to set the clock again.
Brewer shuts off or turns on automatically	<ul style="list-style-type: none"> • Check to make sure that the 'ON-OFF TIME' and/or the 'AUTO OFF' features have not been set. To do this, press the 'MENU' button and scroll through the programming options. Both the 'ON-OFF TIME' and 'AUTO OFF' features should be 'INACTIVE'. If 'INACTIVE' is not displayed, follow the instructions, Setting the 'ON-OFF TIME' feature (page 17) and Setting the 'AUTO OFF' feature (page 19).
The blue light in the water tank is flashing	<ul style="list-style-type: none"> • The water level is low and a full cup cannot be brewed. Add water to the Water Tank, following the instructions, Re-filling the Water Tank (page 15).

Warr

One year

Breville[®] defects the workmans date of ori does not c commercia the printed warranty f basket, bla disclaims for incide Some stat or limitatio the forego

ANY WARR WITH RES TO THE ON

Some sta of the imp goods, so to you.

This warr may also h state to st

Warranty

One year limited warranty

Breville®* warrants this Breville® appliance against defects that are due to faulty material or workmanship for a period of one (1) year from the date of original consumer purchase. This warranty does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed "Instructions for use" booklet. There is no warranty for glass parts, glass containers, filter basket, blades and agitators. HWI Breville® expressly disclaims all responsibility for consequential damages for incidental losses caused by use of this appliance.

Some states or provinces do not allow this exclusion or limitation for incidental or consequential losses, so the foregoing disclaimer may not apply to you.

ANY WARRANTY OF MERCHANTABILITY OR FITNESS WITH RESPECT TO THIS PRODUCT IS ALSO LIMITED TO THE ONE YEAR LIMITED WARRANTY PERIOD.

Some states or provinces do not allow disclaimer of the implied warranty with respect to consumer goods, so the foregoing disclaimer may not apply to you.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state or province to province.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Center.

Toll free phone number:

1-866-BREVILLE (1-866-273-8455)

Internet email:

AskUs@BrevilleUSA.com

AskUs@Breville.ca (in Canada)

ORIGINAL RECEIPT IS REQUIRED FOR ALL RETURNS

*HWI Breville® products are distributed in Canada by Anglo Canadian Housewares, L.P. and in USA by Metro/Thebe Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>