 


COBY

 
OPERATION MANUAL

CX-CD400 MINI PORTABLE CD STEREO SYSTEM WITH AM/FM TUNER

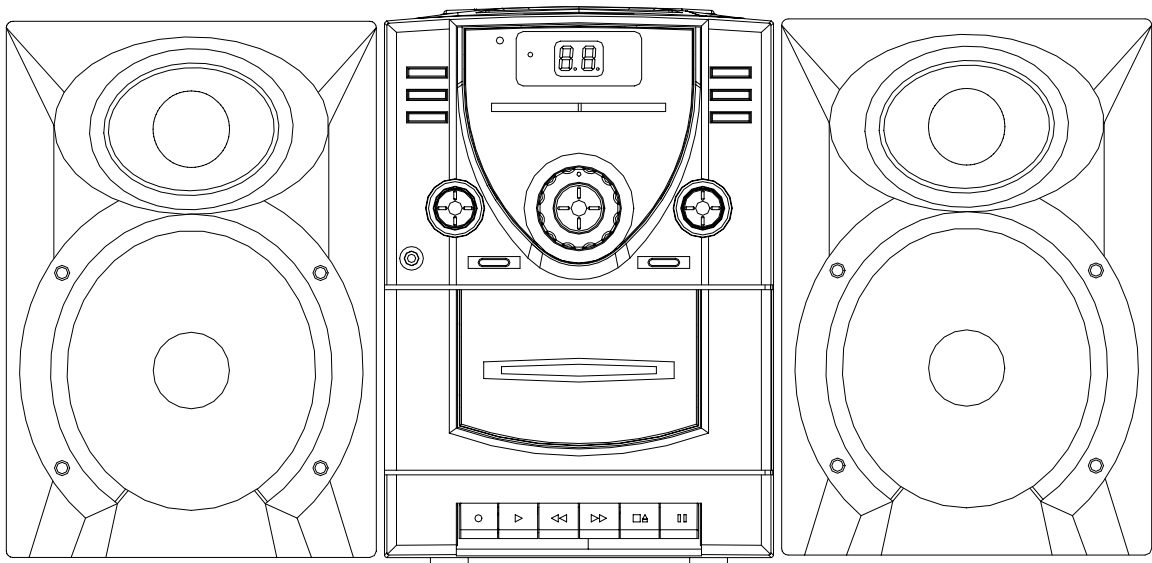


LOCATION OF CONTROLS


Front View

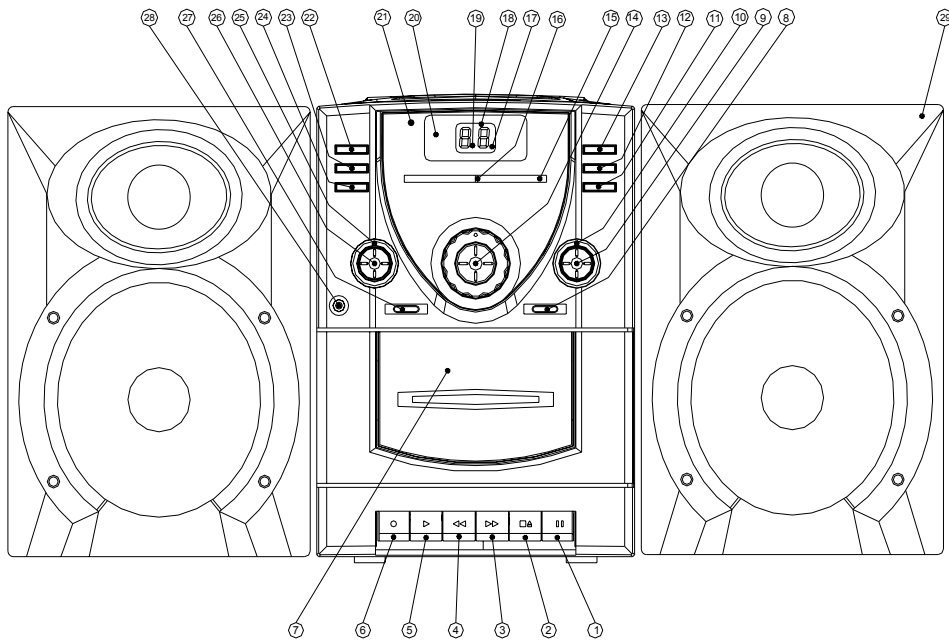

Side View

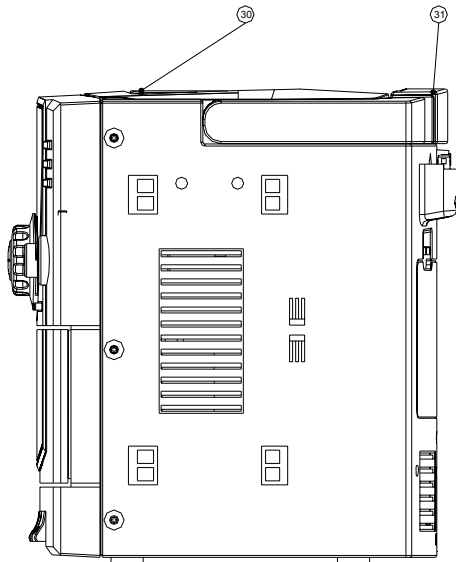 

Rear View

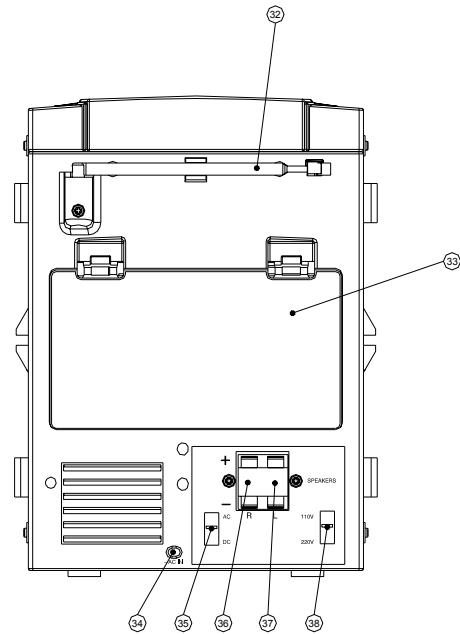 

LOCATION OF CONTROLS (Cont.)

1. PAUSE BUTTON
2. STOP/EJECT BUTTON
3. FAST FORWARD BUTTON
4. REWIND BUTTON
5. PLAY BUTTON
6. RECORD BUTTON
7. CASSETTE COMPARTMENT
8. BAND SWITCH
9. TUNING KNOB
10. FM STEREO INDICATOR
11. REPEAT BUTTON
12. CD FORWARD SKIP/SEARCH BUTTON
13. CD PLAY / PAUSE BUTTON
14. VOLUME CONTROL
15. RADIO DIAL SCALE
16. DIAL POINTER
17. PLAY/PAUSE INDICATOR
18. LED DISPLAY
19. REPEAT 1/ALL INDICATOR
20. PROGRAM INDICATOR
21. REMOTE SENSOR
22. CD STOP BUTTON
23. CD BACKWARD SKIP/SEARCH BUTTON
24. PROGRAM BUTTON
25. POWER INDICATOR
26. POWER SWITCH
27. FUNCTION SWITCH
28. HEADPHONE JACK
29. SPEAKER BOX
30. CD OPEN/CLOSE CONTROL DOOR
31. HANDLE
32. ROD ANTENNA
33. BATTERY COMPARTMENT
34. AC POWER CORD
35. AC/DC VOLTAGE SELECTOR
36. SPEAKER JACK (RIGHT)
37. SPEAKER JACK (LEFT)
38. 110V/220V AC VOLTAGE SELECTOR

GENERAL OPERATION

POWER SOURCES

Before connecting the Unit to an AC outlet, check that the operating voltage of the Unit is identical with the voltage of your local power supply. Connect the supplied AC power cord to the AC in jack.

BATTERY OPERATION

Switch the AC/DC selector to DC position. Open the Battery Compartment Door and insert 8 UM-1 D size batteries, making sure that the indicated battery polarity is observed.

Note: The AC cord must be completely disconnected if no AC/DC selector switch.

RADIO OPERATION

Slide the Function Switch to the RADIO position. Slide the Band Switch, as you prefer. Turn the tuning knob to your desired radio station. Adjust the Volume Controls.

SPEAKER PLACEMENT

This unit features a detachable speaker system. The left and right speaker enclosures can be detached from the main unit, and placed where desired. When the speakers enclosure are attached to the main unit, the unit can be carried to any location desired.

TO ATTACH THE SPEAKER ENCLOSURES

1. Attach the speaker enclosure to the main unit about halfway up, and slide the speaker enclosure to the locked position.
2. Extend the speaker wire to the desired length.
3. Insert the speaker wire plug into the SPEAKER JACK.

TO DETACH THE SPEAKER ENCLOSURE

1. Remove the speaker wire plug from the SPEAKER JACK.
2. Push the RELEASE lever as illustrated and lift the speaker enclosure.
3. Wind the excess speaker wire onto the post, on the back of each speaker enclosure.

FM STEREO INDICATOR

Slide Band Switch to FM position, The FM Stereo indicator is on if stereo broadcasts are received.

ANTENNAS

Fully extend the Telescope Antenna to receive FM and SW (Option) stations. For AM reception the unit has a built-in antenna. Turn the whole unit for best reception.

STEREO HEADPHONE JACK

For private listening, insert the plug of a Stereo Headphone into the Stereo Headphone JACK and adjust Volume Control Knobs, accordingly. During the use of headphone, the External Speakers are automatically disconnected.

CASSETTE OPERATION

Tape A playback only.

Depress the Stop/Eject Button to open the cassette door, insert a cassette into the door and push the cassette door to close. Slide the Function Switch to the TAPE position. Depress the Play Button, Adjust the Volume Control Knobs, to the listening level. To stop the tape, depress the Stop/Eject button.

Tape B playback

Depress the Stop/Eject Button to open the cassette door, Insert a cassette into the door and push the cassette door to close. Slide the Function Switch to the TAPE position. Depress the Play Button. Adjust the Volume Control Knobs to the listening level. To stop the tape, depress the Stop/Eject Button.

Fast Forward and Rewind

The tape be fast advanced or rewind by depressing the Fast Forward button or Rewind Button respectively.

Pause Function

During playback or recording, the tape can be stopped temporarily by depressing the pause Button. To release this button, press it again.

Auto Stop System

When the tape runs to the end during playback or recording, the play button will release itself automatically, stopping the tape at the same time.

RECORDING

A. RECORDING FROM THE BUILT-IN RADIO

1. Tune into the desired station.
2. Load a cassette into the TAPE b cassette compartment
3. Press the PAUSE button of TAPE B
4. Press the RECORD button of TAPE B, which also engages the PLAY button.
5. Press the PAUSE button again to begin recording.

B. DUBBING

Tape A Tape B

Insert the tape to be copied into the Tape A Cassette Door.

Insert the blank tape into the Tape B Cassette Door. Slide the Function switch to the Tape or Dubbing position. For 'NORMAL' or 'HIGH' speed dubbing. Depress Play Button of Tape A and both Record Button of Tape B at the same time. Signals from Tape A will be recorder/dubbed on to Tape B.

CD PLAYBACK

1. Slide the FUNCTION switch to CD position.
2. Press the CD Open/Close button to open the CD compartment.
3. Place a CD on the spindle, label side up.
4. Close the CD compartment. The total number of tracks will be displayed. If the compartment is not close or there is no disc, “- -” sign will be displayed.
5. Press the PLAY/PAUSE button to start playback from the first track and the track number displayed during playback. The ‘Play/Pause LED Indicator’ is light up.

TO INTERRUPT PLAYBACK

1. Press the PLAY/PAUSE button, and play back is interrupted. The ‘Play/Pause LED Indicator’ is flashing.
2. Press the button again to resume playback from the same point.

TO STOP PLAY BACK

Press the STOP button, then the total number of track will displayed again.

PRECAUTIONS

1. Do not open the CD compartment while the disc is rotating.
2. Keep foreign objects out of the CD compartment.
3. If TV or radio interference occurs during CD operation, move the unit away from the TV or RADIO.
4. Subjecting the unit to shock or vibration can cause mistracking.
5. Playing some compact discs at high volume can also cause mistracking. In this case, listen at lower volume.
6. Keep the CD compartment closed except when loading discs.

FF/FR FUNCTION

1. Press the FF button to fast forward the playing program
2. Press the FR button to fast backward the playing program

REPEAT PLAY

1. During PLAY mode, if REPEAT key is pressed. ‘REPEAT 1’ mode is engaged then the ‘REPEAT LED Indicator’ is flashing, and the current will be repeated continuously until ‘STOP’ or ‘REPEAT’ key is pressed.
2. If REPEAT key is pressed when ‘REPEAT 1’ mode is already engaged. ‘REPEAT ALL’ will engage then the ‘REPEAT LED Indicator’ is light up, and the disc will be played repeatedly until ‘ STOP’ or ‘REPEAT’ key is pressed.
3. If REPEAT key is pressed when ‘ REPEAT ALL’ mode is engaged, All REPEAT functions are off.

WARNING

1. TO PREVENT FIRE OR SHOCK HAZARD.
2. DO NOT EXPOSE THE APPLIANCE TO RAIN OR MOISTURE.
3. DO NOT REMOVE COVER.
4. PILOT LAMPS SOLDERED IN PLACE.
5. NO USER SERVICEABLE PARTS INSIDE.
6. REFER SERVICING TO QUALIFIED SERVICE PERSONEL.

MAINTENANCE

CLEANING THE TAPE HEADS

Clean the heads frequently to remove dust and tape residue. Dirt on the heads will impair the sound quality of both recording and playback.

There are two methods for head cleaning

- A. The simple method is to use a head-cleaning cassette, available at most audio stores. Follow the instructions supplied with the closing cassette.
- B. The heads can be also cleaned manually.
 1. Depress the EJECT button of Tape A and Tape B in order to open the cassette.
 2. Depress the PLAY button of Tape A and Tape B.
 3. Wipe the heads with a soft not – free cloth or cotton swab that has been partially soaked in alcohol, until the heads are free of all dirt and residue deposits.

SPECIFICATIONS

GENERAL

Power Supply :	AC 230V ~ 50Hz AC 110/220V ~ 60/50Hz (Option) DC 12V = 8 x “D” (UM-1/R-20) size batteries (not included)
Frequency Range:	AM 530 - 1710 KHz FM 88 - 108 MHz SW 4 - 12 MHz (Option)
Power Consumption:	19 Watts
Output Power:	1.2 Watts RMS per channel x 2 2.5 Watts RMS per channel x 2 (Option) 4.5 Watts RMS per channel x 2 (Option)

Remarks: The manufacturer reserves the right to amend the specification without prior notice.

Version: Rev. 2 (Toshiba IC)

COBY®

90 DAYS LIMITED WARRANTY

COBY ELECTRONICS CORP (“**COBY**”) warrants this product to the original purchaser to be free from defects in material or workmanship under normal use for 90 DAYS from the date of original purchase. **COBY** agree under this warranty, to repair or replace it with a new or reconditioned product at no additional charge.

Our warranty does not cover any product which has been subject to neglect, unreasonable use, accident, violation of operation instructions, or any product that has been repaired or modified by an unauthorized service agent.

To obtain factory service, return this unit freight-prepaid to the address shown below within the duration of this warranty. Enclosed \$ 6.00 for each item in form of money order made payable to **COBY ELECTRONICS CORP**. To cover the cost of shipping and handling. Also include a copy of the sales receipt to show proof of purchase and a detailed description of the problem. The unit(s) must be packaged in such a way as to reasonably protect it from possible shipping damaged. For further information write to:

COBY ELECTRONICS CORP.

Customer Service Dept.

 
56-65 Rust Street

MASPETH, NY 11378

COBY's liability under any legal theory for any loss or damage in any way related to this product shall not be exceed the sales price of this product. In no event shall **COBY** be liable for any incidental or consequential damages resulting from the use of this product, or inability to use this product. Repair or replacement as provided under this warranty is the exclusive right of the customer.

Except to the extent prohibited by law, no express or implied warranty of merchant ability or fitness for a particular purpose on this product shall be extended beyond the period of this warranty. Some States prohibit the exclusion or limitation of incidental or consequential damages, so that the above limitations or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights that may vary from State to State.

COBY CX-CD400 (CD-200) RATING LABEL
SIZE: 47.3 X 25.3 MM

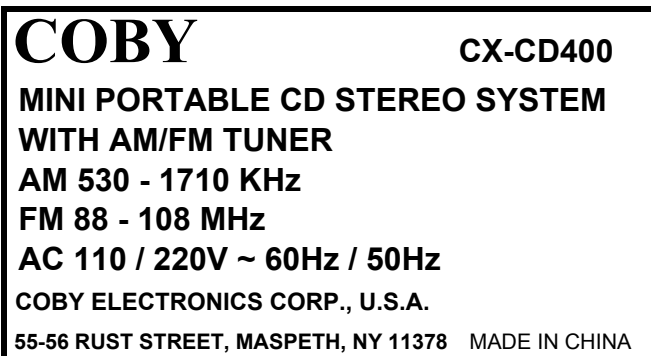

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>