

DENON


AV SURROUND RECEIVER

AVR-488


Owner's Manual

Manuel de l'Utilisateur

SAFETY PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
15. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
16. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
18. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance – this indicates a need for service.
22. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. Heat – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

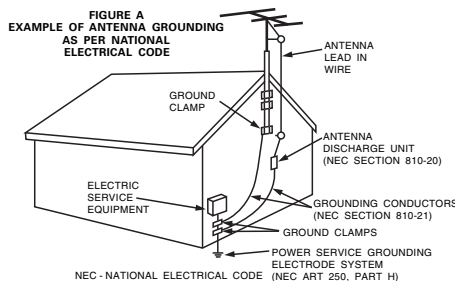

FCC INFORMATION (For US customers)

1. PRODUCT

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.

3. NOTE


This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

NOTE ON USE / OBSERVATIONS RELATIVES A L'UTILISATION

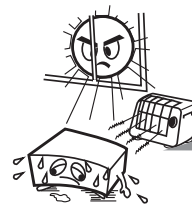


- Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack.
- Éviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.




- Keep the unit free from moisture, water, and dust.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.



- Do not let foreign objects into the unit.
- Ne pas laisser des objets étrangers dans l'appareil.

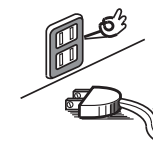

- Unplug the power cord when not using the unit for long periods of time.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.

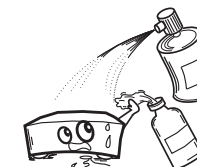

- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.



- Handle the power cord carefully. Hold the plug when unplugging the cord.
- Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.



* (For apparatuses with ventilation holes)

- Do not obstruct the ventilation holes.
- Ne pas obstruer les trous d'aération.



- Never disassemble or modify the unit in any way.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.

Contents

Getting Started

| | |
|--|---|
| Accessories | 2 |
| Cautions on Handling | 2 |
| Cautions on Installation | 2 |
| About the Remote Control Unit | 3 |
| Inserting the Batteries | 3 |
| Operating Range of the Remote Control Unit | 3 |
| Part Names and Functions | 4 |
| Front Panel | 4 |
| Display | 4 |
| Rear Panel | 5 |
| Remote Control Unit | 6 |

Connections

| | |
|--|----|
| Preparations | 7 |
| Cables Used for Connections | 7 |
| Speaker Connections | 8 |
| Speaker Installation | 8 |
| Speaker Connections | 9 |
| Connecting Equipment with HDMI connectors | 10 |
| Connecting the Monitor | 11 |
| Connecting the Playback Components | 11 |
| DVD Player | 11 |
| CD Player | 12 |
| iPod® | 12 |
| TV/CABLE Tuner | 13 |
| Connecting the Recording Components | 13 |
| Video Cassette Recorder | 13 |
| CD Recorder / MD Recorder / Tape Deck | 14 |
| Connections to Other Devices | 14 |
| Video Camera / Game Console | 14 |
| Component with Multi-channel Output connectors | 15 |
| XM connector | 15 |
| Antenna terminals | 16 |
| Connecting the Power Cord | 17 |
| Once Connections are Completed | 17 |

Operations

| | |
|--|----|
| Menu Map | 18 |
| Examples of Front Display | 18 |

System Setup

| | |
|---|----|
| Operations | 19 |
| Example of Display of Default Values | 19 |
| Speaker Setup | 20 |
| 1 ~ 4 Speaker Configuration | 20 |
| 5 Subwoofer Mode Setup | 20 |
| 6 ~ 11 Distance | 20 |
| 12 Crossover Frequency | 21 |
| 13 Test Tone | 21 |
| Input Setup | 22 |
| 1 , 2 HDMI In Assign | 22 |
| 3 ~ 6 Digital In Assign | 22 |
| 7 iPod Assign | 22 |
| 8 EXT. IN Subwoofer Level | 22 |
| 9 Auto Preset Memory | 23 |
| 10 Antenna Aiming | 23 |
| Option Setup | 23 |
| 1 ~ 3 Volume Control | 23 |
| 4 Auto Surround Mode | 24 |
| 5 Remote ID Setup | 24 |

Surround Modes

| | |
|--|----|
| Standard Playback | 25 |
| Surround Playback of 2-channel Sources | 25 |
| Playing Multi-channel Sources (Dolby Digital, DTS, etc.) | 25 |
| DSP Simulation Playback | 25 |
| Stereo Playback | 26 |
| Direct Playback | 26 |

Parameter

| | |
|---------------------------------|----|
| Surround Parameter | 26 |
| Tone Control | 27 |
| RESTORER | 28 |
| Night Mode | 28 |

Information

| | |
|-----------------------------------|----|
| 1 Status | 28 |
| 2 Audio Input Signal | 28 |

Playback

| | |
|---|--------|
| Preparations | 29 |
| Turning the Power On | 29 |
| Selecting the Input source | 29 |
| Setting the Input Mode | 29 |
| Operations During Playback | 29, 30 |
| Playing Video and Audio Equipment | 30 |
| Basic Operation | 30 |
| Listening to FM/AM Broadcasts | 30 |
| Basic Operation | 30 |
| Presetting Radio Stations (Preset Memory) | 31 |
| Listening to Preset Stations | 31 |
| Listening to XM Satellite Radio Programs | 32 |
| Basic Operation | 32 |
| Checking the XM Signal Strength and Radio ID | 32 |
| Searching Categories | 33 |
| iPod® Playback | 33 |
| Basic Operation | 33 |
| Listening to Music in the Browse mode | 34 |
| Viewing Still Pictures or Videos on the iPod | 34 |

Other Operations and Functions

| | |
|--|----|
| Other Operations | 35 |
| Recording on an External Device (REC OUT mode) | 35 |
| Convenient Functions | 35 |
| Channel Level | 35 |
| Quick Select Function | 36 |
| Personal Memory Plus Function | 36 |
| Last Function Memory | 36 |
| Backup Memory | 36 |
| Resetting the Microprocessor | 36 |

Remote Control Unit Operations

Operating DENON Audio Components 37

Presetting 37

Operating Preset components 37 ~ 39

Punch Through Function 40

Other Information 41 ~ 45

Troubleshooting 46, 47

Specifications 48

List of preset codes End of this manual

Getting Started

Thank you for purchasing this DENON product. To ensure proper operation, please read this owner's manual carefully before using the product.

After reading them, be sure to keep them for future reference.

Accessories

Check that the following parts are supplied with the product.

① Owner's manual 1

② Getting Started 1

③ Warranty (for North America model only) 1



④ Service station list 1

⑤ Remote control (RC-1079) 1

⑥ R6P/AA batteries 2

⑦ FM indoor antenna 1

⑧ AM loop antenna 1

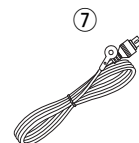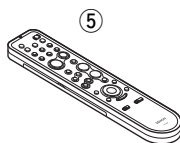

Cautions on Handling

• Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

• Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

• About condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

• Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.

• Moving the unit

Turn off the power and unplug the power cord from the power outlet.


Next, disconnect the connection cables to other system units before moving the unit.

• Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

Cautions on Installation

Note:

For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

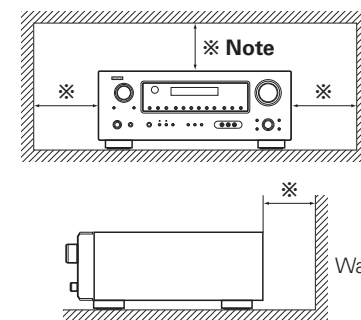


About the Remote Control Unit

In addition to the AVR-488, the included remote control unit (RC-1079) can also be used to operate the equipment listed below.

- ① DENON system components
- ② Non-DENON system components
 - By setting the preset memory (page 37 ~ 39)

Inserting the Batteries

- ① Lift the clasp and remove the rear lid.
- ② Load the two batteries properly as indicated by the marks in the battery compartment.

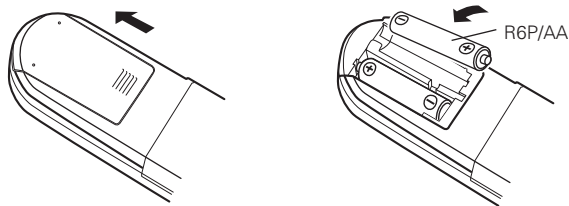


- ③ Put the rear cover back on.

NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the “⊕” and “⊖” marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Operating Range of the Remote Control Unit

Point the remote control unit at the remote sensor when operating it.

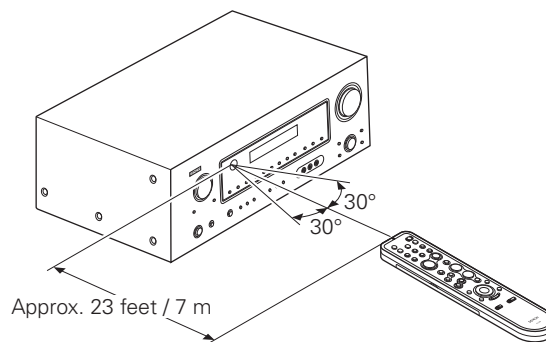


NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Part Names and Functions

For buttons not explained here, see the page indicated in parentheses ().

Front Panel

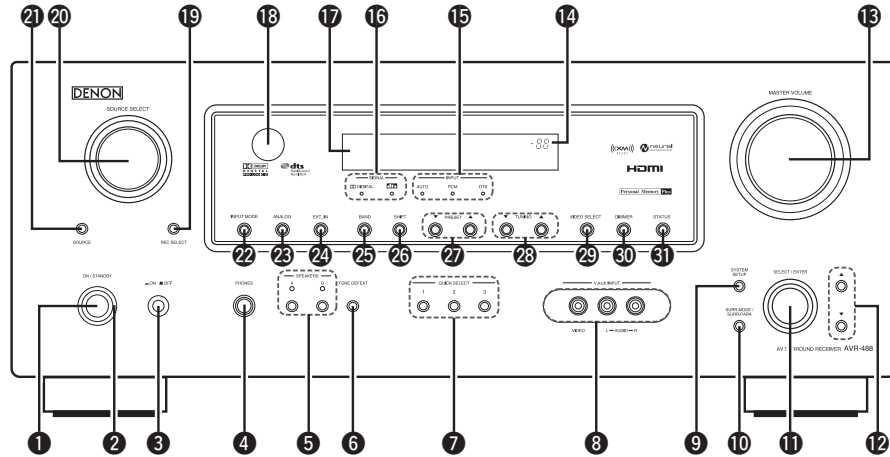


- 1 Power operation button (ON/STANDBY) (29)
- 2 Power indicator (29)
- 3 Power switch (ON/OFF) (29, 36)
- 4 Headphones jack (PHONES) (30)
- 5 SPEAKER buttons (30, 36)
- 6 TONE DEFEAT button (27)
- 7 QUICK SELECT buttons (36)
- 8 V. AUX INPUT connectors
Remove the cap covering the connectors when you want to use them.
- 9 SYSTEM SETUP button (19)
- 10 SURR. MODE / SURR. PARA button (26)

- 11 SELECT / ENTER knob (19, 25)
 - The SELECT/ENTER knob on the main unit operates in the same way as the CURSOR ◀ and ▶ buttons on the remote control unit.
- 12 Cursor buttons (Δ ▽) (19)
- 13 MASTER VOLUME control knob (29)
- 14 Master volume indicator
- 15 INPUT mode indicators (29)




- 16 SIGNAL indicators
- 17 Display
- 18 Remote control sensor (3)
- 19 REC SELECT button (35)
- 20 SOURCE SELECT knob (29)
- 21 SOURCE button (29)
- 22 INPUT MODE button (29)
- 23 ANALOG button (29)
- 24 EXT. IN button (29)
- 25 BAND button (30)
- 26 SHIFT button (31)
- 27 PRESET CHANNEL buttons (31)
- 28 TUNING buttons (30)
- 29 VIDEO SELECT button (30)
- 30 DIMMER button (30)
- 31 STATUS button (30)

Display

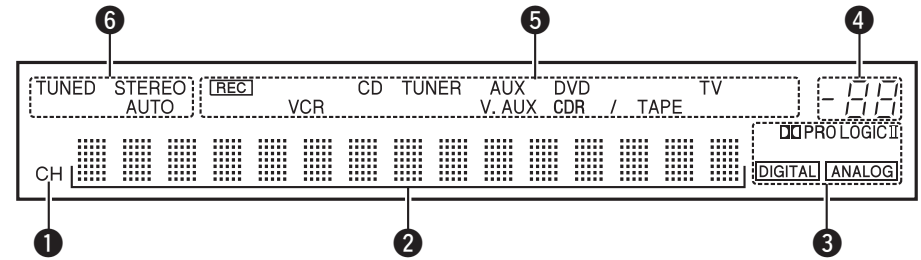

- 1 Signal channel indicator
Lights when the preset channel is displayed at 2.
- 2 Information display
- 3 Input signal indicators
- 4 Master volume indicator
This displays the volume level.
The Setup item number is displayed in System Setup.
- 5 REC SELECT indicator
Lights while selecting the REC SELECT mode.
(Off when the "SOURCE" is selected.)
- 6 Tuner reception mode indicators
These light according to the reception conditions when the input source is set to "TUNER".
 - AUTO
This lights when in the auto tuning mode.
 - STEREO
In the FM mode, this lights when receiving analog stereo broadcasts.
 - TUNED
This lights when the broadcast is properly tuned in.


Rear Panel

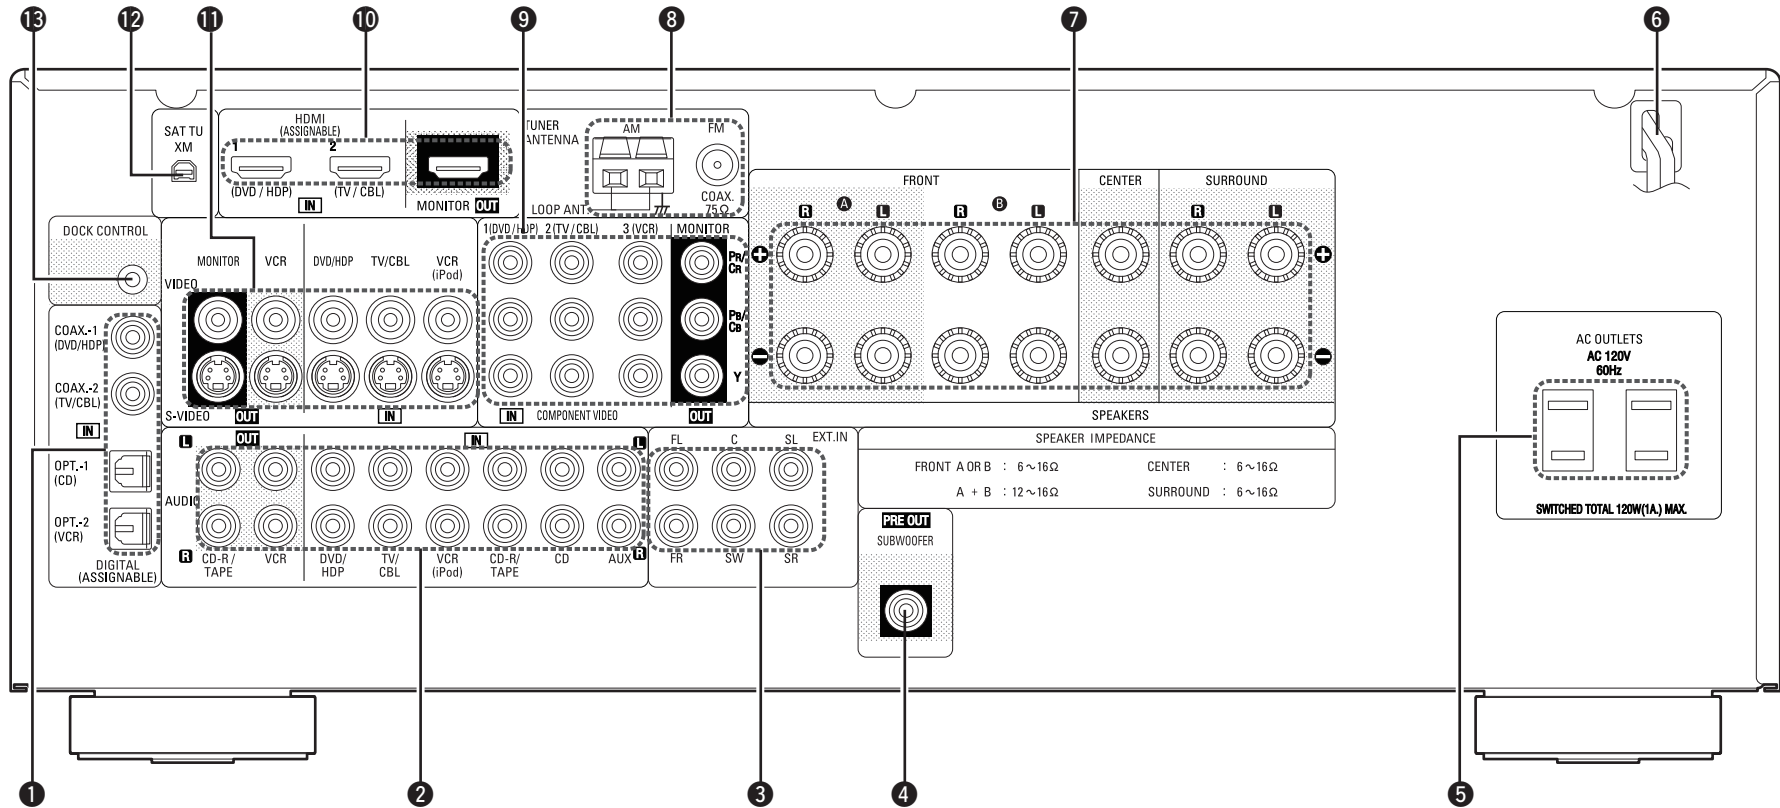

- ① Digital audio connectors (OPTICAL / COAXIAL) (11 ~ 13)
- ② Analog audio connectors (AUDIO) (11)
- ③ EXT. IN connectors (15)
- ④ PRE OUT connector (9)
- ⑤ AC OUTLETS (17)
- ⑥ Power cord (17)
- ⑦ Speaker terminals (SPEAKERS) (9)
- ⑧ FM/AM antenna terminals (TUNER ANTENNA) (16)
- ⑨ COMPONENT VIDEO connectors (11)
- ⑩ HDMI connectors (10)
- ⑪ VIDEO / S-VIDEO connectors (11)
- ⑫ XM connector (SAT TU) (15)
- ⑬ DOCK CONTROL jack (12)


Remote Control Unit

[Front]

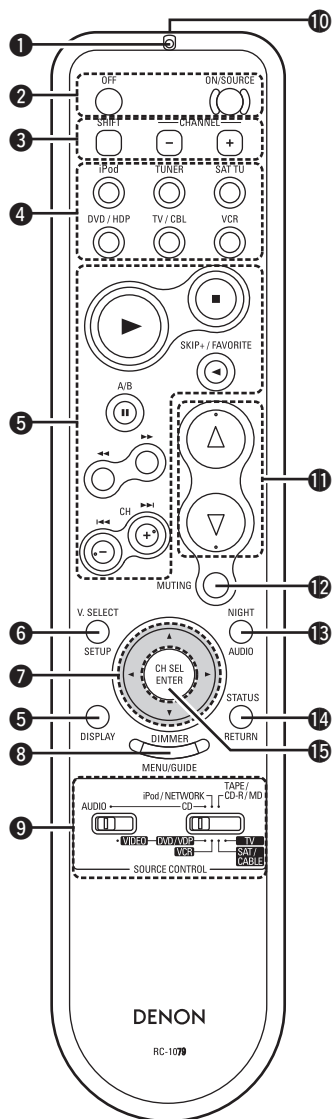

- ❶ Indicator (37)
- ❷ Power buttons (29)
- ❸ Tuner system buttons (31, 34)
- ❹ Source select buttons (29)
- ❺ System buttons (34, 38)
- ❻ Video select button (V. SELECT) (30)
- ❼ Cursor buttons (Δ▽◀▶) (19)
- ❽ DIMMER button (30)
- ❾ Mode selector switches (30)
- ❿ Remote control signal transmitter
- ⓫ MASTER VOLUME control buttons (29)
- ⓬ MUTING button (30)
- ⓭ NIGHT button (28)
- ⓮ STATUS button (28)
- ⓯ Channel select (CH SEL) / ENTER button (19, 35)

[Rear]

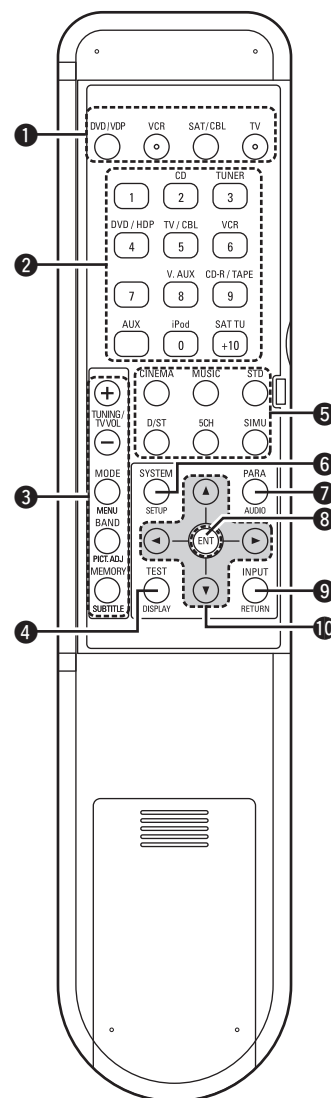

- ❶ Power buttons (37, 39)
- ❷ Source select buttons (29)
- ❸ Tuner system buttons (30, 31, 39)
- ❹ Test tone button (TEST) (21)
- ❺ Surround mode buttons (25, 26)
- ❻ System setup button (SYSTEM) (19)
- ❼ Surround parameter button (PARA) (26)
- ❽ Enter button (ENT) (19)
- ❾ Input mode button (INPUT) (29)
- ❿ Cursor buttons (Δ▽◀▶) (19)

NOTE

If buttons on the front or rear are pressed strongly, the button on the opposite side will be activated too.

Connections

Connections for all compatible audio and video signal formats are described in these operating instructions. Please select the types of connections suited for the equipment you are connecting. With some types of connections, certain settings must be made on the AVR-488. For details, refer to the instructions for the respective connection items below.















NOTE

- Do not plug in the power cord until all connections have been completed.
- When making connections, also refer to the operating instructions of the other components.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power cords together with connection cables. Doing so can result in humming or noise.

Preparations

Cables Used for Connections


Select the cables according to the equipment being connected.
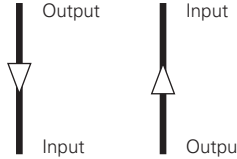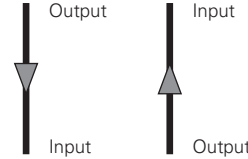
| Audio cables | Video cables |
|---|--|
| <p>Coaxial digital connections</p> <p>(Orange)  Coaxial digital (75 Ω/ohms pin-plug) cable</p> <p>Optical digital connections</p> <p> Optical cable</p> <p>Analog connections (stereo)</p> <p>(White)   (Red)</p> <p style="text-align: center;">Stereo pin-plug cable</p> <p>Analog connections (monaural, for subwoofer)</p> <p>(Black)  Pin-plug cable</p> <p>Speaker connections</p> <p> Speaker cables</p> | <p>Component video connections</p> <p>(Green)  (Y) (Blue)  (PB/CB) (Red)  (PR/CR)</p> <p style="text-align: center;">Component video cable</p> <p>S-Video connections</p> <p> S-Video cable</p> <p>Video connections</p> <p>(Yellow)  75 Ω/ohms pin-plug video cable</p> |
| Audio and video cables | |
| <p>HDMI connections</p> <p> 19-pin HDMI cable</p> | |
| Signal direction | |
| <p>Audio signal:  Video signal: </p> | |

Speaker Connections

Speaker Installation

The illustration below shows a basic example of installation of the amplifier combined with 6 speakers and a monitor.

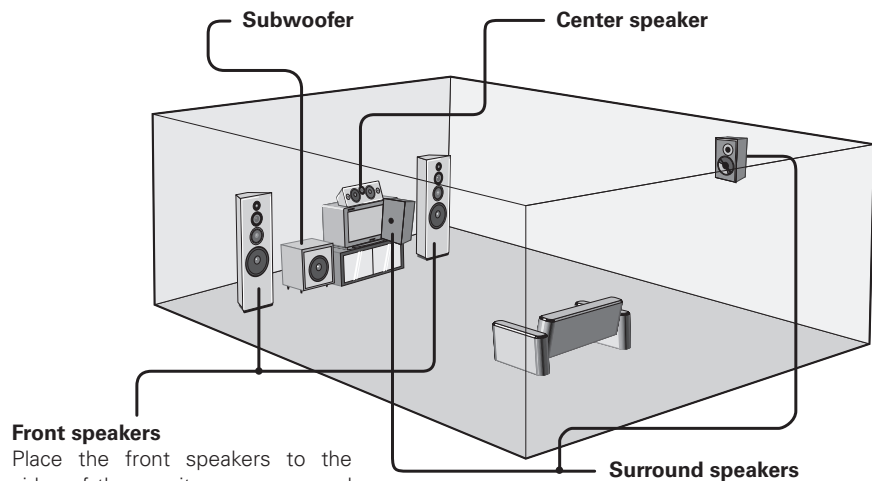

Front speakers

Place the front speakers to the sides of the monitor or screen and as flush with the screen surface as possible.




The table below shows a typical speaker configuration for the AVR-488.

| | FRONT | | CENTER | SURROUND | | SUBWOOFER |
|--------------|-------|---|--------|----------|---|-----------|
| | L | R | | L | R | |
| 5.1-channels | ○ | ○ | ○ | ○ | ○ | ○ |
| 3.1-channels | ○ | ○ | ○ | - | - | ○ |
| 2.1-channels | ○ | ○ | - | - | - | ○ |
| 2-channels | ○ | ○ | - | - | - | - |

Speaker Connections

Example: 5.1-channels (FRONT A+B)

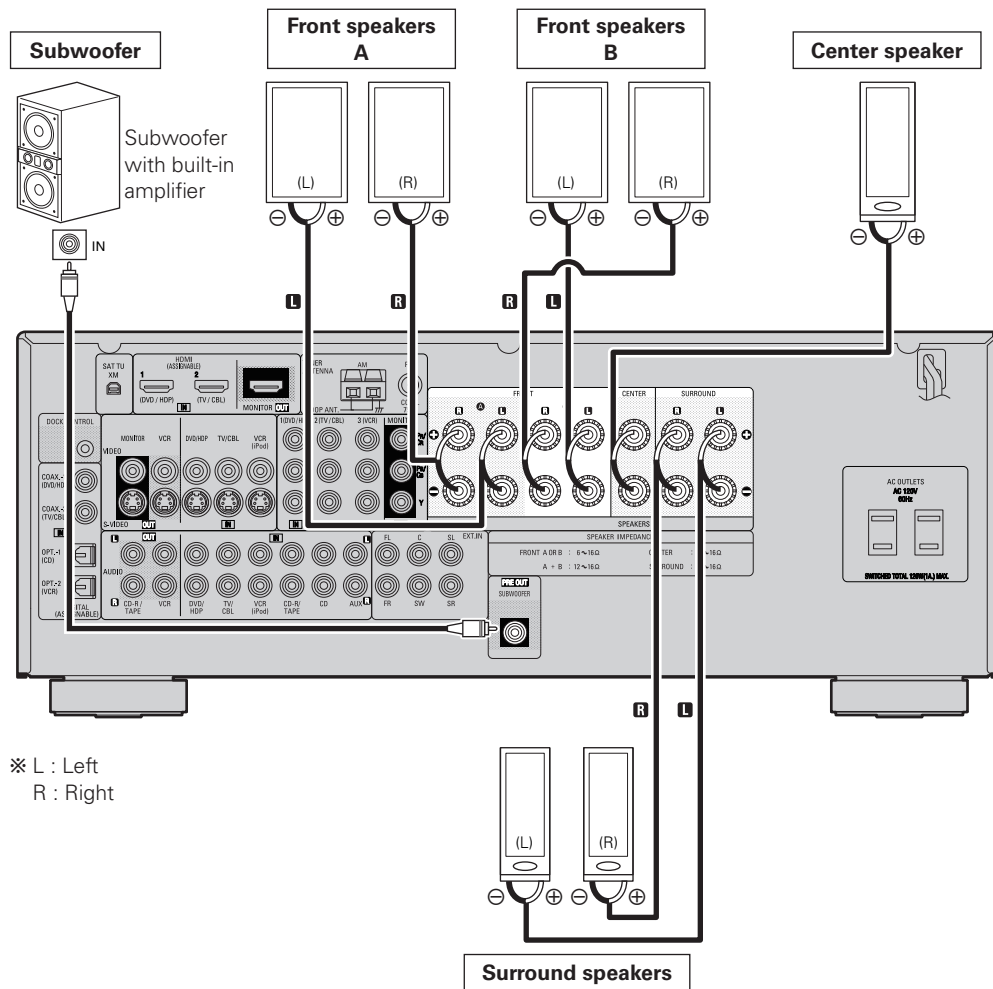

※ L : Left
R : Right

Connecting the Speaker Cables

Carefully check the left (L) and right (R) channels and + (red) and - (black) polarities on the speakers being connected to the AVR-488, and be sure to interconnect the channels and polarities correctly.

1 Peel off about 0.03 ft/10 mm of sheathing from the tip of the speaker cable, then either twist the core wire tightly or terminate it.



2 Turn the speaker terminal counterclockwise to loosen it.



3 Insert the speaker cable's core wire to the hilt into the speaker terminal.




4 Turn the speaker terminal clockwise to tighten it.



When using a banana plug

Tighten the speaker terminal firmly before inserting the banana plug.

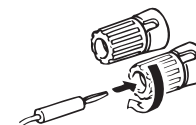

NOTE

- Use speakers with an impedance of 6 to 16 Ω /ohms. When using front A and B speakers simultaneously, use speakers with an impedance of 12 to 16 Ω /ohms.
- Connect the speaker cables in such a way that they do not stick out of the speaker terminals. The protection circuit may be activated if the core wires touch the rear panel or if the + and - sides touch each other (☞ "Protection circuit").
- Never touch the speaker terminals while the power supply is connected. Doing so could result in electric shock.

Protection circuit


If speakers with an impedance lower than specified (for example 4 Ω /ohms speakers) are used for an extended period of time with the volume turned up high, the temperature may rise, activating the protection circuit.

When the protection circuit is activated, the speaker output is shut off and the power indicator flashes red. If this happens, unplug the power cord, then check the speaker cable and input cable connections. If the set is extremely hot, wait for it to cool off and improve ventilation around it. Once this is done, plug the power cord back in and turn the set's power back on.

If the protection circuit is activated again even though there are no problems in the ventilation around the set nor in the connections, the set may be damaged. Turn the power off, then contact a DENON service center.

Connecting Equipment with HDMI connectors

With HDMI connections, the video and audio signals can be transferred with a single cable.

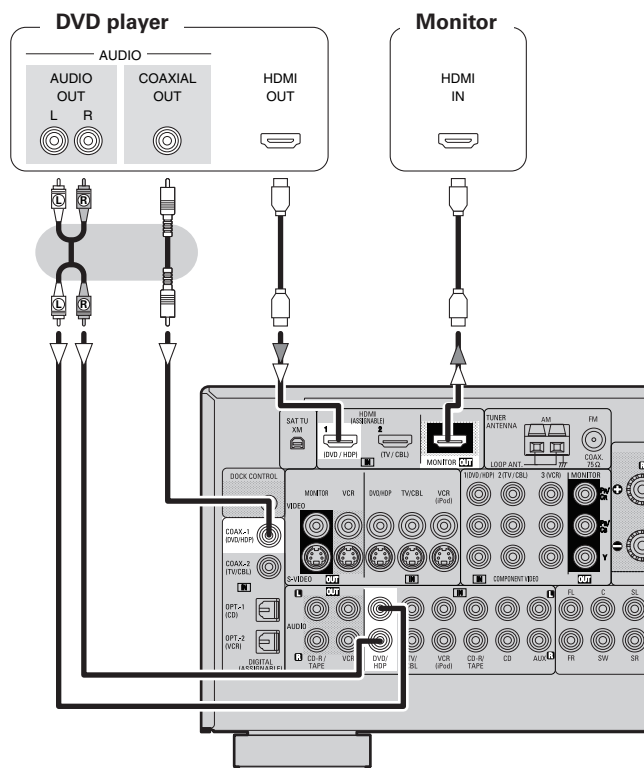

- ※ The AVR-488 is equipped for HDMI version 1.3a. This version is compatible with other versions, allowing connection to all components equipped with an HDMI connector.
- ※ The AVR-488 is compatible with 30- and 36-bit Deep Color.
- ※ The AVR-488 can be connected to a device equipped with an HDMI output connector using an HDMI cable.
- ※ The AVR-488 is compatible with HDMI Ver. 1.3a Deep Color and xvYCC.

NOTE

- The audio signal input to the HDMI input connector cannot be played on the AVR-488. Input the audio signal to the digital audio input connector or analog audio input connector.
- The AVR-488 cannot be controlled from another device via the HDMI cable.
- Video signals are not output if the input video signals do not match the monitor's resolution. In this case, switch the DVD player's resolution to a resolution with which the monitor is compatible.
- Use a cable on which the HDMI logo is indicated (a certified HDMI product) for connection to the HDMI connector. Normal playback may not be possible when using a cable other than one on which the HDMI logo is indicated (a non-HDMI-certified product).
- If the monitor or DVD player does not support Deep Color, deep color signal transfer is not possible.
- If the monitor or DVD player does not support xvYCC, xvYCC signal transfer is not possible.




- The audio and video signals input to the AVR-488's HDMI input connector are output unchanged from the HDMI output connector. Because of this, the sound is output from the monitor connected using the HDMI connectors, but in order to take full advantage of the AVR-488's playback sound, turn the TV's volume down.
- If the connected monitor or DVD player only has a DVI-D connector, use an HDMI/DVI converter cable. When using a DVI cable, no audio signals are transmitted.
- Use a Deep Color compatible cable for connection to Deep Color compatible devices.

When connecting with an HDMI/DVI converter cable (adapter)

- HDMI video signals are theoretically compatible with the DVI format. When connecting to a monitor, etc., equipped with a DVI-D connector, connection is possible using an HDMI/DVI converter cable, but depending on the combination of components in some cases the video signals will not be output.
- When connecting using an HDMI/DVI converter adapter, the video signals may not be output properly due to poor connections with the connected cable, etc.

Connecting the Monitor

Connect the cables to be used.

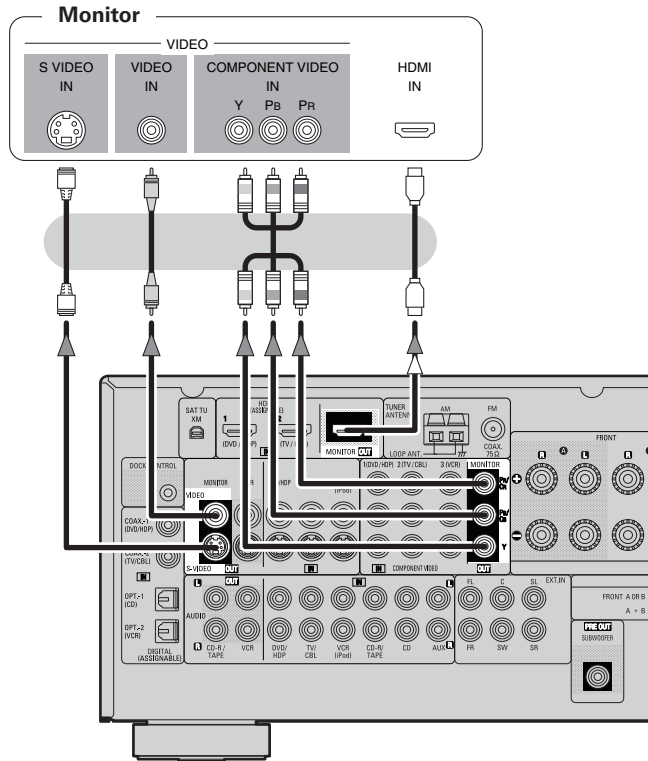

NOTE


- The component video connectors may be indicated differently on your monitor. For details, see the monitor's operating instructions.
- To play the sound by AVR-488, make analog or digital audio output connections to AVR-488's audio input connectors.
- The signals output from the HDMI connectors are only the HDMI input signals.
- AVR-488's S-Video connectors (input and output) and video connectors (input and output) have independent circuit structures, so that video signals input from the S-Video connectors are only output from the S-Video connector outputs and video signals input from the pin connectors are only output from the pin connector outputs.
- The signals input to the component (color difference) video connectors are not output from the VIDEO output connector (yellow) or the S-Video output connector.

Connecting the Playback Components

Carefully check the left (L) and right (R) channels and the inputs and outputs, and be sure to interconnect correctly.

DVD Player


- Connect the cables to be used.
- With HDMI connections, the video and audio signals can be transferred with a single cable.

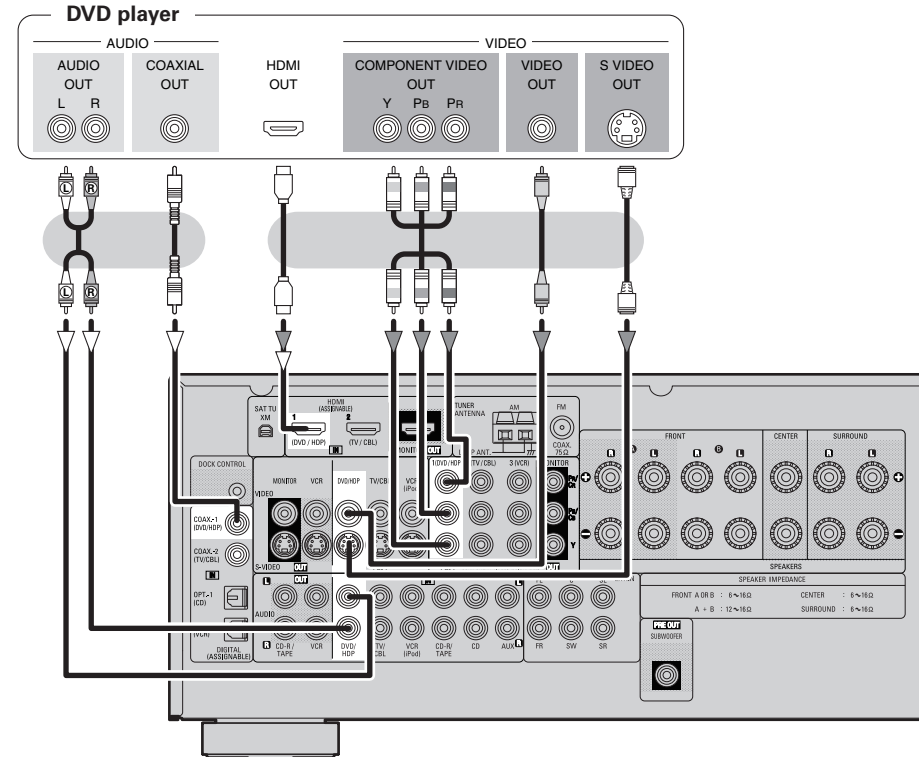

- Connect an HDP (High-Definition Player) in the same way.
- When using an optical cable for the digital audio connection, make the settings at "system Setup" – "Input Setup" – "Digital In Assign" (page 22).
- AVR-488's S-Video connectors (input and output) and video connectors (input and output) have independent circuit structures, so that video signals input from the S-Video connectors are only output from the S-Video connector outputs and video signals input from the pin connectors are only output from the pin connector outputs.
- The signals input to the component (color difference) video connectors are not output from the VIDEO output connector (yellow) or the S-Video output connector.

CD Player


Connect the cables to be used.

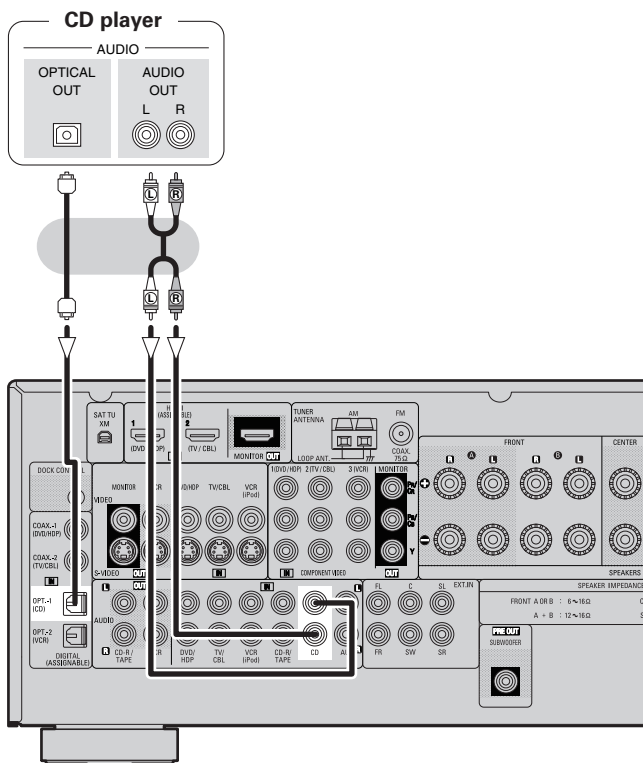

When using an coaxial cable for the digital audio connection, make the settings at "System Setup" – "Input Setup" – "Digital In Assign" (page 22).

iPod®


Use a DENON Control Dock for iPod (ASD-1R, sold separately) to connect the iPod to the AVR-488. For instructions on the Control Dock for iPod settings, refer to the Control Dock for iPod's operating instructions.

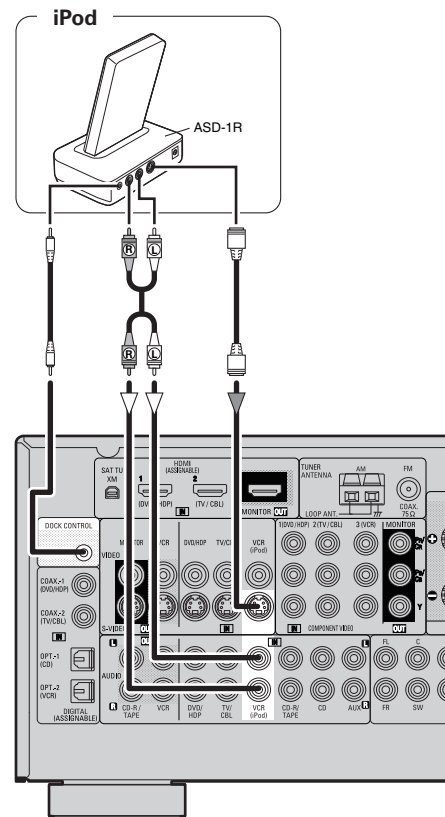

- With the default settings, the iPod can be used connected to the VCR (iPod) connector.
- To assign the iPod to a connector other than VCR (iPod), make the settings at "System Setup" – "Input Setup" – "iPod Assign" (page 22).

TV/CABLE Tuner

Connect the cables to be used.

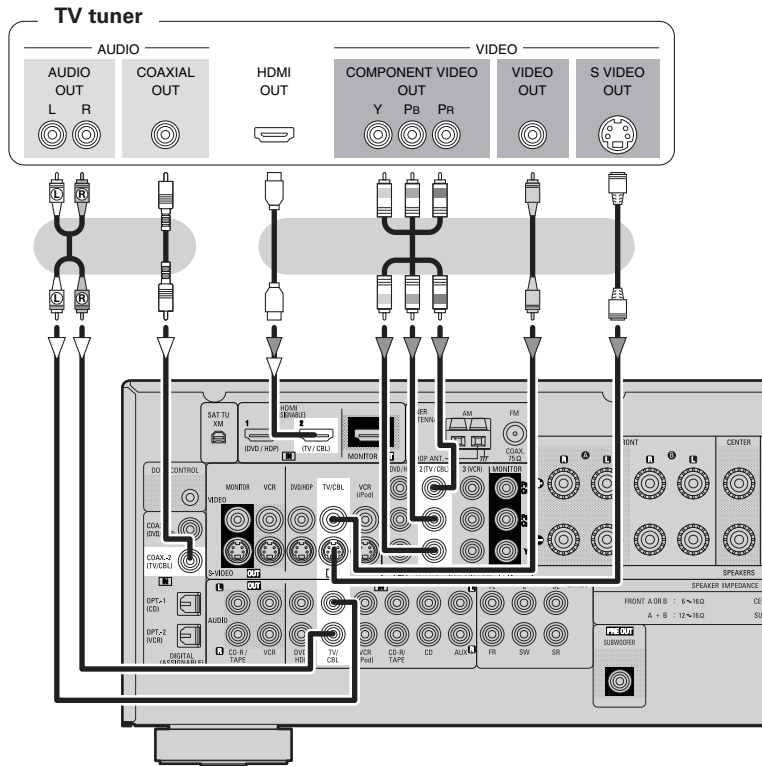


- When using a optical cable for the digital audio connection, make the settings at "System Setup" – "Input Setup" – "Digital In Assign" (page 22).
- AVR-488's S-Video connectors (input and output) and video connectors (input and output) have independent circuit structures, so that video signals input from the S-Video connectors are only output from the S-Video connector outputs and video signals input from the pin connectors are only output from the pin connector outputs.
- The signals input to the component (color difference) video connectors are not output from the VIDEO output connector (yellow) or the S-Video output connector.

Connecting the Recording Components

Carefully check the left (L) and right (R) channels and the inputs and outputs, and be sure to interconnect correctly.

Video Cassette Recorder


Connect the cables to be used.

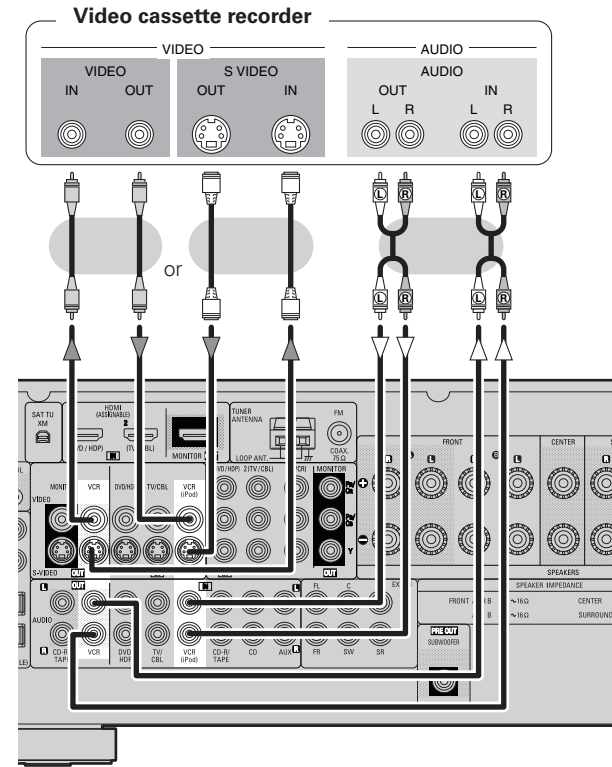

- When recording via the AVR-488, the playback device's cable must be of the same type as the cable used to connect the AVR-488's VCR OUT connector.
Example: TV IN → S-Video cable : VCR OUT → S-Video cable
 TV IN → Video cable : VCR OUT → Video cable
- AVR-488's S-Video connectors (input and output) and video connectors (input and output) have independent circuit structures, so that video signals input from the S-Video connectors are only output from the S-Video connector outputs and video signals input from the pin connectors are only output from the pin connector outputs.
- The signals input to the component (color difference) video connectors are not output from the VIDEO output connector (yellow) or the S-Video output connector.

CD Recorder / MD Recorder / Tape Deck

Connect the cables to be used.

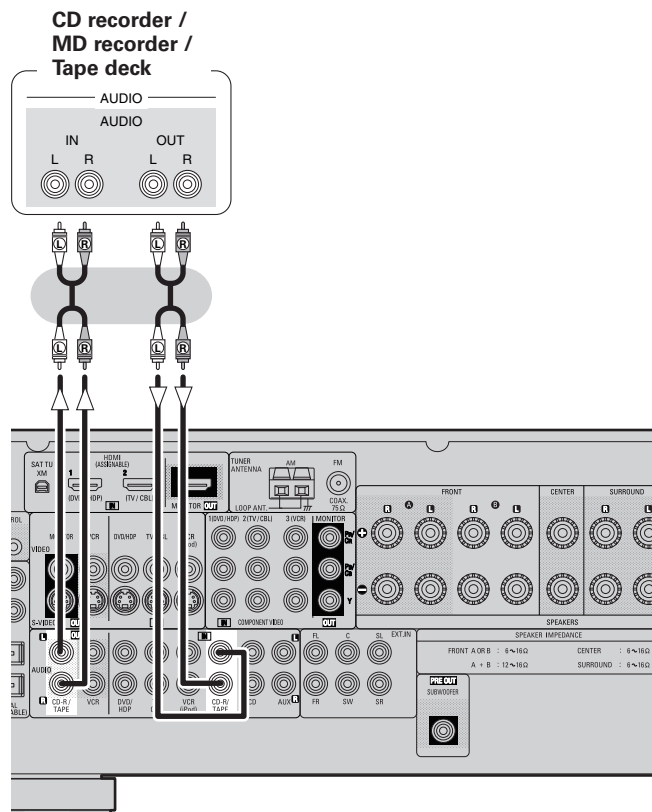


Connections to Other Devices

Carefully check the left (L) and right (R) channels and the inputs and outputs, and be sure to interconnect correctly.


Video Camera / Game Console

Connect the cables to be used.

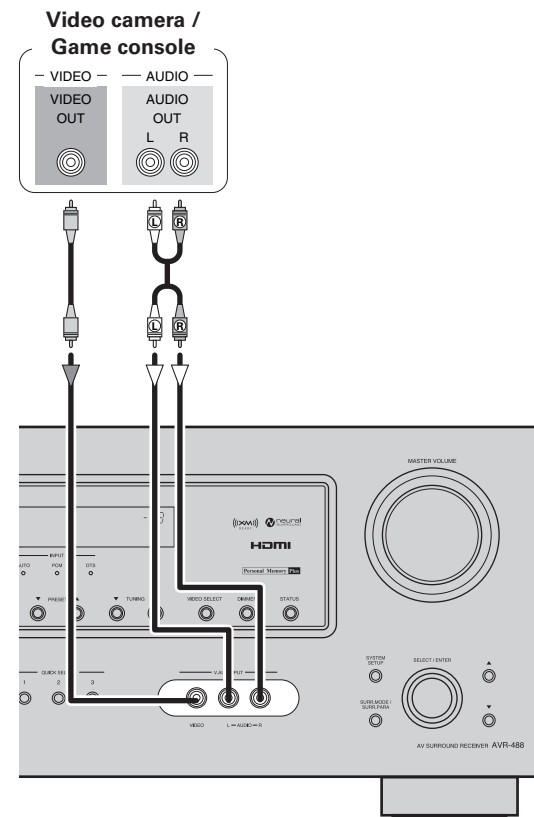

Component with Multi-channel Output connectors


Connect the cables to be used.

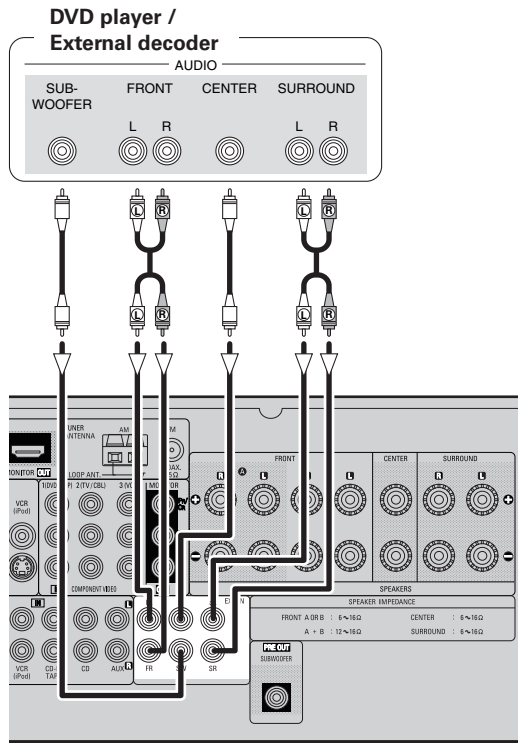

- To play the analog input signals input to the EXT. IN connectors, press the **EXT. IN** button on the main unit or the **INPUT** button on the remote control unit and select "EXT. IN" (page 29).
- The video signal can be connected in the same way as a DVD player (page 11).
- To play copyright-protected discs, connect the AVR-488's EXT. IN connector with the DVD player's analog multi-channel output connector.

XM connector

- The AVR-488 is an XM Ready® receiver. You can receive XM® Satellite Radio by connecting to the XM Mini-Tuner and Home Dock (includes home antenna, sold separately) and subscribing to the XM service.
- Plug the XM Mini-Tuner and Home Dock into the XM connector on the rear panel.
- Position the Home Dock antenna near a south-facing window to receive the best signal. For details, see "Listening to XM Satellite Radio Programs" (page 32, 33). When making connections, also refer to the operating instructions of the XM Mini-Tuner and Home Dock.

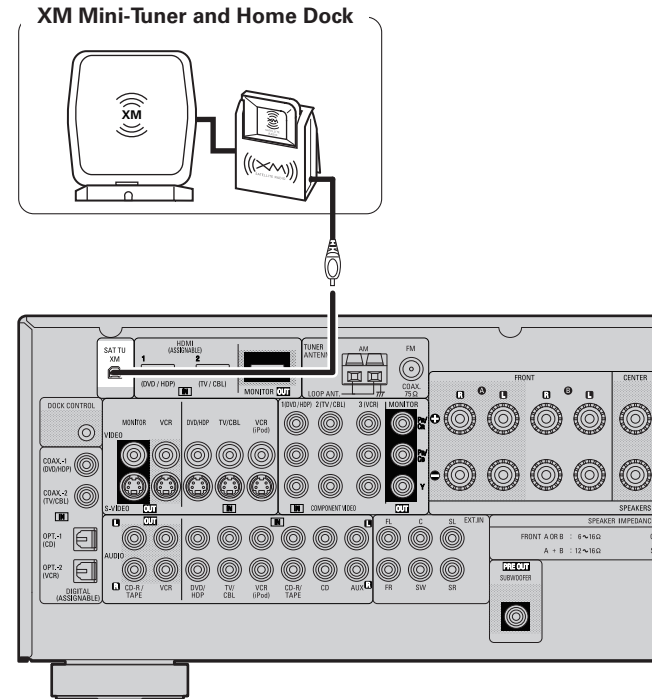


NOTE

Keep the power cord unplugged until the XM Mini-Tuner and Home Dock connection have been completed.

- The XM name and related logo are registered trademarks of XM Satellite Radio Inc. All rights reserved.
- XM Ready is a registered trademark of XM Satellite Radio Inc. All rights reserved.

Antenna terminals

An F-type FM antenna cable plug can be connected directly.

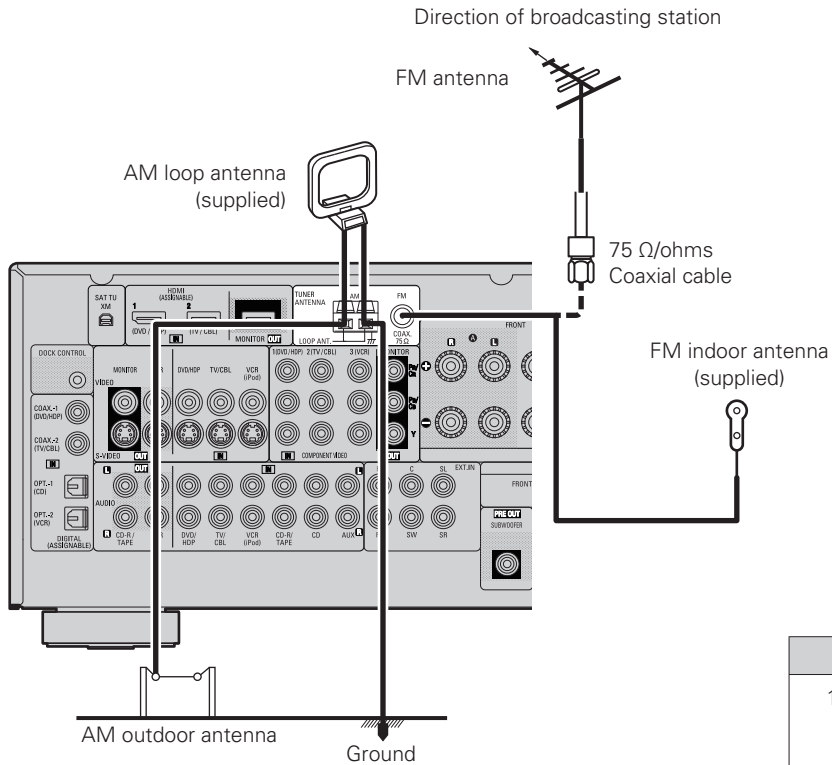

Connection of AM antennas

1. Push the lever.
2. Insert the conductor.
3. Return the lever.



NOTE

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure the AM loop antenna lead terminals do not touch metal parts of the panel.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.


AM loop antenna assembly

1. Remove the vinyl tie and take out the connection line.
2. Connect to the AM antenna terminals.
3. Bend in the reverse direction.

4.
 - a. With the antenna on top of any stable surface.
 - b. With the antenna attached to a wall.
- Mount
- Installation hole Mount on wall, etc.

Connecting the Power Cord

Wait until all connections have been completed before connecting the power cord.

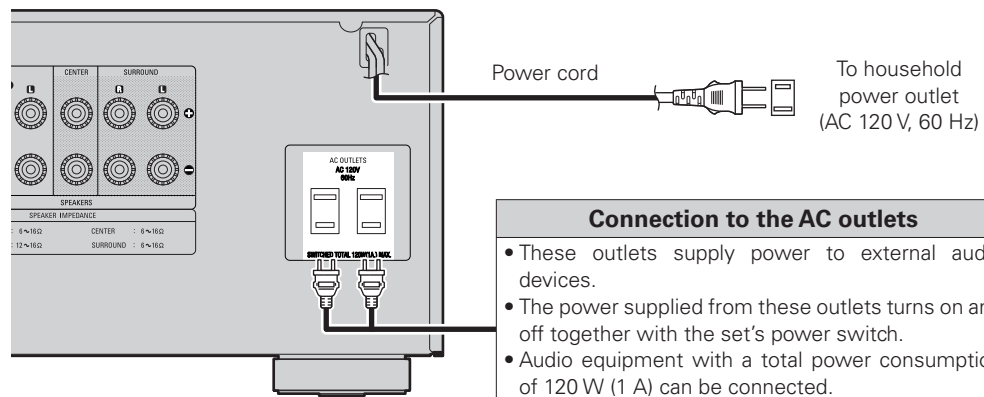

Connection to the AC outlets

- These outlets supply power to external audio devices.
- The power supplied from these outlets turns on and off together with the set's power switch.
- Audio equipment with a total power consumption of 120 W (1 A) can be connected.

NOTE

- Insert the AC plugs securely. Incomplete connections could cause noise.
- Only use the AC outlets to plug in audio devices. Do not use them as power supplies for hairdryers or anything other than audio equipment.

Once Connections are Completed

Turning the Power On (👉 page 29)

Operations

Menu Map

System Setup (page 19 ~ 24)

- | | | |
|---|---|--|
| <ul style="list-style-type: none"> □ Speaker Setup (page 20, 21) <ul style="list-style-type: none"> • Speaker Configuration • Subwoofer Mode Setup • Distance • Crossover Frequency • Test Tone | <ul style="list-style-type: none"> □ Input Setup (page 22, 23) <ul style="list-style-type: none"> • HDMI In Assign • Digital In Assign • iPod Assign • EXT. IN Subwoofer Level • Auto Preset Memory • Antenna Aiming | <ul style="list-style-type: none"> □ Option Setup (page 23, 24) <ul style="list-style-type: none"> • Volume Control <ul style="list-style-type: none"> · Volume Limit · Power On Level · Mute Level • Auto Surround Mode • Remote ID Setup |
|---|---|--|

Parameter (page 26 ~ 28)


- | | | |
|--|---|---|
| <ul style="list-style-type: none"> □ Surround Parameter <ul style="list-style-type: none"> • MODE • CINEMA EQ • D.COMP • LFE • CENTER IMAGE • PANORAMA • DIMENSION • CENTER WIDTH | <ul style="list-style-type: none"> • DELAY TIME • EFFECT LEVEL • ROOM SIZE • SUBWOOFER ATT. • Subwoofer • Default | <ul style="list-style-type: none"> • Tone Control <ul style="list-style-type: none"> · Tone Defeat · Bass · Treble • RESTORER • Night Mode |
|--|---|---|

Information (page 28)

- | | |
|---|---|
| <ul style="list-style-type: none"> □ Status | <ul style="list-style-type: none"> □ Audio Input Signal |
|---|---|


Examples of Front Display

Some typical examples are described below.

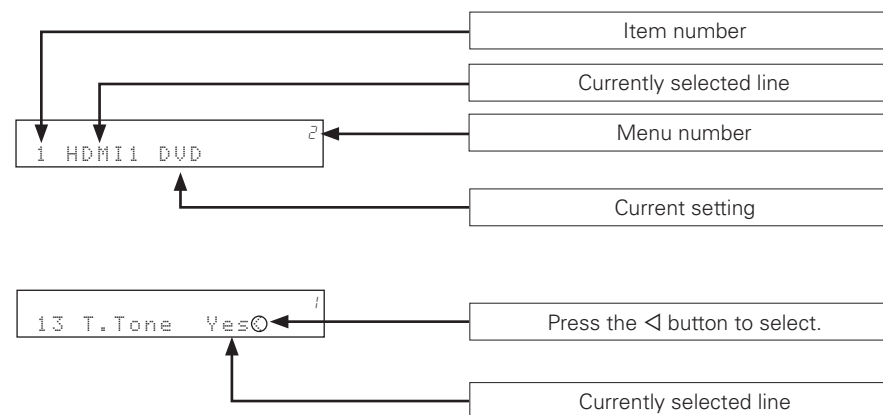


System Setup


SYSTEM SETUP

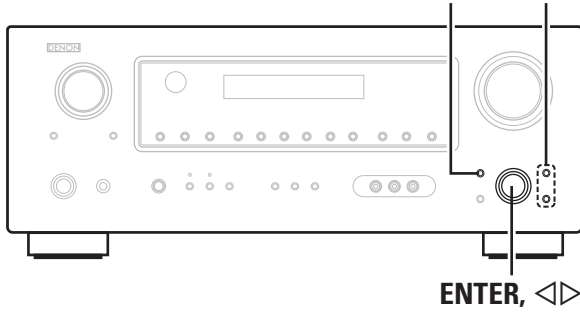

[Front]

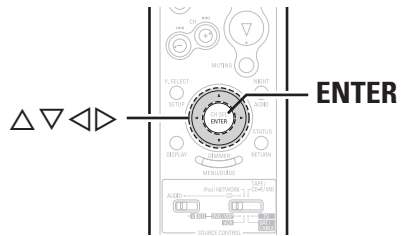

[Rear]

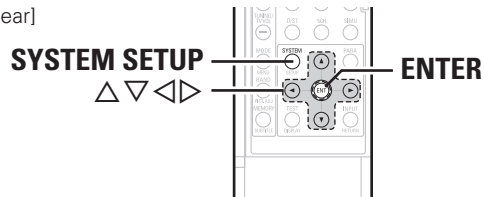

About the button names in these explanations

- < > : Buttons on the main unit
- [] : Buttons on the remote control unit




 



Button name only:

Buttons on the main unit and remote control unit

- Make detail settings for various parameters.
- With the AVR-488, settings and operations for most functions can be performed by operating while looking at the items displayed on the main unit.

Operations

The same operation is possible on the main unit or remote control unit.

- 1** Press **SYSTEM SETUP**, then press **ENTER**.
"System Setup" is displayed.
 - 2** Press   to select the item you want to set, then press **ENTER**.
 - 3** To change the setting:
Press   to select the item you want to change, then press   to change the setting.
 - 4** Press **ENTER** or  to confirm the new settings.
 - 5** Press **SYSTEM SETUP** to move the next category.
- ※ To cancel the system setup mode, press **SYSTEM SETUP** again.



Example of Display of Default Values

In lists of selectable items or adjustable ranges, the item surrounded by a border is the default value.

[Selectable items] **Large** Small

Speaker Setup


Perform this setting if you wish to make the settings for your speaker systems manually.

- 1 ~ 4 Speaker Configuration
- 5 Subwoofer Mode Setup
- 6 ~ 11 Distance
- 12 Crossover Frequency
- 13 Test Tone

1 ~ 4 Speaker Configuration

Select speaker configuration and size.
(bass reproduction capability)

[Display]

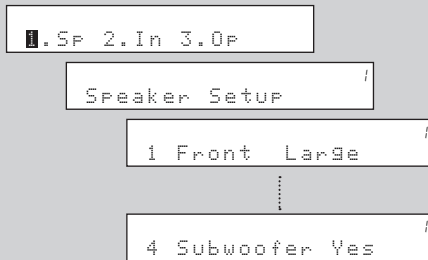

Front Speaker

Select front speaker size.

[Selectable items] **Large** **Small**

Center Speaker

Select center speaker use and size.

[Selectable items] **Large** **Small** **None**

Surround Speaker

Select surround speakers use and size.

[Selectable items] **Large** **Small** **None**

Subwoofer

Select subwoofer use.

[Selectable items] **Yes** **No**

Large :Select this when using large speakers with ample low frequency reproduction capabilities.

Small :Select this when using small speakers without ample low frequency reproduction capabilities.

None :Select this when no speaker is connected.

Yes :Select this when a subwoofer is connected.

No :Select this when no subwoofer is connected.




- Select "Large" or "Small" not according to the physical size of the speaker but according to the low frequency reproduction capabilities based on the frequency set at "Crossover Frequency" (page 21).
- When "Front Speaker" is set to "Small", "Subwoofer" is automatically set to "Yes".
- If "Subwoofer" is set to "No", "Front Speaker" is automatically set to "Large".

5 Subwoofer Mode Setup

Select low range signal to be reproduced by subwoofer.

[Display]

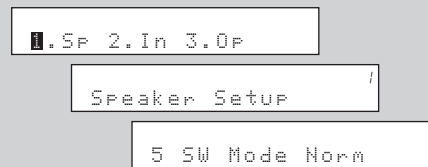

[Selectable items]

LFE (Normal) :Play low range and LFE signal of channels set to "Small".

LFE+Main :Play low range and LFE signal of all channels.




- This can be set when "System Setup" – "Speaker Setup" – "Subwoofer" is set to "Yes".
- Play music or a movie source and select the mode offering the strongest bass.
- Select "LFE+Main" if you want the bass signals to always be produced from the subwoofer.

6 ~ 11 Distance

Set distance from listening position to speakers.
Before making the settings, measure the distance from the listening position to the different speakers.

[Display]

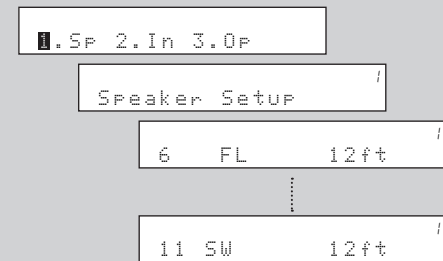

Distance measurement

Select the speaker you want to set, then set the distance.
Set the value closest to the measured distance.

[Variable range]

0ft ~ 60ft : Settable in units of 1 foot.

NOTE

Set the distance between the listening position and the various speakers to no more than 20 ft.

12 Crossover Frequency

Select crossover frequency from which subwoofer handles low range signal.

[Display]



[Selectable items]

40Hz 60Hz **80Hz** 90Hz 100Hz 110Hz 120Hz 150Hz
200Hz 250Hz :

Only the portion of the bass sound of the various speakers output from the subwoofer that has a frequency below the frequency set here is output.

Set this according to the low frequency reproduction capabilities of the speakers you are using.




- The "Crossover Frequency" can be set when there are speakers that have been set to "Small" at "System Setup" – "Speaker Setup" or when "Subwoofer" is set to "Yes" (page 20).
- For speakers set to "Small", sound below the crossover frequency is cut from the sound output. The cut bass sound is output from the subwoofer or front speakers.
- Always set the crossover frequency to "80Hz". When using small speakers, however, we recommend setting the crossover frequency to a higher frequency.

13 Test Tone

Adjust channel levels to obtain equal volume from all speakers.

[Display]

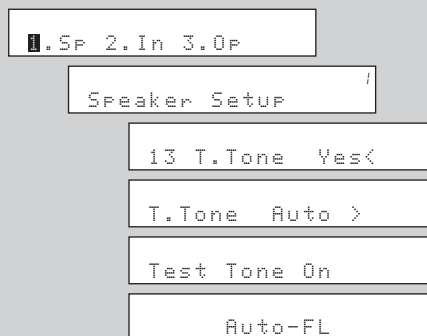

Test Tone

Select test tone playback method.

[Selectable items]

Auto : Automatically switch speaker from which test tone is output.

Manual : Manually switch speaker from which test tone is output.

Test Tone Start

Press the < button to select "Yes"; then press the < > button to select "Auto" or "Manual".

Then press the ∇ button. Output the test tone.

Auto : Press the < > button to adjust the volume.

Manual : Press the Δ ∇ button to select the speaker, then press the < > button to adjust the volume.

When the adjustments are completed, press the **ENTER** button to finish the test tone.

[Variable range] **-12dB** ~ **0dB** ~ **+12dB**



Operating from the remote control unit

Adjusting with the remote control unit using the test tones is only possible in the "Auto" mode and only effective in the STANDARD mode. The adjusted levels for the different modes are automatically stored in the memory.

[Adjusting using test tones]

- ① Press the **TEST** button.
Test tones are output from the various speakers.
- ② Use the < > button to adjust so that the volume is equal for all speakers.
- ③ When the adjustments are completed, press the **TEST** button again.



- Speakers set to "None" in the Speaker Configuration settings are not displayed.
- When "Channel Level" is adjusted, the adjusted values are set for all the surround modes. To adjust the channel level separately for the different surround modes, use the operation see page 35.

Input Setup


Use this procedure to select the input source and make the settings related to playing input sources.

- 1, 2 HDMI In Assign
- 3 ~ 6 Digital In Assign
- 7 iPod Assign
- 8 EXT. IN Subwoofer Level
- 9 Auto Preset Memory
- 10 Antenna Aiming

1, 2 HDMI In Assign

Select HDMI connector to assign to this source.

[Display]

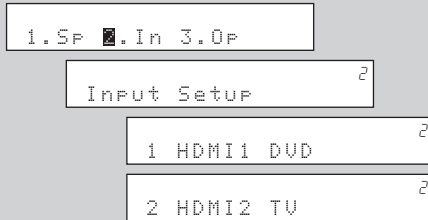

[Input terminals] **HDMI1** **HDMI2**

[Assignable input sources]

DVD/HDP **TV/CBL** **VCR** **V.AUX**

| Input terminals | HDMI1 | HDMI2 |
|-----------------|---------|--------|
| Default setting | DVD/HDP | TV/CBL |




- With HDMI, the video and audio signals are transferred simultaneously. (The HDMI audio signal is output from the monitor.) At this time, set the input mode to "Auto"
- The audio signals input from the analog, digital and EXT. IN connectors are not output to the monitor.

3 ~ 6 Digital In Assign

Select digital input connector to assign to this source.

[Display]

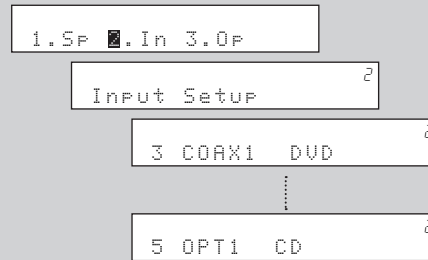

[Input terminals] **COAXIAL1** **COAXIAL2**
OPTICAL1 **OPTICAL2**

[Assignable input sources]


CD **AUX** **CDR** **DVD/HDP** **TV/CBL** **VCR** **V.AUX**

| Input terminals | COAXIAL1 | COAXIAL2 | OPTICAL1 | OPTICAL2 |
|-----------------|----------|----------|----------|----------|
| Default setting | DVD/HDP | TV/CBL | CD | VCR |

7 iPod Assign

Assign Control Dock for iPod to this source.

[Display]

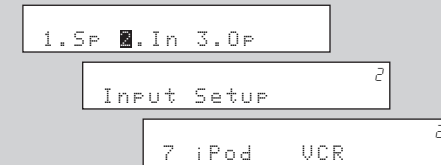

[Assignable input sources]

CD **AUX** **CDR** **DVD/HDP** **TV/CBL** **VCR** **V.AUX**




With the default settings, the Control Dock for iPod can be used connected to the VCR (iPod) connector.

8 EXT. IN Subwoofer Level

Set the subwoofer level for playback.
Select according to the player in use.

[Display]

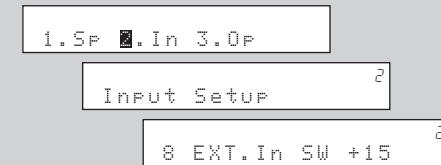

[Selectable items]

0dB **+5dB** **+10dB** :

Select according to the player in use.


+15dB :

This is the recommended level.

9 Auto Preset Memory

Use the auto preset function to program radio stations.

[Display]

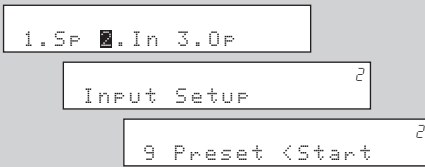

Press the ◀ button to start.

- "CH" blinks on the display and searching begins.
- "Completed" appears once searching is completed.



If an FM station cannot be preset automatically, select the desired station by tuning it in manually, then preset it manually.

10 Antenna Aiming

Adjust the XM radio reception sensitivity.

[Display]



Satellite

Indicate satellite signal strength.

Terrestrial

Indicate terrestrial signal strength.

| Display | Condition |
|---------|-----------------------------|
| ■■■■■ | Signal strength is strong |
| ■■■■ | Signal strength is good |
| ■■■ | Signal strength is marginal |
| ■■ | Signal strength is weak |
| ■ | No signal |

Option Setup


Make various other settings.

- 1 ~ 3 Volume Control
- 4 Auto Surround Mode
- 5 Remote ID Setup

1 ~ 3 Volume Control

Set the main zone volume setting.

[Display]

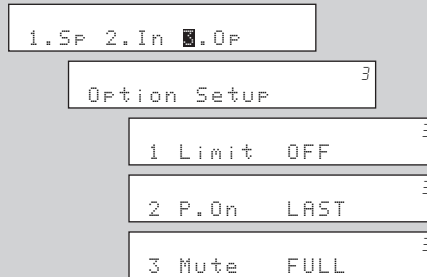

Volume Limit

Make a setting for maximum volume.

[Selectable items]

- OFF** : Do not set a maximum volume.
- 20dB** : Set the maximum volume to -20 dB.
- 10dB** : Set the maximum volume to -10 dB.
- 0dB** : Set the maximum volume to 0 dB.

Power On Level

This sets the volume set when the main zone's power is turned on.

[Selectable items]

- Last** : Use the memorized setting from the last session.
- : Always use the muting on condition when power is turned on.
- 80dB ~ +18dB** : Set the volume level when the power is turned on in units of 1 dB.

Mute Level

This sets the amount of attenuation of the volume when the mute mode is set in the main zone.


[Selectable items]

- Full** : The sound is cut off entirely.
- 40dB** : The sound is attenuated by 40 dB.
- 20dB** : The sound is attenuated by 20 dB.

4 Auto Surround Mode

Make setting for memorizing surround mode setting for each input signal type.

[Display]

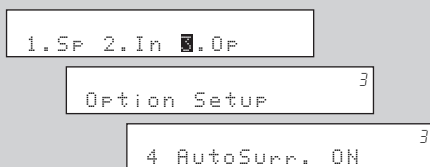

[Selectable items]

ON : Memorize settings. Most recently stored surround mode is automatically selected.

OFF : Do not memorize settings. Surround mode does not change according to input signal.



The auto surround mode function lets you store in the memory the surround mode last used for playing the three types of input signals listed below.

- ① Analog and PCM 2-channel signals (STEREO)
 - ② 2-channel signals of Dolby Digital, DTS or other multi-channel format (DOLBY PLII Cinema)
 - ③ Multi-channel signals of Dolby Digital, DTS or other multichannel format (DOLBY/DTS SURROUND)
- ※ Default settings are indicated in ().

5 Remote ID Setup

Set remote control ID.

[Display]



[Selectable items]

1 2 3 4

NOTE

When using the AVR-488 with only the included remote control unit (RC-1079), there is no need to make settings.

When using a separately sold remote control unit (RC-7000CI, etc.), this function can be used. Match the ID setting of the remote control unit and the receiver.

Surround Modes

Standard Playback

This is the standard mode for enjoying surround sound according to the program source.

Surround Playback of 2-channel Sources

To select these surround modes using the **SELECT/ENTER** knob on the main unit or press the **STD** button on the remote control unit. The mode switches each time the button is pressed.

[Selectable items] **DOLBY PLII** **DTS NEO:6** **neural**

DOLBY PLII : The signals are decoded in DOLBY PLII for playback.

Cinema : This mode is suited for movie sources.

Music : This mode is suited for music sources.

Game : This mode is suited for games.

Pro Logic : This is the Pro Logic playback mode. When this mode is selected, "DOLBY PL" is displayed.

DTS NEO:6 : The signals are decoded in DTS NEO:6 for playback.

Cinema : This mode is suited for movie sources.

Music : This mode is suited for music sources.

neural : It is possible to play analog input signals and PCM (2-channel, 48 kHz or less) in the surround mode.
This is the optimum mode for playing sources recorded in XM HD Surround (page 32, 33).



Select the "Cinema", "Music", "Game" and "Pro Logic" modes at "Surround Parameter" – "MODE" (page 26).

Playing Multi-channel Sources (Dolby Digital, DTS, etc.)

[Selectable items]

STANDARD :

This mode is for decoding the input signals according to their format and playing surround sound.

The display when the STANDARD mode is selected depends on the input signal.

| Input signal | | Display |
|----------------------|--------------------------------|---------------|
| Dolby Digital Source | DOLBY DIGITAL (other than 2ch) | DOLBY DIGITAL |
| DTS Surround Source | DTS (5.1ch) / DTS 96/24 | DTS SURROUND |
| | | DTS 96/24 (*) |

* : This is displayed when the input signal is "DTS 96/24".



- For details, see page 45.
- To select these surround modes using the **SELECT/ENTER** knob on the main unit or press the **STD** button on the remote control unit.

DSP Simulation Playback

The desired mode according to the program source and viewing situation can be selected from among 7 DENON original surround modes.

The surround parameters can be adjusted (page 43, 44) to achieve an even more realistic, powerful sound field.

[Selectable items]

5CH STEREO : This mode is for enjoying stereo sound from all speakers.

ROCK ARENA : This mode is for enjoying the atmosphere of a live concert in an arena.

JAZZ CLUB : This mode is for enjoying the atmosphere of a live concert in a jazz club.

MONO MOVIE * : This mode is for playing monaural movie sources with surround sound.

VIDEO GAME : This mode is suited for achieving surround sound with video games.

MATRIX : This mode lets you add a sense of expansion to stereo music sources.

VIRTUAL : This mode is for enjoying surround effects using only the front speakers or headphones.

* : When playing sources recorded in monaural in the MONO MOVIE mode, the sound will be off balance with a single channel (left or right), so input to both channels.



- To select these surround modes using the **SELECT/ENTER** knob on the main unit, press the **SIMU** button on the remote control unit. The mode switches each time the button is pressed.
- Depending on the program source being played, it may not be possible to achieve a satisfactory surround effect. In this case, try other modes to achieve a sound field suited to your tastes.

Stereo Playback

[Selectable items]

STEREO :

This is the mode for playing in stereo. The tone can be adjusted. Sound is output from the front left and right speakers and subwoofer.

Direct Playback

[Selectable items]

DIRECT :

In this mode the signals bypass the tone adjustment circuitry for high quality sound.

The sound is output to the same channels as the input signal.

The display when the DIRECT mode is selected depends on the input signal.

| Input signal | Display |
|---|---------|
| Analog signal / PCM (2ch) / Dolby Digital source / DTS source / Other 2-channel digital signals | DIRECT |



- For details, see page 45.
- To select these surround modes using the **SELECT/ENTER** knob on the main unit, press the **D/ST** button on the remote control unit. The mode switches each time the button is pressed.

Parameter

Surround Parameter

Adjust surround sound parameters.
The adjustable parameters differ for the different surround modes (page 43, 44).

- ① Press the **SURR. PARA** button on the main unit or the **PARA** button on the remote control unit.
- ② Press the Δ ∇ button to select the Item, then press the \triangleleft \triangleright button to set.

MODE

Select the mode according to the playback source.

- In the PLII mode

[Selectable items] **CINEMA** **MUSIC** **GAME** **PL**

- In the DTS NEO:6 mode

[Selectable items] **CINEMA** **MUSIC**

CINEMA : Surround sound mode optimized for movie sources.

MUSIC : Surround sound mode optimized for music sources.

GAME : Surround sound mode optimized for games.

PL : Dolby Pro Logic playback mode.



The MUSIC mode is also effective for movie sources including a lot of stereo music.

CINEMA EQ

Soften the treble range of movie soundtracks for better understanding.

[Selectable items]

ON : CINEMA EQ is used.

OFF : CINEMA EQ is not used.

D.COMP

Compress dynamic range (difference between loud and soft sounds).

[Selectable items]

OFF : Turn dynamic range compression off.

LOW : Low setting.

MID : Middle setting.

HIGH : High setting.



When playing DTS sources, this is only displayed for compatible software.

LFE

Adjust the low-frequency effects level (LFE).

[Variable range] **-10dB** ~ **0dB**



For proper playback of the different program sources, we recommend setting to the values below.

- Dolby Digital sources: "0 dB"
- DTS movie sources: "0 dB"
- DTS music sources: "-10 dB"

CENTER IMAGE

Assign center channel signal to front left and right channels for wider sound.

[Variable range] **0.0** ~ **0.3** ~ **1.0**

PANORAMA

Assign front L/R signal also to surround channels, for wider sound. If the surround effect seems weak, set "PANORAMA" to "ON".

[Selectable items] **ON** **OFF**

DIMENSION

Shift sound image center to front or rear, to adjust playback balance.

[Variable range] **0** ~ **3** ~ **6**

CENTER WIDTH

Assign center channel signal to front left and right channels for wider sound.

[Variable range] 0 ~ 3 ~ 7

DELAY TIME

Adjust delay time to control sound stage size.

[Variable range] 0 ms ~ 30 ms ~ 300 ms

EFFECT LEVEL

Adjust the strength of the surround effect.

[Variable range] 1 ~ 10 ~ 15



Set to a lower level if the positioning and sense of phase of the surround signals seems unnatural.

ROOM SIZE

Determine size of acoustic environment.

[Selectable items]

- small** : Simulate acoustics of a small room.
 - med. s**
 - medium**
 - med. l**
 - large** : Simulate acoustics of a large room.
-

NOTE

“ROOM SIZE” does not indicate the size of the room in which sources are played.

SUBWOOFER ATT.

Attenuate subwoofer level when using EXT. IN mode.

[Selectable items]

- ON** : The input from the subwoofer channel is attenuated.
- OFF** : The input from the subwoofer channel is not attenuated. Usually use in this mode.



Set this to “ON” if the subwoofer channel level seems too high when playing audio signal.

Subwoofer

Turn subwoofer output on and off.

[Selectable items]

- ON** : The subwoofer is used.
- OFF** : The subwoofer is not used.

Default

Resets the settings to the default values.

Tone Control

Adjust the tonal quality of the sound.

Tone defeat mode can be called out directly by pressing the **TONE DEFEAT** button on the main unit.

Tone Defeat

Turn tone adjustments off.

[Selectable items]

- ON** : Playback without tone adjustment.
- OFF** : Allow tone adjustment (treble, bass).



The tone cannot be adjusted when in the DIRECT mode.

Bass

Adjust low frequency range (bass).

[Variable range] -14dB ~ 14dB

Treble

Adjust high frequency range (treble).

[Variable range] -14dB ~ 14dB



“Bass” and “Treble” can be set when “Tone Defeat” is set to “OFF”.

RESTORER

This function restores compressed audio signals to how they were before compression and corrects the sense of volume of the bass and treble to obtain richer playback sound.

[Selectable items]

OFF :

Do not use RESTORER.

Mode1 (RESTORER 64):

Optimized mode for compressed sources with very weak highs.

 
Mode2 (RESTORER 96):

Apply suitable bass and treble boost for all compressed sources.

Mode3 (RESTORER HQ):

Optimized mode for compressed sources with normal highs.

The default setting for "iPod" is "Mode3". All others are set to "OFF".



About the RESTORER function

- Such compressed audio formats as MP3, WMA (Windows Media Audio) and MPEG-4 AAC reduce the amount of data by eliminating signal components that are hard for the human ear to hear. The RESTORER function generates the signals eliminated upon compression, restoring the sound to conditions near those of the original sound before compression. It also corrects the sense of volume of the bass to obtain richer sound with compressed audio signals.
- This is displayed on the "Surround Parameter" and can be set when the input source is selected to "XM" or analog signals (including AM/FM signals) or PCM signals (fs = 44.1/48 kHz) are input.



When the surround mode is set to "neural", the "RESTORER" can not be selected.

Night Mode

Optimized setting for late-night listening.

[Selectable items]

OFF : Turn night mode off.

LOW : Low setting.

MID : Middle setting.

HIGH : High setting.



Operating from the remote control unit

Press the **NIGHT** button.



Information

Information can be called out directly by pressing the **STATUS** button .

- 1 Status**
- 2 Audio Input Signal**

1 Status

Shows information about settings.
The items displayed differ according to the input source.

[Items to be checked]

- Surround Mode**
- Select Source**
- Video Select**
- Digital Assignment**
- TONE DEFEAT**
- Channel Level** etc.

2 Audio Input Signal

Shows information about audio input signals.

[Items to be checked]

Surround Mode : The currently set surround mode is displayed.

SIGNAL : The input signal type is displayed.

fs : The input signal's sampling frequency is displayed.

Format : The number of channels in the input signal (front, surround, LFE) is displayed.




Offset : The dialogue normalization correction value is displayed.

Dialogue normalization function

This is automatically activated when playing Dolby Digital sources. This function automatically corrects the standard signal level for individual program sources. The correction value can be checked using the **STATUS** button.

Offset -4dB

The figure is the correction value when the standard level is corrected.

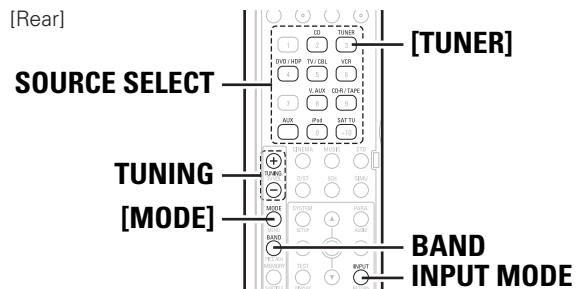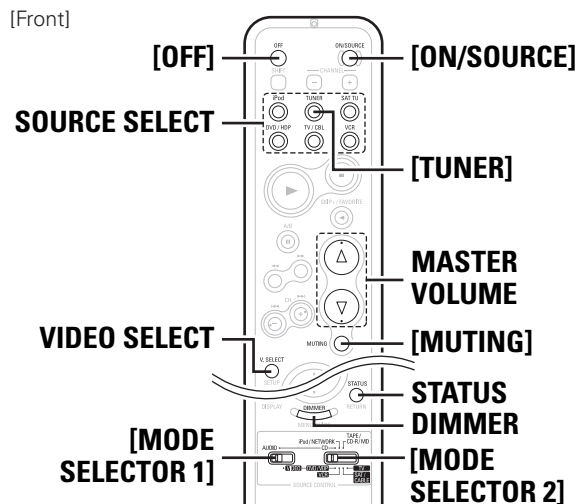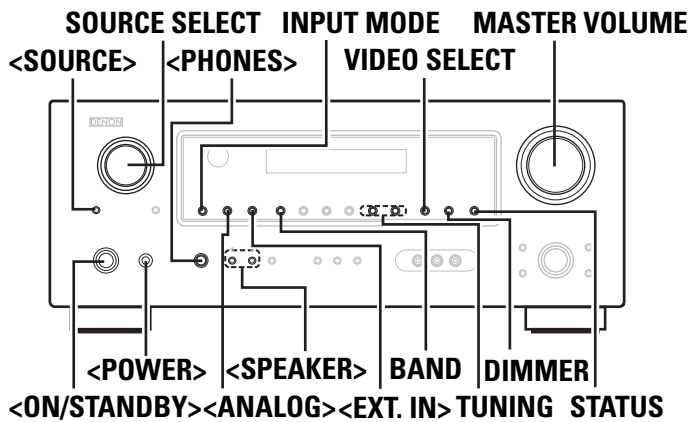

About the button names in these explanations
 < > : Buttons on the main unit
 [] : Buttons on the remote control unit
Button name only:
 Buttons on the main unit and remote control unit

Playback

Preparations

Turning the Power On

- 1 Press **<POWER>**.
The power indicator lights red and the power is set to the standby mode.
- 2 Press **<ON/STANDBY>** or **[ON/SOURCE]**.
The power indicator flashes green and the power turns on.

Turning the Power Off

- 1 Press **<ON/STANDBY>** or **[OFF]**.
The power is set to the standby mode.
- 2 Press **<POWER>**.
The power indicator turns off, and so does the power.

NOTE
 Power continues to be supplied to some of the circuitry even when the power is in the standby mode. When leaving home for long periods of time or when traveling, either press **<POWER>** to turn off the power, or unplug the power cord from the power outlet.

Selecting the Input source

Operation on the main unit

Turn **<SOURCE SELECT>**.

NOTE
 If "Rec Select" is selected for the input source, press **<SOURCE>** before turning **<SOURCE SELECT>**.

Operation on the remote control unit

 
Press **[SOURCE SELECT]**.
 The desired input source can be selected directly.

Setting the Input Mode

Set the input mode for this source.

Press INPUT MODE.

The INPUT mode indicator lights (AUTO, PCM, DTS mode).



※ Press **<ANALOG>** to select "ANALOG"; **<EXT. IN>** to select "EXT. IN".

[Selectable items]

- AUTO** : Detect type of digital input signal and decode and play automatically.
- PCM** : Decode and play only PCM input signals.
- DTS** : Decode and play only DTS input signals.
- ANALOG** : Play only signals from analog input.
- EXT. IN** : Play only signals from EXT. IN input.

- NOTE**
- When a digital signal is properly input, the "**DIGITAL**" indicator lights on the display. If the "**DIGITAL**" indicator does not light, check the digital input connector assignment and the connections.
 - The surround mode cannot be set if the input mode is set to "EXT. IN".
 - Only set "PCM" and "DTS" when playing the respective signals.

Operations During Playback

Adjusting the Master Volume

Either turn **<MASTER VOLUME>** or press **[MASTER VOLUME]**.

Turning Off the Sound Temporarily (Muting)

Press **[MUTING]**.



To cancel, press **[MUTING]** again. Muting can also be canceled by adjusting the master volume.

Listening with Headphones

Plug the headphones into **<PHONES>**.

The sound from the speakers and pre-out connectors is automatically cut.

NOTE

Be careful not to set the volume too high when using headphones.

Switching the front speakers

Press **<SPEAKER>**.

Video Select Function

Switch video input source while listening to audio signal.

Press **VIDEO SELECT** until the desired picture appears.

※ To cancel, press **VIDEO SELECT** to select "SOURCE".

Checking the currently playing program source, etc.

Press **STATUS**.

The current program source and various settings are indicated on the display.
For details, refer to "Information" (☞ page 28).

Switching the brightness of the display (Dimmer)

Press **DIMMER**.



Playing Video and Audio Equipment

Basic Operation

1 Prepare the equipment.

- ① Load the DVD, CD or other software in the player.
(☞ See the operating instructions of the respective devices.)
- ② To play a video device, switch the monitor input.
(☞ See the monitor's operating instructions.)

2 Use **SOURCE SELECT** to select the input source.

3 Set **[MODE SELECTOR 1]** to "AUDIO" or "VIDEO". (☞ page 37 "Remote Control Unit Operations")

4 Set **[MODE SELECTOR 2]** to the component you want to operate.

5 Start playback. (☞ See the operating instructions of the respective devices.)

Listening to FM/AM Broadcasts

Basic Operation

1 Either turn **<SOURCE SELECT>** or press **[TUNER]** to select "TUNER".

2 Set **[MODE SELECTOR 1]** to "AUDIO". (☞ page 37 "Remote Control Unit Operations")

3 Press **BAND** to select "FM" or "AM".

4 Tune in the desired broadcast station.

① To tune in automatically (Auto Tuning)


Press **[MODE]** to light the "AUTO" indicator on the display, then use **TUNING** to select the station you want to hear.

② To tune in manually (Manual Tuning)


Press **[MODE]** to turn off the display's "AUTO" indicator, then use **TUNING** to select the station you want to hear.




- It is also possible to switch to "FM" or "AM" in step 1 by pressing **[TUNER]**.
- If the desired station cannot be tuned in with auto tuning, tune it in manually.
- When tuning in stations manually, press and hold **TUNING** to change frequencies continuously.

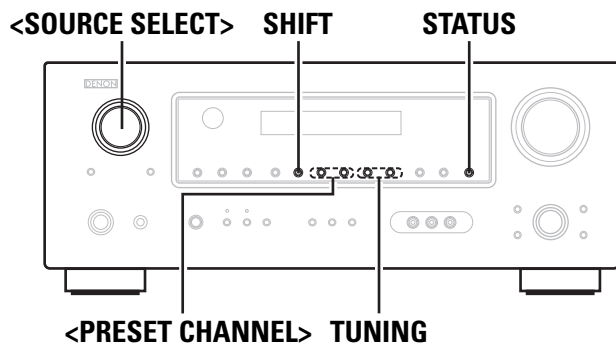

[Front]

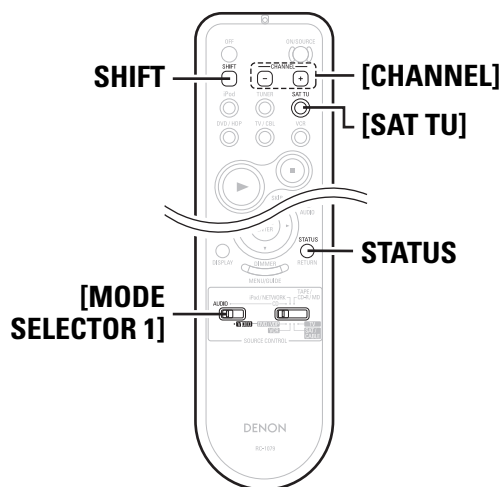

[Rear]

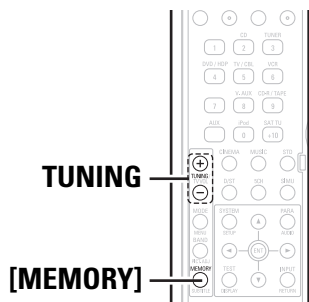

Presetting Radio Stations (Preset Memory)

Your favorite broadcast stations can be preset so that you can tune them in easily. Up to 56 stations can be preset.

- 1** Tune in the broadcast station you want to preset.
- 2** Press [MEMORY].
- 3** Press SHIFT to select the block (A to G) in which the station is to be preset.
- 4** Press <PRESET CHANNEL> or [CHANNEL] to select the preset number (1 to 8).
- 5** Press [MEMORY] again to complete the setting.



- To preset other stations, repeat steps 1 to 5.
- Stations can be preset automatically at "System Setup" – "Input Setup" – "Auto Preset Memory" (page 23).

NOTE

Preset stations are erased by overwriting them.

Listening to Preset Stations

- 1** Press SHIFT to select the memory block (A to G).
- 2** Press <PRESET CHANNEL> or [CHANNEL] to select the desired preset channel (1 to 8).

Default settings

| Auto tuner presets | |
|--------------------|--|
| A1 ~ A8 | 87.5 / 89.1 / 98.1 / 107.9 / 90.1 / 90.1 / 90.1 / 90.1 MHz |
| B1 ~ B8 | 520 / 600 / 1000 / 1400 / 1500 / 1710 kHz, 90.1 / 90.1 MHz |
| C1 ~ C8 | 90.1 MHz |
| D1 ~ D8 | 90.1 MHz |
| E1 ~ E8 | 90.1 MHz |
| F1 ~ F8 | 90.1 MHz |
| G1 ~ G8 | 90.1 MHz |

About the button names in these explanations

- < > : Buttons on the main unit
- [] : Buttons on the remote control unit

Button name only:

Buttons on the main unit and remote control unit

Listening to XM Satellite Radio Programs

ABOUT XM RADIO

XM Radio offers an extraordinary variety of commercial-free music, plus the best in premier sports, news, talk radio, stand-up comedy, children's and entertainment programming. XM is broadcast in superior digital audio from coast to coast. From rock to reggae, from classical to hip hop, XM has something for every music fan. For U.S. customers, information about XM Radio is available online at www.xmradio.com. For Canadian customers, information about XM Canada is online at www.xmradio.ca.

XM READY® LEGAL

XM monthly service subscription sold separately. XM Mini-Tuner and Home Dock required (each sold separately) to receive XM service. Installation costs and other fees and taxes, including a one-time activation fee may apply. All fees and programming subject to change. Channels with frequent explicit language are indicated with an XL. Channel blocking is available for XM radio receivers by calling 1-800- XMRADIO (US residents) and 1-877-GETXMSR (Canadian residents). For a full listing of the XM commercial- free channels and advertising supported channels, visit lineup.xmradio.com (US residents) or xmradio.ca (Canadian residents). Subscriptions subject to Customer Agreement available at xmradio.com (US residents) and xmradio.ca (Canadian residents). Only available in the 48 contiguous United States and Canada. ©2007 XM Satellite Radio Inc. All rights reserved. All other trademarks are the property of their respective owners.

XM READY® SUBSCRIPTIONS

Once you have installed the XM Mini-Tuner Dock, inserted the XM Mini-Tuner, connected the XM Dock to your XM Ready® home audio system, and installed the antenna, you are ready to subscribe and begin receiving XM programming. There are three places to find your eight character XM Radio ID: On the XM Mini-Tuner, on the XM Mini-Tuner package, and on XM Channel 0. Record the Radio ID in the following eight squares for reference.



Note: The XM Radio ID does not use the letters "I," "O," "S" or "F". Activate your XM Satellite Radio service in the U.S. online at <http://activate.xmradio.com> or call 1-800-XM-RADIO (1-800-967-2346). Activate your XM Satellite Radio service in Canada online at <https://activate.xmradio.ca> or call 1-877-GET-XMSR (1-877-438-9677). You will need a major credit card. XM will send a signal from the satellites to activate the full channel lineup. Activation normally takes 10 to 15 minutes, but during peak busy periods you may need to keep your XM Ready home audio system on for up to an hour. When you can access the full lineup on your XM Ready home audio system you are done.

Basic Operation

- 1 Either turn <SOURCE SELECT> or press [SAT TU] to select "XM".
- 2 Set [MODE SELECTOR 1] to "AUDIO".
(☞ page 37 "Remote Control Unit Operations")
- 3 Use TUNING to select the station.
When the station is tuned in, the name of the track and artist are displayed.




- The channel switches continuously when **TUNING** is pressed and held.
- XM Radio stations can be preset using the same procedure as for FM/AM stations (☞ page 31 "Presetting Radio Stations (Preset Memory)" and "Listening to Preset Stations").
- The artist name, track name, category and reception level can be checked by pressing **STATUS**.



Checking the XM Signal Strength and Radio ID

- 1 Either turn <SOURCE SELECT> or press [SAT TU] to select "XM".
- 2 Press **STATUS** until "SIGNAL" appears on the display.
The display will switch as shown below, depending on the reception conditions.
- 3 Adjust the position of the antenna until "SIGNAL: GOOD" is shown on the display.
- 4 Press **STATUS** until the station you want to check (example: "XM001") is displayed.
- 5 Press **TUNING** and select channel 0 (XM000).
The radio ID is shown on the display.

| Display | Status |
|----------|-----------------------------|
| GOOD | Signal strength is good |
| MARGINAL | Signal strength is marginal |
| WEAK | Signal strength is weak |
| NO | No signal |

 


The strength of both the XM satellite and terrestrial signals can be checked at "System Setup" – "Input Setup" – "Antenna Aiming" (☞ page 23).

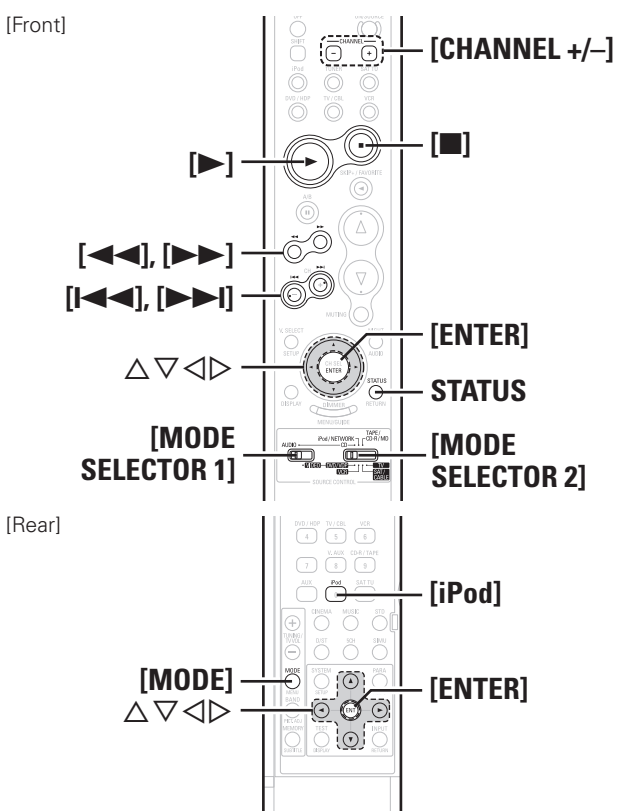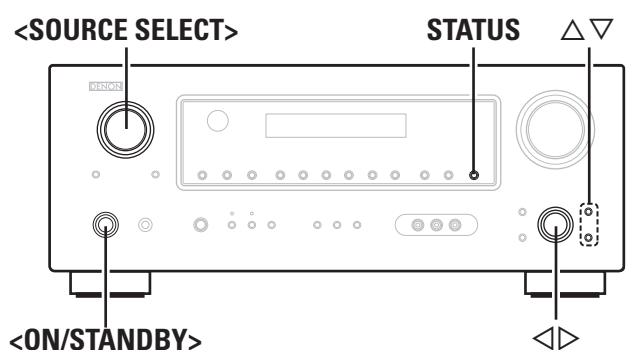


About the button names in these explanations
 < > : Buttons on the main unit
 [] : Buttons on the remote control unit
Button name only:
 Buttons on the main unit and remote control unit

Searching Categories

- 1 Press < > .

- 2 Use < > to select the category, then use Δ ∇ to select the desired station.

- "LOADING" is displayed while stations or data are being received.
- "UPDATING" is displayed while the encoding code is being updated.
- "XM ---" is displayed if the selected channel cannot be used.


iPod® Playback
 The music on an iPod can be played by using the Control Dock for iPod (ASD-1R, sold separately). The operation can also be performed using the buttons on the remote control unit.

-  iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
- ※ The iPod may only be used to copy or play contents that are not copyrighted or contents for which copying or playback is legally permitted for your private use as an individual. Be sure to comply with applicable copyright legislation.

Basic Operation

- 1 Make the necessary preparations.
 - ① Set the iPod in the DENON Control Dock for iPod.
 (See the Control Dock for iPod's operating instructions.)
 - ② Assign the Control Dock for iPod's input.

"System Setup" – "Input Setup" – "iPod Assign"
 (See page 22)

- 2 Either turn <SOURCE SELECT> or press [iPod] to select the input source assigned in step 1-② above.

 - ※ If the displays above are not displayed, the iPod may not be properly connected. Try connecting again.

- 3 Set [MODE SELECTOR 1] to "AUDIO" and [MODE SELECTOR 2] to "iPod/NETWORK".
 (See page 37 "Remote Control Unit Operations")


- With the default settings, the iPod can be used connected to the VCR (iPod) connector.
- Use the RESTORER mode to expand the low and high frequency components of compressed audio files and achieve a richer sound. The default setting is "Mode3".
- Press <ON/STANDBY> and set the AVR-488's power to the standby mode before disconnecting the iPod. Also switch the input source to one to which "iPod Assign" is not assigned before disconnecting the iPod.

NOTE

- Depending on the type of iPod and the software version, some functions may not operate.
- DENON will accept no responsibility whatsoever for any loss of iPod data.

Listening to Music in the Browse mode

- 1 Press **[MODE]** for 2 seconds or more, to change from Remote Mode to Browse Mode.

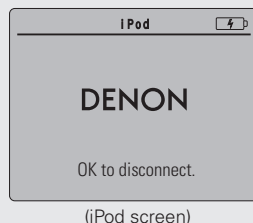

(iPod screen)

- 2 Use **[△▽]** to select the item, then press **[ENTER]** or **[▷]** to select the music file to be played.

- 3 Press **[ENTER]** or **[▷]**.
Playback starts.

Stopping playback temporarily

During playback, press **[ENTER]** or **[▷]**.
Press again to resume playback.

Fast-forwarding or fast-reversing

During playback, either press and hold **[△]** (to fast-reverse) or **[▽]** (to fast-forward), or press **[◀◀]** or **[▶▶]**.

To cue to the beginning of a track

During playback, either press **[△]** (to cue to the previous track) or **[▽]** (to cue to the next track), or press **[◀◀]** or **[▶▶]**.

To stop

During playback, either press and hold **[ENTER]** or press **[■]**.

Playing repeatedly

Press **[CHANNEL -]**.

[Selectable items] **All** **One** **OFF**

Shuffling playback

Press **[CHANNEL +]**.

[Selectable items] **Albums** **Songs** **OFF**

To switch between the Browse and Remote modes

Either press and hold **[MODE]**.



- The title name, artist name and album name can be checked by pressing **STATUS** during playback.
- On the AVR-488, folder and file names can be displayed as titles. Any characters that cannot be displayed are replaced with " . (period)".

Viewing Still Pictures or Videos on the iPod

Photo and video data on the iPod can be viewed on the monitor.
Only for iPod equipped with slideshow or video functions. (When using an ASD-1R)




- 1 Press and hold **[MODE]** to set the Remote mode.

- 2 Watching the iPod's screen, use **[△▽]** to select "Photos" or "Videos".

- 3 Press **[ENTER]** until the image you want to view is displayed.



"TV Out" at the iPod's "Slideshow Settings" or "Video Settings" must be set to "On" in order to display the iPod's photo data or videos on the monitor. For details, see the iPod's operating instructions.

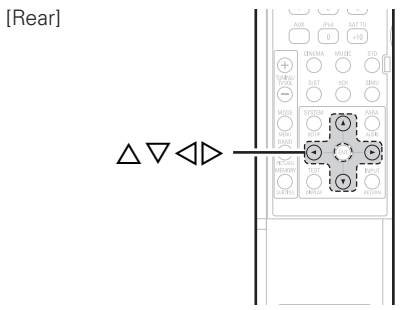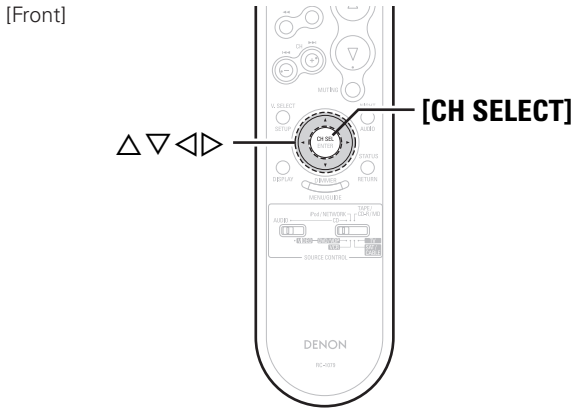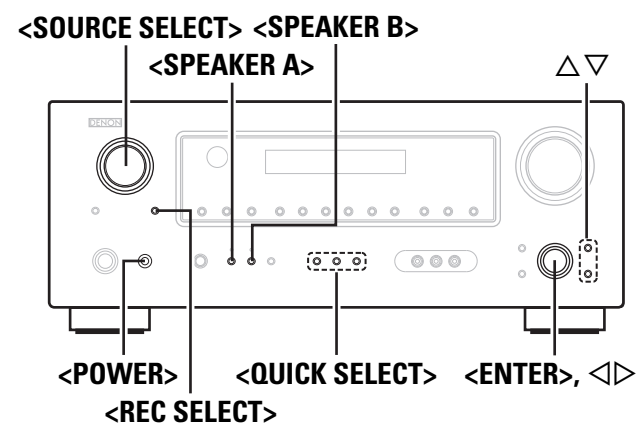

About the button names in these explanations
 < > : Buttons on the main unit
 [] : Buttons on the remote control unit
Button name only:
 Buttons on the main unit and remote control unit

Other Operations and Functions

Other Operations

Recording on an External Device (REC OUT mode)
 You can listen to one program source while recording a different program source.

- 1** Press <REC SELECT> until "RECOUT" appears on the display.
- 2** Turn <SOURCE SELECT> to choose the input source to be recorded.
 The "REC" indicator and the indicator for the selected source light.
- 3** Play the program source.
 For operating instructions, refer to the respective equipment's operating instructions.
 To record FM or AM broadcasts, select the broadcast (see page 30).
- 4** Start recording.
 For operating instructions, refer to the respective equipment's operating instructions.

 
- To cancel, press <REC SELECT>, then turn <SOURCE SELECT> until "RECOUT SOURCE" is displayed.
- Make a test recording before starting the actual recording.

NOTE

- Recordings you make are for your personal enjoyment and should not be used for other purposes without permission of the copyright holder.
- Digital signals are not output from the REC OUT (CDR/TAPE and VCR) connector.

Convenient Functions

Channel Level
 You can adjust the channel level either according to the playback sources or to suit your taste, as described below.

- 1** Press <ENTER> or [CH SELECT].

- 2** Use Δ▽, <ENTER> or [CH SELECT] to select the speaker.
 The speaker that can be set switches each time one of the buttons is pressed.
- 3** Use <Δ> <▷> to adjust the volume.
 ※ "OFF" can be set by pressing <Δ> when the subwoofer's volume is set to -12 dB.

Quick Select Function

With this function, the currently playing input source, input mode, surround mode and volume can be stored in the memory.

- 1** Set the input source, input mode, surround mode and volume to the conditions you want to store.
- 2** Press and hold <QUICK SELECT> until “Memory” appears on the display.

[Quick Select Defaults]

| | Input Source | Volume |
|-----------------------|--------------|--------|
| Quick Select 1 | DVD/HDP | -40 dB |
| Quick Select 2 | TV/CBL | -40 dB |
| Quick Select 3 | VCR | -40 dB |



To call out the settings, press <QUICK SELECT> at which the desired settings were stored.

Personal Memory Plus Function

This function sets the settings (input mode, surround mode, etc.) last selected for the individual input sources.

When you switch to an input source, the settings are automatically set to the ones that were set the last time that input source was used.



The surround parameters, tone control and the volumes of the different speakers are stored for the individual surround modes.

Last Function Memory

This stores the settings as they were directly before the standby mode was set.

When the power is turned back on, the settings are restored to as they were directly before the standby mode was set.

Backup Memory

The various settings are backed up for about 1 week, even if the power is turned off or the power cord is disconnected.

Resetting the Microprocessor

Perform this procedure if the display is abnormal or if operations cannot be performed.

When the microprocessor is reset, all the settings are reset to their default values.


- 1** Turn off the power using <POWER>.
- 2** Press <POWER> while simultaneously pressing <SPEAKER A> and <SPEAKER B>.
- 3** Once the display starts flashing at intervals of about 1 second, release the two buttons.




If in step 3 the display does not flash at intervals of about 1 second, start over from step 1.

Remote Control Unit Operations

[Front]

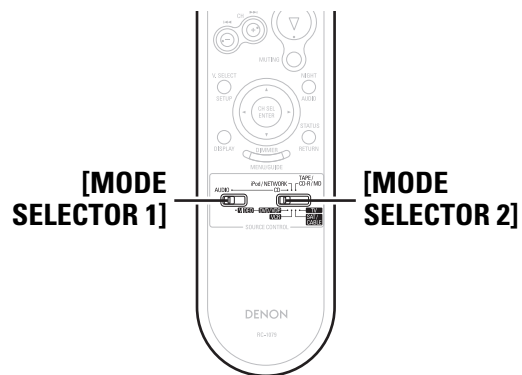

[Rear]

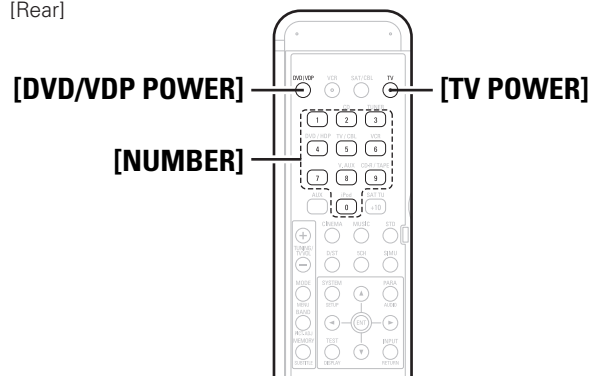

Depending on the model and year of manufacture of your equipment, some buttons may not operate.

Operating DENON Audio Components

1 Set [MODE SELECTOR 1] to “AUDIO”.

2 Set [MODE SELECTOR 2] to the position for the component to be operated (CD, iPod/NETWORK or TAPE/CD-R/MD).

3 Operate the audio component.

- ※ For details, refer to the component's operating instructions.
- ※ While this remote control unit is compatible with a wide range of infrared controlled components, it may be the case that some component models cannot be operated with this remote control unit.

Presetting

- DENON and other makes of components can be operated by setting the preset memory.
- Operation is not possible for some models.

1 Set [MODE SELECTOR 1] to “AUDIO” or “VIDEO”.

- ※ Set to the AUDIO side for the CD, iPod/NETWORK or TAPE/CD-R/MD position, and to the VIDEO side for the DVD/VDP, VCR, SAT/CABLE or TV position.

2 Set [MODE SELECTOR 2] to the component to be registered.

3 Press [DVD/VDP POWER] and [TV POWER] at the same time.

The indicator starts flashing.

4 Press [NUMBER] and input the 3-digit number of the brand of the component to be preset. The numbers are shown in the Preset Code Table (☞ End of this manual).

5 To store the codes of another component in the memory, repeat steps 1 to 4.



- The signals for the pressed buttons are emitted while setting the preset memory. To avoid accidental operation, cover the remote control unit's transmitting window while setting the preset memory.
- Depending on the model and year of manufacture, this function cannot be used for some models, even if they are of makes listed in the list of preset codes.
- Some manufacturers use more than one type of remote control code. Refer to the included list of preset codes to change the number and verify correct operation.
- The preset memory can be set for one component only among the following: TAPE/CD-R/MD, DVD/VDP and SAT/CABLE.

Operating Preset Components

1 Set [MODE SELECTOR 1] to “AUDIO” or “VIDEO”.

- ※ Set to the AUDIO side for the CD, iPod/NETWORK or TAPE/CD-R/MD position, and to the VIDEO side for the DVD/VDP, VCR, SAT/CABLE or TV position.


2 Set [MODE SELECTOR 2] to the component you want to operate.

3 Operate the component.

- ※ For details, refer to the component's operating instructions.
- ※ Some models cannot be operated with this remote control unit.

Functions of Buttons by Component


□ Front

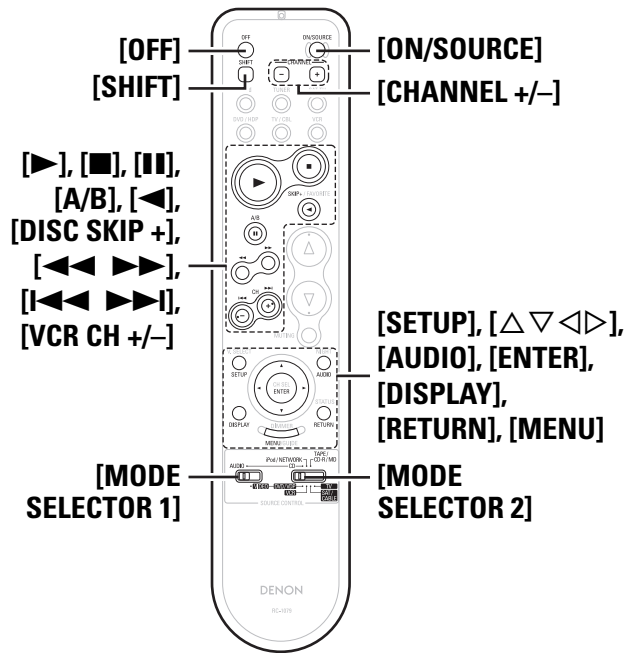

| Device operated | CD Player | iPod | CD Recorder | MD Recorder | Tape Deck | DVD Player | Video disc player | Video Deck | Satellite Receiver | Cable TV | TV (Monitor) |
|-------------------------|---|---|---|---|--------------------------|---|---|---|-----------------------|-----------------------|-----------------------|
| MODE SELECTOR 1 | AUDIO | | | | | VIDEO | | | | | |
| MODE SELECTOR 2 | CD | iPod/ NETWORK | TAPE / CD-R / MD | | | DVD / VDP | | VCR | SAT / CABLE | | TV |
| OFF | – | – | – | – | – | Power off | – | – | – | – | – |
| ON/SOURCE | – | – | – | – | – | Power on | Power on / Standby | Power on / Standby | Power on / Standby | Power on / Standby | Power on / Standby |
| SHIFT | Preset channel selection | Preset channel selection | Preset channel selection | Preset channel selection | Preset channel selection | – | – | – | – | – | – |
| CHANNEL + | Preset channel selection | 1-track/ album shuffle play | Preset channel selection | Preset channel selection | Preset channel selection | Switch Channels (+) | Switch Channels (+) | Switch Channels (+) | Switch Channels (+) | Switch Channels (+) | Switch Channels (+) |
| CHANNEL – | Preset channel selection | 1-track/All-track repeat play | Preset channel selection | Preset channel selection | Preset channel selection | Switch Channels (–) | Switch Channels (–) | Switch Channels (–) | Switch Channels (–) | Switch Channels (–) | Switch Channels (–) |
| ▶ | Play | Play / Pause | Play | Play | Play | Play | Play | Play | Punch through | Punch through | Punch through |
| ■ | Stop | Stop | Stop | Stop | Stop | Stop | Stop | Stop | | | |
| ⏏, A/B | Pause | – | Pause | Pause | A/B switching | Pause | Pause | Pause | | | |
| ◀, DISC SKIP + | Disc skip + | – | – | – | Reverse play | Disc skip | – | – | | | |
| ◀▶▶▶ | Manual Search (fast-reverse / fast-forward) | Manual Search (fast-reverse / fast-forward) | Manual Search (fast-reverse / fast-forward) | Manual Search (fast-reverse / fast-forward) | Rewind Fast forward | Manual Search (fast-reverse / fast-forward) | Manual Search (fast-reverse / fast-forward) | Manual Search (fast-reverse / fast-forward) | | | |
| ◀▶▶▶, VCR CH +/- | Auto search (cue) | Auto search (cue) | Auto search (cue) | Auto search (cue) | – | Auto search (cue) | Auto search (cue) | Switch Channels (–, +) | | | |
| SETUP | – | – | – | – | – | Setup | – | – | – | – | – |
| △ ▽ ◀ ▶ | – | Cursor | – | – | – | Cursor operation | – | – | Cursor operation | Cursor operation | Cursor operation |
| AUDIO | – | – | – | – | – | Switching the audio signal | – | – | – | – | – |
| ENTER | – | Enter | – | – | – | Enter setting | – | – | Enter setting | Enter setting | Enter setting |
| DISPLAY | – | – | – | – | – | Switching the display | – | – | Switching the display | Switching the display | Switching the display |
| RETURN | – | – | – | – | – | Return | – | – | Return | Return | Return |
| MENU | – | – | – | – | – | Calling out the menus | – | – | Calling out the menus | Calling out the menus | Calling out the menus |

Getting Started
Connections
Setup
Playback
Remote Control
Information
Troubleshooting

□ Rear

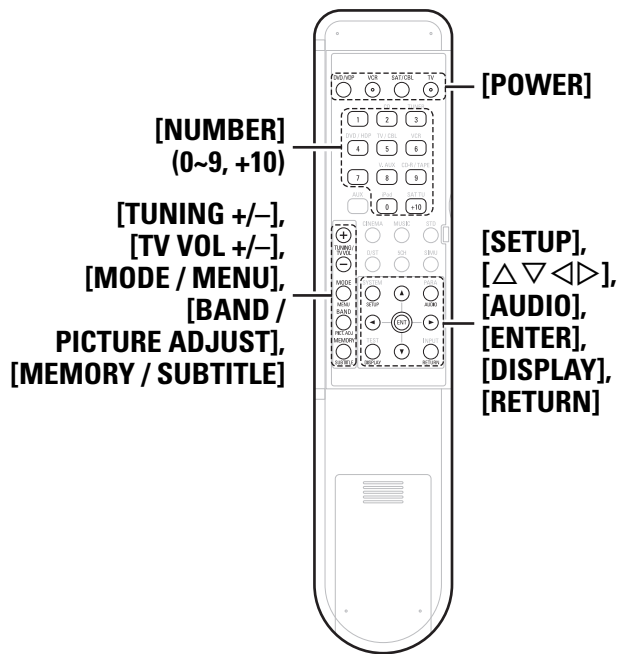


| Device operated | CD Player | iPod | CD Recorder | MD Recorder | Tape Deck | DVD Player | Video disc player | Video Deck | Satellite Receiver | Cable TV | TV (Monitor) |
|--------------------------------------|---------------------|---|-------------------------|---------------------|---------------------|--------------------------------|--------------------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| MODE SELECTOR 1 | AUDIO | | | | | VIDEO | | | | | |
| MODE SELECTOR 2 | CD | iPod/ NETWORK | TAPE / CD-R / MD | | | DVD / VDP | | VCR | SAT / CABLE | | TV |
| POWER | - | - | - | - | - | Power on/off | Power on/off | Power on/off | Power on/off | Power on/off | Power on/off |
| NUMBER (0 ~ 9, +10) | - | - | - | - | - | Number input / Track selection | Number input / Track selection | - | Channels | Channels | Channels |
| TUNING (+, -) / TV VOL (+, -) | Tuning (+, -) | Tuning (+, -) | Tuning (+, -) | Tuning (+, -) | Tuning (+, -) | Volume control (+, -) | Volume control (+, -) | Volume control (+, -) | Volume control (+, -) | Volume control (+, -) | Volume control (+, -) |
| MODE / MENU | Switch search modes | Switch search modes / Browse/Remote mode switching (Press and hold) | Switch search modes | Switch search modes | Switch search modes | Calling out the menus | - | - | Calling out the menus | Calling out the menus | Calling out the menus |
| SETUP | - | - | - | - | - | Setup | - | - | - | - | - |
| △ ▽ ◀ ▶ | - | - | - | - | - | Cursor operation | - | - | Cursor operation | Cursor operation | Cursor operation |
| AUDIO | - | - | - | - | - | Audio | - | - | - | - | - |
| BAND / PICTURE ADJUST | AM / FM switching | AM / FM switching | AM / FM switching | AM / FM switching | AM / FM switching | Picture adjust | - | - | - | - | - |
| ENTER | - | - | - | - | - | Enter setting | - | - | Enter setting | Enter setting | Enter setting |
| MEMORY / SUBTITLE | Preset memory | Preset memory | Preset memory | Preset memory | Preset memory | Subtitle | - | - | - | - | - |
| DISPLAY | - | - | - | - | - | Switching the display | - | - | Switching the display | Switching the display | Switching the display |
| RETURN | - | - | - | - | - | Return | - | - | Return | Return | Return |
| Default setting (Preset code) | DENON (111) | - | DENON (151) | - | - | DENON (111) | - | HITACHI (108) | - | ABC (007) | HITACHI (134) |
| Special Remarks | ① | - | ① | | | ①, ② | | ① | ①, ③ | | ①, ③ |


[Special Remarks]

- ① Only one device can be set in the preset memory for each mode. Also, when a new code is preset, the previous code is automatically deleted.
- ② For some brands, the DVD remote control buttons may have different function names. Check beforehand.
- ③ One of the following buttons can be assigned to the TV and satellite tuner or cable TV: CD, iPod/NETWORK, TAPE/CD-R/MD, DVD/VDP; VCR (☞ page 40 "Punch Through Function").

[Front]

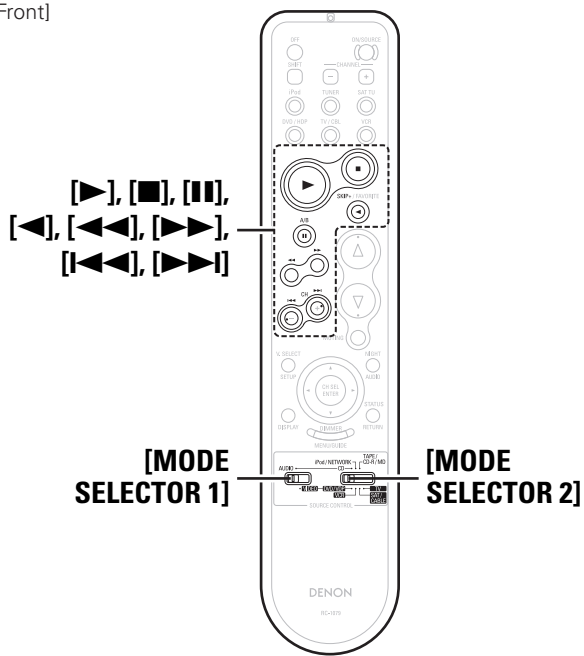

[Rear]

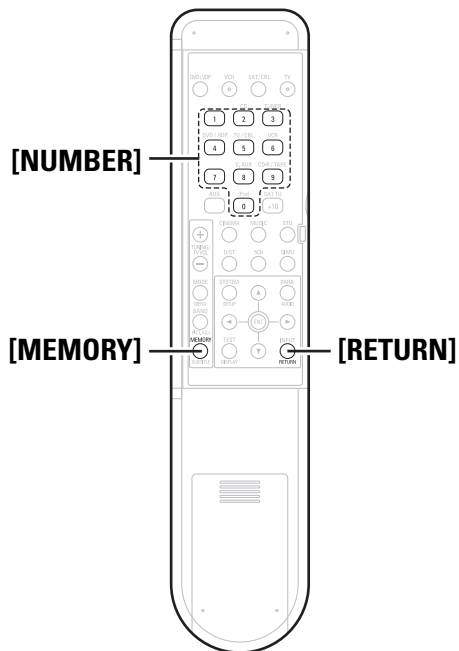

Punch Through Function

“Punch Through” is a function allowing you to operate ▶, ■, ⏸, ◀, ◀◀, ▶▶, ◀◀◀ and ▶▶▶ on CD, iPod/NETWORK, TAPE/CD-R/MD, DVD/VDP or VCR components when in the SAT/CABLE or TV mode. By default, nothing is set.

- 1** Set [MODE SELECTOR 1] to “VIDEO”.
- 2** Set [MODE SELECTOR 2] to the component to be registered (SAT/CABLE or TV).
- 3** Press [MEMORY] and [RETURN] at the same time. The indicator starts flashing.
- 4** Input the number of the component you want to set.

| | No. |
|--------------|-----|
| CD | 1 |
| iPod/NETWORK | 2 |
| TAPE/CD-R/MD | 3 |
| DVD/VDP | 4 |
| VCR | 5 |
| No setting | 0 |

Other Information


About Speaker Installation

Examples of speaker layouts

Below we introduce examples of speaker layouts. Refer to these to arrange your speakers according to their type and how you want to use them.

Basic setting

DTS 96/24 is a digital audio format enabling high sound quality playback in 5.1-channels with a sampling frequency of 96 kHz and 24 bit quantization on DVD-Video.

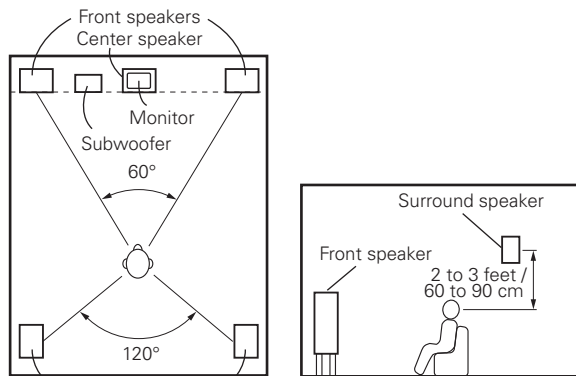

[As seen from above]

[As seen from the side]

Surround

The AVR-488 is equipped with a digital signal processing circuit that lets you play program sources in the surround mode to achieve the same sense of presence as in a movie theater.

Dolby Surround

Dolby Digital

Dolby Digital is a multichannel digital signal format developed by Dolby Laboratories.

A total of 5.1-channels are played: 3 front channels ("FL", "FR" and "C"), 2 surround channels ("SL" and "SR") and the "LFE" channel for low frequencies.

Because of this, there is no crosstalk between channels and a realistic sound field with a "three-dimensional" feeling (sense of distance, movement and positioning) is achieved.

A real, overpowering sense of presence is achieved when playing movie sources in AV rooms as well.

Dolby Pro Logic II

Dolby Pro Logic II is a matrix decoding technology developed by Dolby Laboratories.

Regular music such as that on CDs is encoded into 5-channels to achieve an excellent surround effect.

The surround channel signals are converted into stereo and full band signals (with a frequency response of 20 Hz to 20 kHz or greater) to create a "three-dimensional" sound image offering a rich sense of presence for all stereo sources.

※ Sources recorded in Dolby Surround

Sources recorded in Dolby Surround are indicated with the following logo marks.

Dolby Surround support mark : 

Manufactured under license from Dolby Laboratories.
"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

DTS Surround

DTS Digital Surround

DTS Digital Surround is the standard digital surround format of DTS, Inc., compatible with a sampling frequency of 44.1 or 48 kHz and up to 5.1-channels of digital discrete surround sound.

DTS NEO:6™ Surround

DTS NEO:6™ is a matrix decoding technology for achieving 5.1-channel surround playback with 2-channel sources. It includes "DTS NEO:6 CINEMA" suited for playing movies and "DTS NEO:6 MUSIC" suited for playing music.

DTS 96/24

DTS 96/24 is a digital audio format enabling high sound quality playback in 5.1-channels with a sampling frequency of 96 kHz and 24 bit quantization on DVD-Video.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535; 7,003,467 & other U.S. and worldwide patents issued & pending. DTS, DTS Digital Surround, ES, and Neo:6 are registered trademarks and the DTS logos, Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

Neural Surround

Neural Surround™, a breakthrough in audio technology, will bring the excitement of surround music to more of America's listening audience. It provides the rich envelopment and discrete image detail of surround sound in a format 100 % compatible with stereo. With superior spectral resolution and channel separation, Neural Surround™ draws the brain's attention to sonic details in musical instruments, vocals, and ambience that are typically masked by other playback systems. This allows the listener to fully experience the richness and subtleties in recorded performance as never before. As the chosen format for XM Satellite Radio's new XM HD surround programming, Neural Surround will help deliver more surround music to more listeners than any other broadcast format. XM Satellite Radio will be the first radio company to broadcast surround sound on the radio 24 hours a day and will offer three channels fully dedicated to Neural Surround™ music. This alone will amount to more than 25,000 hours of Neural Surround™ music each year.



This product is manufactured under license from Neural Audio Corporation.

D&M Holdings Inc. hereby grants the user a non-exclusive, nontransferable, limited license right exercisable to use the NA SURROUND Technology and other US and World Wide Patents Pending technology.

"Neural" and "Neural Audio" and "Neural Surround" are trademarks of Neural Audio Corporation. All Rights Reserved.

HDMI (High-Definition Multimedia Interface)

HDMI is a digital interface standard for next generation TVs based on DVI (Digital Visual Interface) standards and optimized for use in consumer equipment.

Non-compressed digital video and multi-channel audio signals are transmitted with a single connection.

HDMI is also compatible with HDCP (High-bandwidth Digital Contents Protection), a technology for protecting copyrights that encrypts digital video signals in the same way as with DVI.

Deep Color

Eliminates on-screen color banding, for smooth tonal transitions and subtle gradations between colors.

Enables increased contrast ratio.

Can represent many times more shades of gray between black and white.

At 30-bit pixel depth, a four times improvement would be the minimum, and the typical improvement would be eight times or more.

xvYCC

Next-generation "xvYCC" color space supports 1.8 times as many colors as existing HDTV signals.

Lets HDTVs display colors more accurately.

Enables displays with natural, vivid colors.

"HDMI", "HDMI logo" and "High-Definition Multimedia Interface" are trademarks or registered trademarks of HDMI Licensing LLC.

Surround Modes and Parameters

| Surround mode | Signals and adjustability in the different modes | | | | | | | | | | | |
|--------------------|--|--------|--------------|-----------|---|--------------------|------------|------------|------------|--------------|------------|-----------|
| | Channel output | | | | Parameter (default values are shown in parentheses) | | | | | | | |
| | Front L/R | Center | Surround L/R | Subwoofer | D. COMP * ₁ | LFE * ₂ | CINEMA EQ. | MODE | ROOM SIZE | EFFECT LEVEL | DELAY TIME | Subwoofer |
| DIRECT | ○ | × | × | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | × | × | × | ○ |
| STEREO | ○ | × | × | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | × | × | × | × |
| EXT. IN | ○ | ⊙ | ⊙ | ⊙ | × | × | × | × | × | × | × | × |
| DOLBY PRO LOGIC II | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | × | ○ (NOTE2) | ○ (CINEMA) | × | × | × | × |
| DTS NEO:6 | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | × | ○ (NOTE1) | ○ (CINEMA) | × | × | × | × |
| DOLBY DIGITAL | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | ○ (0 dB) | ○ (OFF) | × | × | × | × | × |
| DTS SURROUND | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | ○ (0 dB) | ○ (OFF) | × | × | × | × | × |
| neural | ○ | ⊙ | ⊙ | ⊙ | × | × | × | × | × | × | × | × |
| 5CH STEREO | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | × | × | × | × |
| ROCK ARENA | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | ○ (medium) | ○ (10) | × | × |
| JAZZ CLUB | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | ○ (medium) | ○ (10) | × | × |
| MONO MOVIE | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | ○ (medium) | ○ (10) | × | × |
| VIDEO GAME | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | ○ (medium) | ○ (10) | × | × |
| MATRIX | ○ | ⊙ | ⊙ | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | × | × | ○ (30 ms) | × |
| VIRTURL | ○ | × | × | ⊙ | ○ (OFF) | ○ (0 dB) | × | × | × | × | × | × |

○ : Signal / Adjustable

×

⊙ : Turned on or off by speaker configuration setting

NOTE1 : This parameter is available when "Parameter" - "Surround Parameter" - "MODE" is set to "CINEMA" (page 26).

NOTE2 : This parameter is available when "Parameter" - "Surround Parameter" - "MODE" is set to "CINEMA" or "PL" (page 26).

NOTE:

*1 : When playing Dolby Digital and DTS signals.

*2 : When playing Dolby Digital, DTS and DVD-Audio.

| Surround mode | Signals and adjustability in the different modes | | | | | | | |
|--------------------|---|--------------|--------------|-----------------------|--------------|--------------|------------|----------|
| | Parameter (default values are shown in parentheses) | | | | | | | |
| | PRO LOGIC II MUSIC mode only | | | NEO:6 MUSIC mode only | EXT. IN only | Tone Control | Night Mode | RESTORER |
| PANORAMA | DIMENSION | CENTER WIDTH | CENTER IMAGE | SUBWOOFER ATT. | | | | |
| DIRECT | × | × | × | × | × | × | ○ (OFF) | ○ |
| STEREO | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | ○ |
| EXT. IN | × | × | × | × | ○ | × | × | × |
| DOLBY PRO LOGIC II | ○ (OFF) | ○ (3) | ○ (3) | × | × | ○ (0 dB) | ○ (OFF) | ○ |
| DTS NEO:6 | × | × | × | ○ (0.3) | × | ○ (0 dB) | ○ (OFF) | ○ |
| DOLBY DIGITAL | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | × |
| DTS SURROUND | × | × | × | × | × | ○ (0 dB) | ○ (NOTE4) | × |
| neural | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | × |
| 5CH STEREO | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | ○ |
| ROCK ARENA | × | × | × | × | × | ○ (NOTE3) | ○ (OFF) | ○ |
| JAZZ CLUB | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | ○ |
| MONO MOVIE | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | ○ |
| VIDEO GAME | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | ○ |
| MATRIX | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | ○ |
| VIRTURL | × | × | × | × | × | ○ (0 dB) | ○ (OFF) | ○ |

○ : Adjustable

× : Not adjustable

NOTE3 : BASS +6 dB, TREBLE +4 dB

NOTE4 : This parameter is invalid during input of the "DTS 96/24 "signal.

Differences in Surround Mode Names Depending on the Input Signals

| Button | Input signals | | | | | | | | | |
|---------------------------|---------------|--------|------------|-------------|-----------|---------------------------|-----------------------|---------------------|----------------------|-----------------|
| | Surround mode | ANALOG | LINEAR PCM | DTS | | DOLBY DIGITAL | | | DVD-AUDIO | |
| | | | | DTS (5.1ch) | DTS 96/24 | DOLBY DIGITAL (5.1/5/4ch) | DOLBY DIGITAL (4/3ch) | DOLBY DIGITAL (2ch) | DVD-Audio (multi ch) | DVD-Audio (2ch) |
| STANDARD | | | | | | | | | | |
| DTS SURROUND | | | | | | | | | | |
| DTS SURROUND | × | × | ● | × | × | × | × | × | × | × |
| DTS 96/24 | × | × | × | ● | × | × | × | × | × | × |
| DTS NEO:6 CINEMA | ○ | ○ | × | × | × | × | ○ | × | × | ○ |
| DTS NEO:6 MUSIC | ○ | ○ | × | × | × | × | ○ | × | × | ○ |
| DOLBY SURROUND | | | | | | | | | | |
| DOLBY DIGITAL | × | × | × | × | ● | ● | × | × | × | × |
| DOLBY PRO LOGIC II CINEMA | ○ | ○ | × | × | × | × | ○ | × | × | ○ |
| DOLBY PRO LOGIC II MUSIC | ○ | ○ | × | × | × | × | ○ | × | × | ○ |
| DOLBY PRO LOGIC II GAME | ○ | ○ | × | × | × | × | ○ | × | × | ○ |
| DOLBY PRO LOGIC | ○ | ○ | × | × | × | × | ○ | × | × | ○ |
| neural | ○ | ○ | × | × | × | × | × | × | × | ○ |
| DIRECT | | | | | | | | | | |
| DIRECT | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| DSP SIMULATION | | | | | | | | | | |
| 5CH STEREO | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| ROCK ARENA | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| JAZZ CLUB | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| MONO MOVIE | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| VIDEO GAME | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| MATRIX | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| VIRTUAL | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| STEREO | | | | | | | | | | |
| STEREO | ● | ● | ○ | ○ | ○ | ○ | ○ | ○ | × | ● |

● : Mode selectable in initial status
 ○ : Selectable mode
 × : Non-selectable mode

Troubleshooting

If a problem should arise, first check the following:

1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?
3. Are the other components operating properly?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

In this case, disconnect the power immediately and contact your store of purchase.

[General]

| Symptom | Cause | Countermeasure | Page |
|---|--|---|------|
| Power does not turn on, or turns off directly after it was turned on. | <ul style="list-style-type: none"> • Connection of the power cord is faulty. | <ul style="list-style-type: none"> • Check the insertion of the power cord plug. | 17 |
| No sound is produced from speakers. | <ul style="list-style-type: none"> • Connection with the input devices or connection of the speaker cables is faulty. | <ul style="list-style-type: none"> • Check the connections. | 9 |
| | <ul style="list-style-type: none"> • Device you want to play and set input source do not match. | <ul style="list-style-type: none"> • Select an appropriate input source. | 29 |
| | <ul style="list-style-type: none"> • Master volume is turned too low. | <ul style="list-style-type: none"> • Adjust the master volume to an appropriate level. | 29 |
| | <ul style="list-style-type: none"> • Mute mode is set. | <ul style="list-style-type: none"> • Cancel the mute mode. | 30 |
| | <ul style="list-style-type: none"> • Headphones are connected. | <ul style="list-style-type: none"> • Disconnect the headphones. | 30 |
| <ul style="list-style-type: none"> • No digital signals are being input. | <ul style="list-style-type: none"> • Select an input source for which the digital input setting has been made. | 22 | |
| | <ul style="list-style-type: none"> • The connectors to which the digital inputs are assigned and the settable input modes do not match. | <ul style="list-style-type: none"> • Set the input mode. | 29 |
| Display is off. | <ul style="list-style-type: none"> • The Dimmer setting is set to "OFF". | <ul style="list-style-type: none"> • Set to something other than "OFF". | 30 |
| "DOLBY DIGITAL" indicator does not appear on display. | <ul style="list-style-type: none"> • DVD player's digital audio output setting is not proper. | <ul style="list-style-type: none"> • Check the DVD player's audio output setting. For details, read the DVD player's operating instructions. | - |

| Symptom | Cause | Countermeasure | Page |
|---|---|--|------|
| Power turns off suddenly and power indicator flashes red. | <ul style="list-style-type: none"> • Protection circuit activated due to rise of internal temperature. | <ul style="list-style-type: none"> • Turn off the power, wait for the set to fully cool down, then turn the power back on. | 9 |
| | <ul style="list-style-type: none"> • Core wires of two speakers are touching each other or a core wire is sticking out of the terminal and touching the set's rear panel, activating the protection circuit. | <ul style="list-style-type: none"> • Place the set in a well-ventilated place. • First unplug the power cord, then twist the core wires tightly or terminate the speaker cables, then reconnect. | 9 |
| | <ul style="list-style-type: none"> • Speakers with an impedance other than specified are being used. | <ul style="list-style-type: none"> • Use speakers with the specified impedance. | 9 |
| | <ul style="list-style-type: none"> • Set is damaged. | <ul style="list-style-type: none"> • Turn off the power and contact a DENON service center. | - |

[Remote Control Unit]

| Symptom | Cause | Countermeasure | Page |
|---|---|--|------|
| Set does not work properly when remote control unit operated. | <ul style="list-style-type: none"> • Batteries are worn. | <ul style="list-style-type: none"> • Replace with new batteries. | 3 |
| | <ul style="list-style-type: none"> • You are operating outside of the specified range. | <ul style="list-style-type: none"> • Operate within the specified range. | 3 |
| | <ul style="list-style-type: none"> • Obstacle between main unit and remote control unit. | <ul style="list-style-type: none"> • Remove the obstacle. | 3 |
| | <ul style="list-style-type: none"> • The batteries are not inserted in the proper direction, as indicated by the polarity marks in the battery compartment. | <ul style="list-style-type: none"> • Insert the batteries in the proper direction, following the polarity marks in the battery compartment. | 3 |
| | <ul style="list-style-type: none"> • The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). | <ul style="list-style-type: none"> • Move the set to a place in which the remote control sensor will not be exposed to strong light. | 3 |
| | <ul style="list-style-type: none"> • The remote ID of the main unit and remote control unit do not match. | <ul style="list-style-type: none"> • Set "Remote ID" for the main unit to "1". | 24 |

[Audio]

| Symptom | Cause | Countermeasure | Page |
|---|---|--|-------------|
| No sound is produced from center speaker. | • You are playing a monaural source (TV, AM radio broadcast, etc.) in the "STANDARD" (Dolby/DTS Surround) mode. | • The mode is set to something other than "STANDARD" (Dolby/DTS Surround). | 25 |
| No sound is produced from surround speakers. | • The surround mode is set to "STEREO" or "DIRECT". | • Set to a surround playback mode. | 25 |
| No sound is produced from subwoofer. | • Subwoofer's power not turned on. • The "Subwoofer" setting at "Speaker Setup" is set to "No". • The subwoofer is not properly connected. • The subwoofer's volume is turned off. | • Turn on the subwoofer's power. | - |
| | | • Set to "Yes". • Check the connections. | 20 9 |
| No test tones are produced when remote control unit's TEST button is pressed. | • Surround mode not set to "STANDARD" (Dolby/DTS Surround)" | • Adjust the subwoofer's volume to an appropriate level. | 35 |
| | | • Set to the "STANDARD" (Dolby/DTS Surround) mode. | 25 |
| DTS sound is not output. | • DVD player's audio output setting is not set to bitstream. • DVD player is not compatible with DTS sound playback. • The AVR-488's "Input Mode" setting is set to other than "DTS". | • Set the DVD player. For details, refer to the DVD player's operating instructions. | - |
| | | • Use a DTS-compatible player. • Set to the "Auto" or "DTS" mode. | - 29 |
| HDMI audio signals are not output from speakers. | - | • The audio signal input to the HDMI input connector cannot be played on the AVR-488. Input the audio signal to the digital audio input connector or analog audio input connector. | 10 |
| No sound is output from the monitor connected with HDMI connections. | • HDMI input setting is improper. | • Check the HDMI input setting. | 22 |

[Video]

| Symptom | Cause | Countermeasure | Page |
|---|---|--|------------|
| No picture appears. | • The connections between the AVR-488 and monitor are faulty. • The monitor's input setting is wrong. • The player is connected using the component input connectors, the monitor is connected using the video (yellow) or S-Video output connectors. | • Check the connections. | 10 ~ 17 |
| | | • Set properly. • High definition (1080i/720p) and progressive (480p/576p) video signals are not down-converted. Set the player to interlace (480i/576i) signals. | - - |
| No picture appears with HDMI connections. | • The connections to the HDMI connectors are faulty. • HDMI input setting is improper. • The HDMI format of the player and monitor do not match. | • Check the connections. | 10 |
| | | • Check the HDMI input setting. • Match the HDMI format of the player and monitor. | 22 10 |
| DVDs cannot be copied on a VCR. | - | • This is not a malfunction. Most movie software includes copy prevention signals and cannot be copied. | - |

[iPod]

| Symptom | Cause | Countermeasure | Page |
|------------------------|---|--|---------|
| iPod cannot be played. | • The input source assigned to Control Dock for iPod is not selected. • Cable is not properly connected. • Control Dock for iPod's AC adapter is not connected to power outlet. | • Switch to the input source assigned at Control Dock for iPod. | 22 |
| | | • Reconnect. • Plug the Control Dock for iPod's AC adapter into a power outlet. | 12 - |

[XM Satellite Radio]

| Symptom | Cause | Countermeasure | Page |
|--|---|--|--------|
| "CHECK ANTENNA" is displayed in the XM mode. | • AVR-488's XM connector and the XM Mini-Tuner and Home Dock is not properly connected. | • Check that the connections are correct. | 15 |
| "NO SIGNAL" is displayed in the XM mode. | • The signal cannot be received. | • Reposition your XM Mini-Tuner and Home Dock antenna. | 32 |
| "OFF AIR" is displayed in the XM mode. | • The selected channel is not currently broadcasting. | • Select another channel. | 32, 33 |
| Receiving only XM channels 0 and 1. | • The XM Tuner is not activated. | • Contact XM Radio. | 32 |

Specifications

Audio section

Power amplifier

Rated output:

Front (A, B):
 75 W + 75 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.08 % T.H.D.)
 110 W + 110 W (6 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

Center:

75 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.08 % T.H.D.)
 110 W (6 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

Surround:

75 W + 75 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.08 % T.H.D.)
 110 W + 110 W (6 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

Output connectors:

Front: A or B 6 ~ 16 Ω/ohms
 A + B 12 ~ 16 Ω/ohms
 Center, Surround: 6 ~ 16 Ω/ohms

Analog

Input sensitivity / Input impedance:

200 mV / 47 kΩ/kohms

Frequency response:

10 Hz ~ 100 kHz — +1, -3 dB (DIRECT mode)

S/N:

98 dB (IHF-A weighted, DIRECT mode)

Video section

Standard video connectors

Input / output level and impedance:

1 Vp-p, 75 Ω/ohms

Frequency response:

5 Hz ~ 10 MHz — +1, -3 dB

S-Video connectors

Input / output level and impedance:

Y (brightness) signal — 1 Vp-p, 75 Ω/ohms

C (color) signal — 0.286 Vp-p, 75 Ω/ohms

5 Hz ~ 10 MHz — +1, -3 dB

Frequency response:

Color component video connector

Input / output level and impedance:

Y (brightness) signal — 1 Vp-p, 75 Ω/ohms

P_B / C_B signal — 0.7 Vp-p, 75 Ω/ohms

P_R / C_R signal — 0.7 Vp-p, 75 Ω/ohms

Frequency response:

5 Hz ~ 30 MHz — +0, -3 dB

Tuner section

Receiving Range:

[FM] (note: μV at 75 Ω/ohms, 0 dBf = 1 × 10⁻¹⁵ W)
 87.5 MHz ~ 107.9 MHz

Usable Sensitivity:

1.0 μV (11.2 dBf)

50 dB Quieting Sensitivity:

MONO 1.6 μV (15.3 dBf)

STEREO 23 μV (38.5 dBf)

S/N (IHF-A):

MONO 77 dB

STEREO 72 dB

Total harmonic Distortion (at 1 kHz):

MONO 0.15 %

STEREO 0.3 %

[AM]

520 kHz ~ 1710 kHz

18 μV

General

Power supply:

AC 120 V, 60 Hz

Power consumption:

3.8 A

0.3 W (Standby)

Maximum external dimensions:

434 (W) × 171 (H) × 377 (D) mm (17-3/32" × 6-47/64" × 14-27/32")

Weight:

10.4 kg (22 lbs 8.8 oz)

Remote control unit (RC-1079)

Batteries:

R6P/AA Type (two batteries)

Maximum external dimensions:

52 (W) × 243 (H) × 21 (D) mm (2-3/64" × 9-9/16" × 53/64")

Weight:

184 g (Approx. 6.5 oz) (including batteries)

* For purposes of improvement, specifications and design are subject to change without notice.

List of preset codes / Liste de codes pré-régulés

DVD Player

| | | |
|----------|------------|--------------------|
| A | Aiwa | 009 |
| D | Denon | 014, [111]* |
| H | Hitachi | 010 |
| J | JVC | 006, 011 |
| K | Konka | 012, 013 |
| M | Magnavox | 005 |
| | Mitsubishi | 004 |
| P | Panasonic | 014 |
| | Philips | 005, 015, 016, 017 |
| | Pioneer | 003, 008 |
| S | Sanyo | 018 |
| | Sony | 002, 019, 020 |
| T | Toshiba | 001, 021, 022 |
| Z | Zenith | 023 |

VDP

| | | |
|----------|------------|--------------------|
| D | Denon | 028, 029, 112 |
| M | Magnavox | 026 |
| | Mitsubishi | 028 |
| P | Panasonic | 029, 030 |
| | Philips | 026 |
| | Pioneer | 028, 031 |
| R | RCA | 032 |
| S | Sony | 033, 034, 035, 036 |

VCR

| | | |
|----------|---------------|-----------------------------------|
| A | Admiral | 081 |
| | Aiko | 095 |
| | Aiwa | 009 |
| | Akai | 026, 027, 070, 072, 082, 083, 084 |
| | Alba | 055 |
| | Amstrad | 009 |
| | ASA | 042 |
| | Asha | 087 |
| | Audio Dynamic | 005, 085 |
| | Audiovox | 088 |
| | Beaumarck | 087 |
| | Broksonic | 086, 093 |
| C | Calix | 088 |
| | Candle | 006, 087, 088, 089, 090 |
| | Canon | 049, 057 |
| | Capehart | 025, 055, 056, 071 |
| | Carver | 015 |
| | CCE | 095 |
| | Citizen | 006, 007, 087, 088, 089, 090, 095 |
| | Craig | 007, 087, 088, 091, 115 |

| | | |
|----------|-----------------|--|
| | Curtis Mathes | 006, 049, 073, 080, 087, 090, 092 |
| | Cybernex | 087 |
| D | Daewoo | 025, 055, 059, 074, 089, 093, 095, 096 |
| | Daytron | 025, 055 |
| | DBX | 005, 085 |
| | Dumont | 053 |
| | Dynatech | 009 |
| E | Electrohome | 001, 088, 097 |
| | Electrohome | 088 |
| | Emerson | 001, 009, 017, 027, 086, 088, 089, 092, 093, 097, 100, 101, 102, 103, 104, 117 |
| F | Fisher | 009, 028, 031, 053, 054, 091, 099, 115 |
| G | GE | 007, 011, 049, 050, 051, 052, 073, 080, 087 |
| | Go Video | 047, 048 |
| | Goldstar | 000, 006, 012, 062, 088 |
| | Gradiente | 094 |
| | Grundig | 042 |
| H | Harley Davidson | 094 |
| | Harman Kardon | 040, 062 |
| | Hi-Q | 091 |
| | Hitachi | 009, 013, 023, 026, 058, [108]*, 109, 110, 111 |
| J | JC Penny | 004, 005, 007, 023, 028, 049, 062, 085, 087, 088 |
| | Jensen | 013, 026 |
| | JVC | 004, 005, 006, 026, 029, 043, 044, 045, 046, 085 |
| K | Kenwood | 004, 005, 006, 026, 029, 033, 045, 085, 090 |
| | Kodak | 088 |
| L | Lloyd | 009, 094 |
| | LXI | 088 |
| M | Magnavox | 015, 016, 042, 049, 063, 106 |
| | Magnin | 087 |
| | Marantz | 004, 005, 006, 015, 042, 049, 085, 090 |
| | Marta | 088 |
| | MEI | 049 |
| | Memorex | 009, 033, 049, 053, 060, 081, 087, 088, 091, 094, 115 |
| | Metz | 123, 124, 125, 126, 127, 128 |
| | MGA | 001, 017, 027, 041, 097 |
| | MGN Technology | 087 |
| | Midland | 011 |
| | Minolta | 013, 023 |
| | Mitsubishi | 001, 003, 008, 013, 014, 017, 027, 029, 039, 040, 041, 045, 097 |
| | Motorola | 081 |
| | Montgomery Ward | 001, 002, 007, 009, 049, 063, 081, 115, 117 |
| | MTC | 009, 087, 094 |

| | | |
|----------|-------------|---|
| | Multitech | 007, 009, 011, 087, 090, 094 |
| N | NAD | 038 |
| | NEC | 004, 005, 006, 018, 026, 029, 045, 061, 062, 085 |
| | Nikko | 088 |
| | Noblex | 087 |
| O | Optimus | 081, 088 |
| | Optonica | 021 |
| P | Panasonic | 024, 049, 064, 066, 067, 068, 069, 107 |
| | Perdio | 009 |
| | Pentax | 009, 013, 023, 058, 090 |
| | Philco | 015, 016, 049 |
| | Philips | 015, 021, 042, 049, 105 |
| | Pilot | 088 |
| | Pioneer | 005, 013, 029, 036, 037, 038, 045, 085 |
| | Portland | 025, 055, 090 |
| | Proscan | 063, 080 |
| | Pulsar | 060 |
| Q | Quartz | 033 |
| | Quasar | 034, 035, 049 |
| R | Radio Shack | 001, 002, 021, 081, 087, 088, 091, 094, 097, 098, 115 |
| | Radix | 088 |
| | Randex | 088 |
| | RCA | 007, 013, 019, 023, 058, 063, 064, 065, 073, 080, 082, 087, 089, 021, 031, 033, 049, 053, 081, 087, 088, 091, 094, 097, 098 |
| | Realistic | 055 |
| S | Salora | 033, 041 |
| | Samsung | 007, 011, 051, 059, 070, 083, 087, 089, 113 |
| | Sanky | 081 |
| | Sansui | 005, 026, 029, 045, 061, 085, 114 |
| | Sanyo | 032, 033, 053, 087, 091, 115, 116 |
| | SBR | 042 |
| | Scott | 017, 020, 086, 089, 093, 117 |
| | Sears | 013, 023, 028, 031, 033, 053, 054, 088, 091, 098, 099, 115 |
| | Sentra | 055 |
| | Sharp | 001, 002, 021, 097 |
| | Shogun | 087 |
| | Sony | 075, 076, 077, 078, 079, 121, 122 |
| | STS | 023 |
| | Sylvania | 009, 015, 016, 017, 041, 049, 094 |
| | Symphonic | 009, 094 |
| T | Tandy | 009 |
| | Tashiko | 009, 088 |
| | Tatung | 004, 026, 030 |

| | | |
|----------|------------------|--|
| | Teac | 004, 009, 026, 094 |
| | Technics | 024, 049 |
| | TMK | 087, 092 |
| | Toshiba | 013, 017, 020, 041, 059, 089, 098, 099, 117 |
| | Totevision | 007, 087, 088 |
| U | Unirech | 087 |
| V | Vectror Research | 005, 062, 085, 089, 090 |
| | Victor | 005, 045, 046, 085 |
| | Video Concepts | 005, 027, 085, 089, 090 |
| | Videosonic | 007, 087 |
| W | Wards | 013, 021, 023, 087, 088, 089, 091, 094, 097, 118, 119, 120 |
| X | XR-1000 | 094 |
| Y | Yamaha | 004, 005, 006, 026, 062, 085 |
| Z | Zenith | 060, 078, 079 |

Television

| | | |
|----------|---------------|--|
| A | Admiral | 045, 121 |
| | Adventura | 122 |
| | Aiko | 054 |
| | Akai | 016, 027, 046 |
| | Alleron | 062 |
| | A-Mark | 007 |
| | Amtron | 061 |
| | Anam | 006, 007, 036 |
| | Anam National | 061, 147 |
| | AOC | 003, 007, 033, 038, 039, 047, 048, 049, 133 |
| | Archer | 007 |
| | Audiovox | 007, 061 |
| B | Bauer | 155 |
| | Belcor | 047 |
| | Bell & Howell | 045, 118 |
| | Bradford | 061 |
| | Brockwood | 003, 047 |
| C | Candle | 003, 030, 031, 032, 038, 047, 049, 050, 122 |
| | Capehart | 003 |
| | Celebrity | 046 |
| | Circuit City | 003 |
| | Citizen | 029, 030, 031, 032, 034, 038, 047, 049, 050, 054, 061, 095, 122, 123 |
| | Concerto | 031, 047, 049 |
| | Colortyme | 003, 047, 049, 135 |
| | Contec | 013, 051, 052, 061 |
| | Cony | 051, 052, 061 |
| | Craig | 004, 061 |
| | Crown | 029 |
| | Curtis Mathes | 029, 034, 038, 044, 047, 049, 053, 095, 118 |

| | | |
|----------|----------------|--|
| D | Daewoo | 027, 029, 039, 048, 049, 054, 055, 106, 107, 137 |
| | Daytron | 003, 049 |
| | Dimensia | 044 |
| | Dixi | 007, 015, 027 |
| E | Electroband | 046 |
| | Electrohome | 029, 056, 057, 058, 147 |
| | Elta | 027 |
| | Emerson | 029, 051, 059, 060, 061, 062, 118, 123, 124, 139, 148 |
| | Envision | 038 |
| | Etron | 027 |
| F | Fisher | 014, 021, 063, 064, 065, 118 |
| | Formenti | 155 |
| | Fortress | 012 |
| | Fujitsu | 004, 062 |
| | Funai | 004, 062 |
| | Futuretech | 004 |
| G | GE | 020, 036, 037, 040, 044, 058, 066, 088, 119, 120, 125, 147 |
| | Goldstar | 000, 015, 029, 031, 039, 048, 051, 056, 057, 067, 068, 069, 116 |
| | Grundy | 062 |
| H | Hitachi | 029, 031, 051, 052, 070, 111, 112, 113, 124, [134]* |
| | Hitachi Pay TV | 151 |
| I | Infinity | 017, 071 |
| J | Janeil | 122 |
| | JBL | 017, 071 |
| | JC Penny | 020, 034, 039, 040, 041, 044, 048, 050, 058, 066, 069, 076, 088, 090, 095, 125, 136, 159 |
| | JCB | 046 |
| | JVC | 019, 051, 052, 072, 073, 091, 117, 126 |
| K | Kawasho | 018, 046 |
| | Kenwood | 038, 056, 057 |
| | Kloss | 010, 032 |
| | Kloss Novabeam | 005, 122, 127, 131 |
| | KTV | 074, 123 |
| L | Loewe | 071 |
| | logik | 144 |
| | Luxman | 031 |
| | LXI | 008, 014, 017, 024, 040, 044, 063, 071, 075, 076, 077, 118, 125 |
| M | Magnavox | 005, 010, 017, 030, 033, 038, 050, 056, 071, 078, 079, 085, 089, 108, 109, 110, 127, 131, 132, 145 |
| | Marantz | 015, 017, 071, 080 |
| | Matsui | 027 |
| | Memorex | 014, 027, 045, 083, 118, 144 |
| | Metz | 160, 161, 162, 163 |

| | |
|-------------------|---|
| MGA | 001, 039, 048, 056, 057, 058, 065, 081, 083 |
| Midland | 125 |
| Minutz | 066 |
| Mitsubishi | 001, 016, 039, 048, 056, 057, 058, 065, 081, 082, 083, 105 |
| Montgomery Ward | 011, 020, 144, 145, 146 |
| Motorola | 121, 147 |
| MTC | 031, 034, 039, 048, 095 |
| N | |
| NAD | 008, 075, 076, 128 |
| National | 002, 036, 061, 147 |
| National Quenties | 002 |
| NEC | 031, 038, 039, 048, 057, 084, 086, 135, 147 |
| Nikko | 054 |
| NTC | 054 |
| O | |
| Optimus | 128 |
| Optonica | 011, 012, 093, 121 |
| Orion | 004, 139 |
| P | |
| Panasonic | 002, 009, 017, 036, 037, 071, 141, 143, 147 |
| Philco | 005, 010, 030, 050, 051, 056, 079, 085, 127, 131, 132, 145, 147 |
| Philips | 005, 015, 017, 050, 051, 056, 078, 087, 088, 089, 131, 132, 147 |
| Pioneer | 124, 128, 142 |
| Portland | 054 |
| Price Club | 095 |
| Proscan | 040, 044, 125 |
| Proton | 035, 051, 092, 129 |
| Pulsar | 042 |
| Q | |
| Quasar | 036, 037, 074, 141 |
| R | |
| Radio Shack | 011, 044, 063, 093, 118 |
| RCA | 040, 044, 125, 130, 137, 151, 152 |
| Realistic | 014, 063, 093, 118 |
| S | |
| Saisho | 027 |
| Samsung | 003, 015, 034, 053, 055, 057, 094, 095, 136, 153 |
| Sansui | 139 |
| Sanyo | 013, 014, 021, 022, 063, 064, 081, 096 |
| SBR | 015 |
| Schneider | 015 |
| Scott | 062 |
| Sears | 008, 014, 021, 022, 023, 024, 025, 040, 052, 057, 062, 063, 064, 065, 073, 075, 076, 097, 098, 125, 159 |
| Sharp | 011, 012, 013, 026, 093, 099, 100, 104, 121 |
| Siemens | 013 |
| Signature | 045, 144 |
| Simpson | 050 |
| Sony | 043, 046, 138, 146, 150 |
| Soundesign | 030, 050, 062 |
| Spectricon | 007, 033 |

| | |
|----------------|--|
| Squareview | 004 |
| Supre-Macy | 032, 122 |
| Supreme | 046 |
| Sylvania | 005, 010, 017, 030, 078, 079, 085, 089, 101, 127, 131, 132, 145, 155 |
| Symphonic | 004, 148 |
| T | |
| Tandy | 012, 121 |
| Tatung | 036, 124 |
| Technics | 037 |
| Teknika | 001, 030, 032, 034, 052, 054, 078, 083, 095, 144, 156, 157 |
| Tera | 035, 129 |
| THOMSON | 165, 166 |
| Toshiba | 008, 014, 034, 063, 075, 076, 095, 097, 136, 158, 159 |
| U | |
| Universal | 020, 066, 088 |
| V | |
| Victor | 019, 073, 126 |
| Video Concepts | 016 |
| Viking | 032, 122 |
| W | |
| Wards | 005, 045, 066, 078, 085, 088, 089, 093, 102, 103, 131, 132, 148 |
| Z | |
| Zenith | 042, 114, 115, 140, 144, 149 |
| Zonda | 007 |

Cable

| | | |
|----------|--------------------|-------------------------|
| A | ABC | 006, [007]*, 008, 009 |
| | Archer | 010, 011 |
| C | Century | 011 |
| | Citizen | 011 |
| | Colour Voice | 012, 013 |
| | Comtronic | 014 |
| E | Eastern | 015 |
| G | Garrard | 011 |
| | Gemini | 030, 033, 034 |
| | General Instrument | 030, 031, 032 |
| H | Hytex | 006 |
| J | Jasco | 011 |
| | Jerrold | 009, 016, 017, 026, 032 |
| M | Magnavox | 018 |
| | Movie Time | 019 |
| N | NSC | 019 |
| O | Oak | 000, 006, 020 |
| P | Panasonic | 001, 005 |
| | Philips | 011, 012, 013, 018, 021 |
| | Pioneer | 002, 003, 022 |
| R | RCA | 029 |
| | Regency | 015 |
| S | Samsung | 014, 023 |
| | Scientific Atlanta | 004, 024, 025 |
| | Signal | 014 |
| | SL Marx | 014 |
| | Starcom | 009 |

| | |
|----------------|----------|
| Stargate | 014 |
| T | |
| Televue | 014 |
| Tocom | 007, 016 |
| TV86 | 019 |
| U | |
| Unika | 011 |
| United Artists | 006 |
| Universal | 010, 011 |
| V | |
| Viewstar | 018, 019 |
| Z | |
| Zenith | 027, 028 |

Satellite Receiver

| | | |
|----------|---------------------|-------------------------|
| A | Alphastar | 054 |
| C | Chaparrali | 035, 036 |
| D | Dishnet | 053 |
| | Drake | 037, 038 |
| E | Echostar Dish | 062, 066 |
| G | GE | 048, 055, 056 |
| | General Instruments | 039, 040, 041 |
| | Grundig | 070, 071, 072, 073 |
| H | Hitachi | 058, 059 |
| | Hughes Networkr | 063, 064, 065, 069 |
| J | JVC | 057 |
| K | Kathrein | 074, 075, 076, 083 |
| M | Magnavoxl | 060 |
| N | Nokia | 070, 080, 084, 085, 086 |
| P | Philips | 060 |
| | Primestar | 051 |
| | Proscan | 048, 055, 056 |
| R | RCA | 048, 055, 056, 068 |
| | Realistic | 042 |
| S | Sierra I | 036 |
| | Sierra II | 036 |
| | Sierra III | 036 |
| | Sony | 049, 067 |
| | STS1 | 043 |
| | STS2 | 044 |
| | STS3 | 045 |
| | SRS4 | 046 |
| T | Technisat | 077, 078, 079, 081, 082 |
| | Toshiba | 047, 050 |
| | Uniden | 061 |

CD Player

| | | |
|----------|----------|--------------------|
| A | Aiwa | 001, 035, 043 |
| B | Burmster | 002 |
| C | Carvery | 003, 035 |
| D | Denon | [111]*, 044 |
| E | Emerson | 004, 005, 006, 007 |
| F | Fisher | 003, 008, 009, 010 |
| J | JVC | 018, 019 |

| | |
|----------|-------------------------|
| Kenwood | 011, 012, 013, 014, 017 |
| M | |
| Magnavox | 006, 015, 035 |
| Marantz | 016, 028, 035 |
| MCS | 016, 024 |
| O | |
| Onkyo | 025, 027 |
| Optimus | 017, 020, 021, 022, 023 |
| P | |
| Philips | 014, 032, 033, 035 |
| Pioneer | 006, 022, 030 |
| S | |
| Sears | 006 |
| Sony | 023, 031 |
| T | |
| Teac | 002, 009, 028 |
| Technics | 016, 029, 036 |
| W | |
| Wards | 035, 037 |
| Y | |
| Yamaha | 038, 039, 040, 041 |
| Z | |
| Zenith | 042 |

CD Recorder

| | | |
|----------|---------|----------|
| D | Denon | 151, 112 |
| P | philips | 112 |

MD Recorder

| | | |
|----------|---------|----------|
| A | Kenwood | 053, 054 |
| B | Onkyo | 057 |
| C | Sharp | 055 |
| D | Denon | 113 |
| E | Sony | 056 |

Tape Deck

| | | |
|----------|---------------|---------------|
| A | Aiwa | 001, 002 |
| C | Carver | 002 |
| D | Denon | [111]* |
| H | Harman/Kardon | 002, 003 |
| J | JVC | 004, 005 |
| K | Kenwood | 006 |
| M | Magnavox | 002 |
| | Marantz | 002 |
| O | Onkyo | 016, 018 |
| | Optimus | 007, 008 |
| P | Panasonic | 012 |
| | Philips | 002 |
| | pioneer | 007, 008, 009 |
| S | Sony | 013, 014, 015 |
| T | Technics | 012 |
| V | Victor | 004 |
| W | Wards | 007 |
| Y | Yamaha | 010, 011 |

| DVD preset codes / Codes pré-régés DVD | | |
|--|------------------------|----------|
| DENON Model No. / Modèle numéro | 111 (default / défaut) | 014 |
| | DVD-555 | DVD-2910 |
| DVD-755 | DVD-2930CI | DVD-1600 |
| DVD-900 | DVD-3800 | DVD-2000 |
| DVD-910 | DVD-3910 | DVD-2500 |
| DVD-955 | DVD-3930CI | DVD-3000 |
| DVD-1000 | DVD-5900 | DVD-3300 |
| DVD-1200 | DVD-5910 | |
| DVD-1500 | DVD-9000 | |
| DVD-1710 | DVM-715 | |
| DVD-1910 | DVM-1800 | |
| DVD-1930CI | DVM-1805 | |
| DVD-2200 | DVM-1815 | |
| DVD-2800 | DVM-2815 | |
| DVD-2800II | DVM-4800 | |
| DVD-2900 | | |

* [1] : Preset codes set upon shipment from the factory.
: Les codes pré-régés diffèrent en fonction des livraisons de l'usine.





DENON

www.denon.com

Denon Brand Company, D&M Holdings Inc.
Printed in China 00D 511 4641 101

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>