 


Personal Blender

READ BEFORE USE

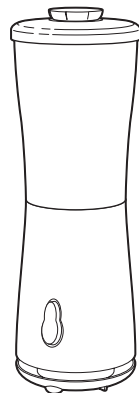

English 2
USA: 1-800-851-8900
Canada : 1-800-267-2826
En México 01-800-71-16-100

840123200

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Keep these instructions for future reference.
2. To protect against risk of electrical shock, do not put cord, plug, base, or motor in or near water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Blades are sharp, handle carefully, especially when assembling, disassembling, or cleaning inside blender jar.
5. Closely supervise children drinking from blender jar, to ensure they keep hands out of jar.
6. Keep hands and utensils out of container while blending to reduce the risk of severe personal injury and/or damage to blender. A rubber spatula may be used but must be used only when blender is not running.
7. Unplug cord from outlet when not in use, before putting on or taking off parts, and before cleaning.
8. Avoid contact with moving parts.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair or electrical or mechanical adjustment.
10. The use of attachments, including canning jars, not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. may cause a risk of injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
13. Do not use a broken, chipped or cracked blender jar.
14. Do not use broken, cracked or loose cutting blades.
15. To reduce the risk of injury, never place cutting unit blades on base without jar properly attached.
16. Always operate blender with cover in place.
17. Do not blend hot liquids.
18. Do not leave blender unattended while it is operating.

19. To disconnect cord, release switch, then remove plug from wall outlet.
20. Do not use appliance for other than intended purpose.

SAVE THESE INSTRUCTIONS

OTHER CONSUMER SAFETY INFORMATION

This appliance intended for household use only. Use for food or liquids only.

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.

 
 
The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the blender. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

If the cutting unit blades lock and do not move, it will damage the motor. Do not use. Call the toll-free customer service number for information.

Do not place blender jar in the freezer filled with food or liquid. This will freeze and damage the cutting unit, jar, and motor.

Know Your Blender

1. Filler-Cap
2. Processing Lid
3. Jar
4. Blades
5. Base
6. Pulse Switch
7. Cord Wrap Compartment
8. Drinking Lid

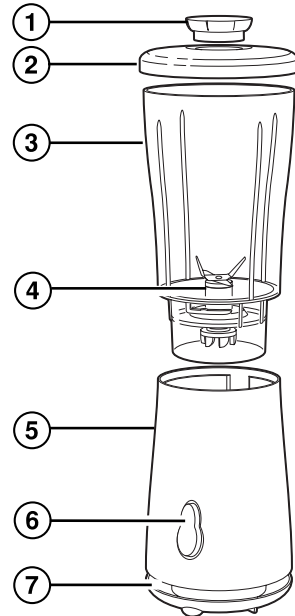

Before First Use: After unpacking the blender, wash everything except the blender base in hot, soapy water. Do not attempt to disassemble blade from jar. Dry thoroughly. Do not place in dishwasher. Wipe the blender base with a damp cloth or sponge. **DO NOT IMMERSE THE BASE IN WATER.** Care should be taken when cleaning inside the blender or handling the blades, because the blades are very sharp.

How to Assemble and Use

IMPORTANT: Your blender jar and cutting blades are subject to wear during normal use. Always inspect jar for nicks, chips or cracks. Always inspect cutting blades for broken, cracked or loose blades. If jar or cutting blades are damaged, do not use. Contact our toll-free customer service number for replacement parts.

1. Make sure blender is unplugged. Place blender base on clean, dry surface to keep foreign particles from being pulled up into motor during operation.
2. Set jar into place on blender base, making sure it is securely seated by rotating jar counterclockwise into locked position.
3. Put ingredients in jar, place processing lid on jar.
4. Plug cord into outlet.
5. Process food or beverages. Place hand on processing lid when blending liquids. Press Pulse Switch as needed to process foods. Hold the Pulse Switch for blender to operate continuously.
6. ALWAYS turn blender off and wait until blades have stopped rotating before removing jar.
7. To remove jar after blending is complete, turn jar clockwise and lift the jar straight up.
8. ALWAYS remove jar from base before drinking from jar. Replace processing lid with drinking lid before drinking from jar.
9. NEVER replace jar onto unit while motor is running.

How to Clean the Blender

1. Unplug blender from electrical outlet.
2. Wipe blender base, control panel, and cord with a damp cloth or sponge. To remove stubborn spots, use a mild, non-abrasive cleanser.
3. Carefully wash jar, filler-cap, and lid(s) in hot, soapy water. Do not attempt to disassemble blade from jar. Care should be taken when handling the blades as they are very sharp. Rinse and dry thoroughly. Do not soak. **Do not wash in a dishwasher.**
4. Store blender with lid ajar to prevent container odor.

Hints for Best Use

- Do not chop or process hard foods such as cheese, crackers or meat.
- A maximum of 12 tablespoons (180 ml) of coffee beans can be ground at a time.
- To add foods/liquids when blender is operating, remove filler-cap from container cover and add ingredients through opening.
- If blending action stops during blending or ingredients stick to sides of the jar, turn blender OFF. Remove cover and use a rubber spatula to push mixture toward blades.
- Do not process hot foods or liquids in blender.
- Do not try to mash potatoes, mix stiff dough, whip egg whites, grind raw meat, or extract juices from fruits and vegetables. The blender is not made to perform these tasks.

Hints for Best Use (cont.)

- Do not store food or liquids in the blender jar.
- Avoid bumping or dropping the blender.

Recipes

Health Drink

- ¼ cup (60 ml) pineapple juice
- ¼ ripe medium size banana, peeled and sliced
- ½ 8-ounce (125 ml) carton vanilla or plain yogurt
- ¼ cup (60 ml) fresh or frozen strawberries
- 1 tablespoon (15 ml) wheat germ
- ½ teaspoon (2.5 ml) vanilla extract

Place pineapple juice, banana, yogurt, strawberries, wheat germ, and vanilla extract in blender jar. Cover and blend to desired consistency.

Fruit Smoothie

- ½ cup (125 ml) sliced fresh or frozen fruit
- ½ 8-ounce (125 ml) carton vanilla or plain yogurt
- ½ cup (125 ml) milk
- 1 teaspoon (5 ml) honey
- ½ teaspoon (2.5 ml) vanilla extract (optional)

Place fruit, yogurt, milk, honey, and vanilla extract in blender jar. Cover and blend to desired consistency.

Milk Shake

- ½ cup (125 ml) milk
- ½ cup (125 ml) vanilla frozen yogurt or ice cream

Place milk and frozen yogurt or ice cream in the blender container. Cover and blend to desired consistency.

Protein Drink

- ¼ cup (60 ml) vanilla frozen yogurt or ice cream
- 1 cup (250 ml) milk
- ¼ ripe medium size banana, peeled and sliced
- 2 pecans, broken
- 1 teaspoon (5 ml) raw or toasted wheat germ
- 1 tablespoon (15 ml) protein powder

Place frozen yogurt or ice cream, milk, banana, pecans, wheat germ, and protein powder in blender container. Cover and blend to desired consistency.

Easy Salsa

- 8-ounce (225 g) can diced tomatoes, undrained
- 1 teaspoon (5 ml) onion flakes
- ⅛ teaspoon (.625 ml) minced garlic
- ½ teaspoon (2.5 ml) lime juice
- ⅛ teaspoon (.625 ml) salt
- ⅛ teaspoon (.625 ml) cumin
- ¼ of a 4 ounce (25 g) can green chiles, undrained
- Cilantro, to taste
- Hot sauce, optional, to taste

Place the tomatoes, onion, garlic, lime juice, salt, cumin, green chiles, cilantro, and hot sauce in blender jar. Blend to desired consistency.

Customer Service

If you have a question about your blender, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your blender. This information will help us answer your question much more quickly.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

The following warranty applies only to product purchased in the United States and Canada.

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products, one (1) year for Hamilton Beach products or one hundred eighty (180) days for Proctor-Silex products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900
In Canada 1-800-267-2826

hamiltonbeach.com or proctorsilex.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH ◀ PROCTOR-SILEX, INC. PROCTOR-SILEX CANADA, INC.
263 Yadkin Road Picton, Ontario K0K 2T0
Southern Pines, NC 28387

840123200 hamiltonbeach.com • www.proctorsilex.com 2/04
hamiltonbeach.com.mx • www.proctorsilex.com.mx

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>