


Hamilton Beach®

DrinkMaster®

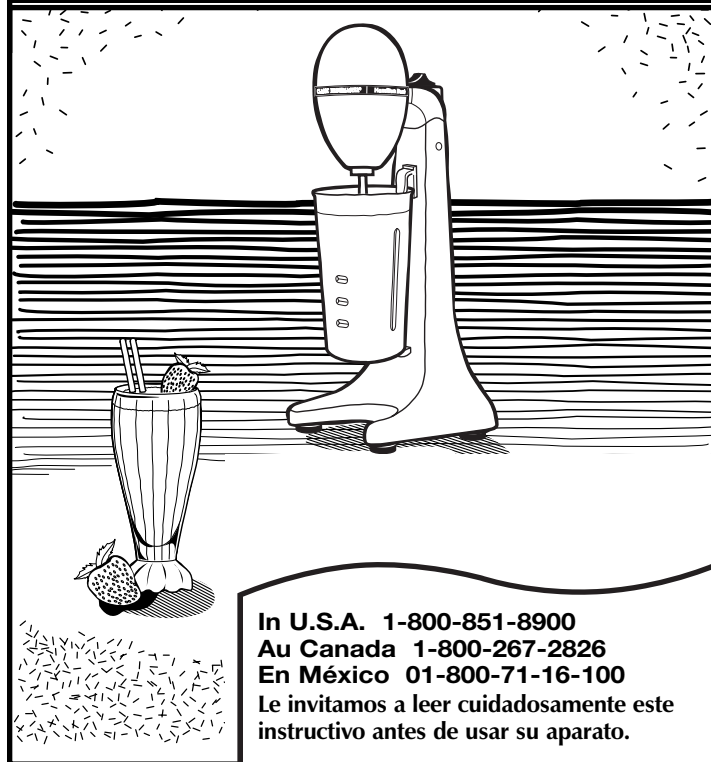

In U.S.A. 1-800-851-8900
Au Canada 1-800-267-2826
En México 01-800-71-16-100
Le invitamos a leer cuidadosamente este
instructivo antes de usar su aparato.

840119400

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put base, motor, cord, or plug in water or other liquid.
3. Close supervision is necessary when used by or near children.
4. Unplug cord from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils out of container to prevent personal injury or damage to the mixer.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, electrical repair, mechanical repair, or adjustment.
7. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc., may cause fire, electrical shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Never add ingredients to container while appliance is operating.
11. Container must be properly in place before operating appliance.
12. To wash mixing shaft, unplug mixer and remove mixing shaft from mixer. (See "Cleaning Your DrinkMaster.")

SAVE THESE INSTRUCTIONS

CONSUMER SAFETY INFORMATION


This appliance is intended for household use only.

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the DrinkMaster. Care must be taken to arrange extension cord so that it will not drape over countertop or tabletop where it can be pulled on by children or accidentally tripped over.

Parts and Features

1. Tilting Head
2. Control Switch
O=OFF
1=LOW
2=HIGH
3. Container Support
4. Removable Mixing Shaft (pull down to remove)
5. Container Rest
6. Container
7. Maximum Level, 12 ounces (355 ml)
8. Minimum Level, 4 ounces (118 ml)

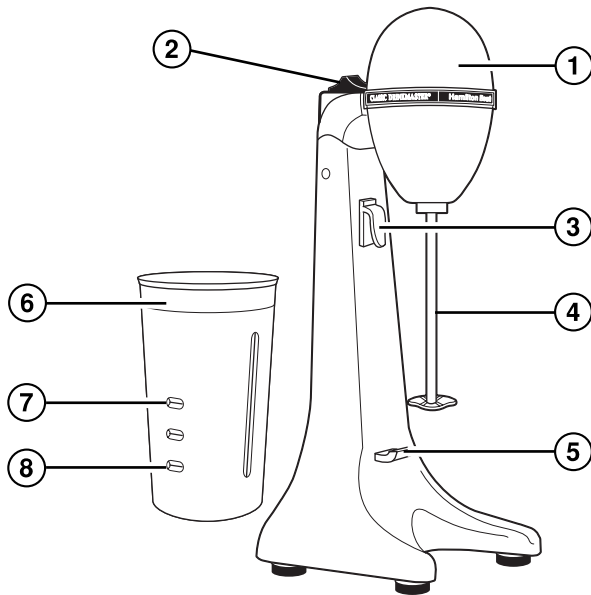

4

Using Your DrinkMaster®

BEFORE FIRST USE: Wash container and mixing shaft before using.

1. Place mixing shaft in unit by tilting the head back and inserting the mixing shaft until it “snaps” into place.
2. Set Control Switch to **O** (off). Plug into electrical outlet.
3. Place ingredients to be mixed in container.
4. Place container onto DrinkMaster, making certain that container’s top edge is behind container support and container bottom is on container rest.
5. **With mixing shaft “snapped” in place**, move Control Switch to desired speed to process. Start with Speed 1 (LOW) then increase to Speed 2 (HIGH) if desired.
6. For hard ice cream or very thick shakes, remove the container from the rest and support. With mixing shaft still submerged in mixture, move the container around for more thorough mixing.
7. When finished, turn unit to **O** (off) and tilt head up.
8. Pour contents from container and serve.



5

Helpful Hints

- Most drinks can be mixed in less than two minutes.
- Whole fruit should not be used when making fruit drinks. Mash or puree fruit; add to drink, and mix.
- The container must always be filled to at least the minimum level mark or the liquid will not reach mixing shaft. When mixing thin mixtures, such as powdered diet drinks, do not fill above maximum level mark (12 ounces/355 ml) or liquid may overflow while mixing.
- For best results, all liquid ingredients should be as cold as possible. Milk drinks will taste best if milk is ice cold. The colder the milk, the thicker and more frothy the drink.
- All syrups and powdered mixes should be added just before mixing to prevent them from sinking to the bottom of the container.
- The DrinkMaster does not crush ice. For best results, use crushed ice if the recipe calls for ice.

Cleaning Your DrinkMaster®

1. Unplug unit. To remove mixing shaft, grasp and pull down to release from head. Wash the mixing shaft in warm, soapy water.
2. The metal mixing container should be washed in warm, soapy water or in a dishwasher.
3. To clean DrinkMaster, wipe with damp cloth or sponge. Do not use abrasive cleansers of any type.

DO NOT IMMERSE THE APPLIANCE IN WATER OR OTHER LIQUID.

Recipes

Always add liquid ingredients first then remaining ingredients. Start mixing on 1 (LOW) then increase Speed to 2 (HIGH). Process to desired consistency, about 1 to 2 minutes.

Freeze & Squeeze One

4 scoops frozen vanilla yogurt
1/3 cup orange juice
1 teaspoon rum flavoring
1 tablespoon lime juice

Mash One In The Hay

4 scoops frozen strawberry yogurt
1/2 cup apple juice
1/2 cup fresh strawberries, mashed
1/3 cup banana, mashed

Squeeze One On The Country

6 ounces strawberry yogurt
2 fresh strawberries, mashed
1/2 cup orange juice

Mud Patch & Gravel

4 scoops chocolate ice cream
1/3 cup milk
3/4 cup fresh strawberries, mashed
1/4 cup nuts in syrup

Creamy Orange Frosty

2 scoops vanilla ice cream
1 cup orange juice

Crowded Van Through Georgia

3 scoops vanilla ice cream
1/2 cup milk
1/2 banana, sliced then mashed
2 tablespoons chocolate syrup

Patch & Forty-One

6 ounces strawberry yogurt
1 scoop lemon sorbet
1/2 cup orange juice
2 fresh strawberries, mashed

Bucket Of Fruit

1/2 cup low-fat peach yogurt
1/2 cup orange juice
2 fresh strawberries, mashed
1/2 kiwi fruit, peeled and mashed

Chocolate Mint Mallow

3 scoops chocolate ice cream
1/2 cup milk
1/4 cup marshmallow creme
1/3 cup crushed peppermint candy pieces

Strawberry Cooler

3 scoops frozen strawberry yogurt
3/4 cup ginger ale

Customer Service

If you have a question about your DrinkMaster, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your DrinkMaster. This information will help us answer your question much more quickly.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

The following warranty applies only to product purchased in the United States and Canada.

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products or one (1) year for Hamilton Beach products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

Web site address: www.hamiltonbeach.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH • PROCTOR-SILEX, INC.

263 Yadkin Road, Southern Pines, NC 28387

840119400

hamiltonbeach.com • hamiltonbeach.com.mx

PROCTOR-SILEX CANADA, INC.

Picton, Ontario K0K 2T0

9/03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>