

Toaster Oven2
USA: 1-800-851-8900

840099300

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug, or toaster oven in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning appliance and putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by Hamilton Beach/Proctor-Silex, Inc. may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Be sure to allow hot oil or liquids to cool before moving appliance.
12. To disconnect, turn all controls to Off, then remove plug from wall outlet.
13. Use extreme caution when removing tray or disposing of hot grease.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electrical shock.

15. Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
16. A fire may occur if the toaster oven is covered, touching or near flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation, or before the appliance cools down.
17. Extreme caution should be exercised when using containers constructed of other than metal or glass.
18. Do not store any materials, other than Hamilton Beach/Proctor-Silex, Inc. recommended accessories, in this oven.
19. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
20. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
21. To turn oven off, turn ON/OFF Control Dial to OFF position. See "Parts and Features" section.
22. Do not place eyes or face in close proximity with tempered safety glass door, in the event that the safety glass breaks.
23. Always use appliance with crumb tray securely in place.
24. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS!

CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the toaster oven. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

This appliance is equipped with a fully tempered safety glass door. The tempered glass is four times stronger than ordinary glass and more resistant to breakage. Tempered glass can break, however it breaks into pieces with no sharp edges. Care must be taken to avoid scratching door surface or nicking edges. If the door has a scratch or nick, call our toll-free customer service number.

Always unplug your toaster oven from the outlet when not in use.

 
Before First Use

Most heating appliances produce an odor and/or smoke when used for the first time. Plug the toaster oven into an outlet. Turn the Function/Temperature Knob to 450°F. Heat at this temperature for 10 minutes. The odor should not be present after this initial preheating. Wash baking pan and oven rack before using.


4

Parts and Features


1. **Function/Temperature Knob** – To select the Oven Temperature, Broil, or Toast.

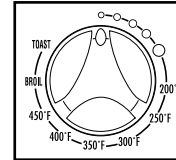

 2. **ON/OFF/Toast Shade Selector/Timer**

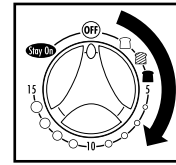


To select toast shade or time.

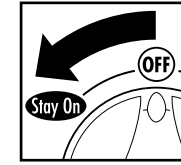 


To select Stay On.

 3. **Indicator Light** – Lit when oven is on or when toasting.
4. **Slide-Out Crumb Tray**

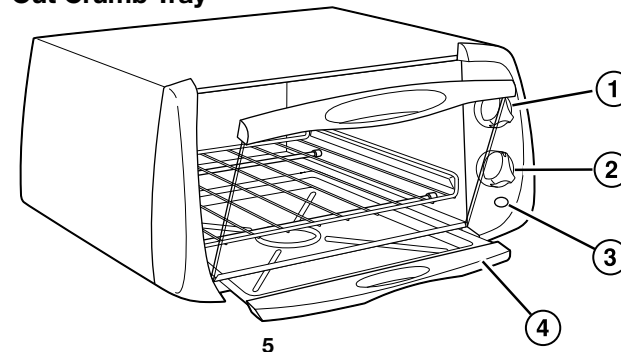


Parts and Features (continued)

 The oven also has a baking pan and a broil rack.



Baking Pan

 

Broil Rack

Oven Rack Positions

The toaster oven comes with a dual-position oven rack. Flip the rack over to change the position.



High Position



 
Low Position

To Toast

Do not leave appliance unattended when in operation.


IMPORTANT! The Function/Temperature Knob must be in the TOAST position or unit will not toast properly.

1. Place oven rack in the high position.

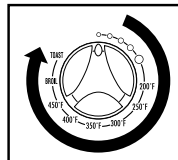

6

 2. Set the Function/Temperature Knob to TOAST.
3. Set the Toast Shade Selector/Timer Knob to desired toast color.
4. The bell will sound at the end of the toast cycle. To stop cycle, turn Toast Shade Selector/Timer knob to OFF.

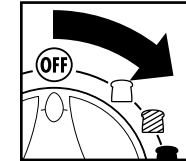

Do not leave the toaster oven unattended during toasting or top-browning.

Toasting Tips

THIS OVEN RETAINS HEAT VERY WELL. WHEN MAKING MORE THAN ONE BATCH OF TOAST, THE TOAST SHADE SELECTOR SHOULD BE SET TO A LIGHTER COLOR ON THE SECOND BATCH TO GET THE SAME SHADE OF TOAST AS THE FIRST.

- If the **bottom surface of the toast is too light**, place the bread near the back or front of the oven. This toasts top and bottom more evenly than if placed in the center of the oven.
- **To toast bagels**, place oven rack in the low position and place bagels cut side facing down. This will toast the cut side more than the outside of the bagel.
- **To toast English muffins**, place oven rack in the low position and place English muffins with the split side facing down. Set Toast Shade Selector to the dark setting.
- **To toast regular toaster pastry, frozen pastry, or waffles**, place oven rack in the high position. Select a light color and toast directly on the oven rack. If pastry has a glaze of frosting, use baking pan.

7

Toasting Tips (continued)

 
- When toasting, **condensation** may form on the oven door. A toaster oven is enclosed so the moisture is slow to escape. After toasting, wipe door to dry and make clean-up easier.
- When the bell sounds at the end of the cycle, **remove toast immediately** or the heat remaining in the toaster oven will continue to toast and dry out your toast.
- The **number of slices** of bread, the **bread freshness**, and the **starting temperature** of the oven will affect toast color. If the oven is already hot, select a lighter shade of toast than normal. Adjust the Toast Shade Selector to achieve the desired color.

To Bake

Do not leave appliance unattended when in operation.

Wash the baking pan and broil rack before using.

1. Place oven rack in low or high position depending on food to be cooked.
2. Select temperature then set Timer to 5 and let preheat for five minutes before beginning to bake.
3. Set Timer to desired time or "Stay On."
The indicator light will come on and oven will begin baking.
4. When finished, turn OFF. Unplug from outlet.

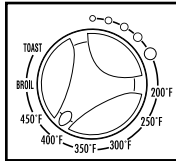

Baking Tip: Most foods should be baked according to package or recipe directions. Watch carefully and adjust the time or temperature if necessary.

 
NOTE: To reduce the risk of fire, do not use oven cooking bags in the toaster oven.

To Broil

Do not leave appliance unattended when in operation.

Wash the baking pan and broil rack before using.

1. Place broil rack inside baking pan.
2. Place oven rack in high position. Place baking pan on the oven rack.
3. Set the Function Selector Knob to Broil.
4. Set Timer to desired time or "Stay On."
The Indicator Light will come on. Only the top heating elements come on during the Broil Function.
5. Halfway through cooking time, or when food has browned, turn food over to brown and cook other side.
6. When finished turn OFF; unplug from outlet.

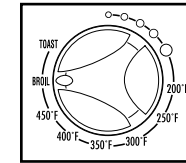

NOTES:

- For best results, do not preheat when broiling.
- Always allow at least one inch between the food and the heating element.


Broiling Chart

FOOD	APPROXIMATE TIME
Hamburgers	20 minutes
Hot Dogs	15 minutes
Sausage Links or Patties (pierce casings before cooking)	15 to 20 minutes
Fish	15 minutes

Cleaning the Oven

Your toaster oven should be cleaned regularly for best performance and long life. Regular cleaning will also reduce the risk of fire hazard.

 1. Unplug oven and allow to cool.
2. Wash oven rack, baking pan, and broil rack in hot, soapy water. Rinse and dry. Do not use abrasive cleansers or steel wool.
3. To clean the crumb tray, slide open crumb tray. Wipe crumb tray with a damp cloth.
4. To clean the inside of the oven, wipe oven walls, bottom of oven, and glass door with a damp, soapy cloth. Repeat with a damp, clean cloth. Slide crumb tray back into position.
5. For stubborn stains, use a plastic scouring pad.
6. To clean the outside of the oven, wipe with a damp cloth.
7. Do not use abrasive cleansers.

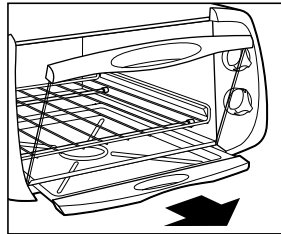

NOTE: Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts, causing a risk of electric shock.

Recipes

Baked Potatoes

2 medium baking potatoes, about 10-ounces each

Wash potatoes then pierce skin with a fork. Place potatoes on baking pan and place in 425 degree oven. Bake for 1 hour or until done. Do not wrap in aluminum foil as this may increase cooking time.

5 Minute Pizza

English muffins, split in half and slightly toasted
Pizza or spaghetti sauce
Grated mozzarella cheese
Pepperoni slices

Place muffin halves on baking pan cut side up. Spread some sauce on top of each muffin. Sprinkle with cheese then top with pepperoni. Place pan in toaster oven and bake at 450°F for about 5 minutes or until cheese melts.

Minute Muffins

1 cup self-rising flour
½ cup milk
2 tablespoons mayonnaise or sour cream

Stir together ingredients. Spoon into greased 6-cup muffin pan. Bake at 450°F for 12 minutes or until done. **Makes 6 muffins.**

Tropical Chicken

- 4 boneless, skinless chicken breasts
- 8 ounce can crushed pineapple,
not drained
- ¼ cup prepared mustard
- ¼ cup cider vinegar
- 2 tablespoons soy sauce
- 2 tablespoons brown sugar
- ⅛ teaspoon ground ginger
- Rice (optional)

Place chicken breasts in shallow casserole dish or 8-inch square baking pan. Combine remaining ingredients and pour over chicken. Bake at 350°F for 35 to 45 minutes or until done. Serve over rice. **Makes 4 servings.**

Mini Meat Loaves

- 1 pound lean ground beef
- 1 small onion, finely chopped
- ¾ cup fresh bread crumbs
- 1 egg, beaten
- 1 tablespoon grated Parmesan cheese
- 1 tablespoon fresh parsley, finely chopped
- ¼ teaspoon each, salt and pepper

Combine all ingredients and mix well. Divide the mixture between 6-cup muffin pan. Bake at 350°F for 30 minutes or until done. **Makes 4 to 6 servings.**

Troubleshooting

The toaster oven will not heat.

Check to make sure the electrical outlet is working and the oven is plugged in. Next turn the Function/Temperature Knob to 350°F. Turn the ON/OFF Knob to “Stay On.” The Indicator Light should now be lit.

The toaster oven will not toast.

Check to make sure the outlet is working and the oven is plugged in.

1. Set Function/Temperature Knob to TOAST.
2. Select toast color.

The Indicator Light should now be lit. The oven will not toast properly unless the ON/OFF Knob is set to TOAST.

Moisture forms on the inside of the oven door when toasting.

This is normal when toasting in a toaster oven. Moisture is slower to escape from the toaster oven than from a toaster. The amount of moisture will differ between fresh bread, bagels, and frozen pastry.

An odor and smoke comes from the toaster oven.

Smoke and odor is normal during the first use of most heating appliances. This will not be present after the initial heating period.

The Indicator Light stays on.

Turn ON/OFF Knob to OFF. If light stays on, unplug unit and call our toll-free customer service number for information on examination, repair or electrical or mechanical adjustment. Do not continue to use your toaster oven.

Some foods burn and some are not done.

Use the oven rack position to center food in the oven. Adjust the oven temperature or cooking time for best results with your recipes.

Customer Service

If you have a question about your toaster oven, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your toaster oven. This information will help us answer your question much more quickly.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of one hundred eighty (180) days from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

Web site address: www.proctorsilex.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.
263 Yadkin Road, Southern Pines, NC 28387

PROCTOR-SILEX CANADA, INC.
Picton, Ontario K0K 2T0

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>