

Models:

- **DSCAR36, DSCAR42**
Screen Mesh Doors



These doors have been tested for use with the Carolina Outdoor Gas Fireplace. Check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact your Hearth & Home Technologies Inc. dealer. For the dealer nearest you, please visit www.hearthnhome.com.

Components	Qty.
Right Door Assembly	1
Left Door Assembly	1
Door Latch	1
Screws	2
Top Hinges	2
Door Pins	4

CAUTION! Risk of Cuts, Abrasions or Flying Debris.
Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

1. Remove left and right screen assemblies, lay aside or discard.



2. Remove hole plugs and discard.



⚠ WARNING



HOT SURFACES!

Screens and other surfaces are hot during operation and cool down.

Hot screens will cause burns.

- Do not touch fireplace until it is cooled
- NEVER allow children to touch fireplace

- Keep children away
- CAREFULLY SUPERVISE children in same area as fireplace.
- Alert children and adults to hazards of high temperatures.

High temperatures may ignite clothing or other flammable materials.

- Keep clothing, furniture, draperies and other combustibles away.


3. Push one door pin into the hole on the bottom left side.



6. Insert door pin into hole of hinge pin provided in fastener pack and put into hole in upper left firebox top. Push pin up into hole to allow pin to fit on top of door.




4. Remove the two screws in the top of left door.

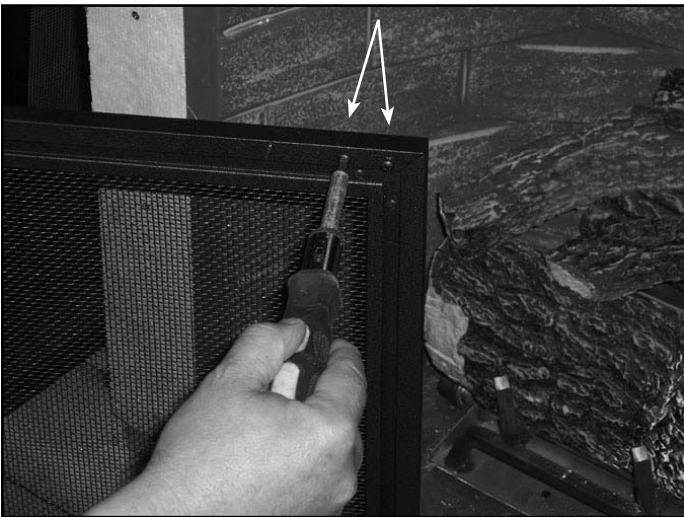

Note: The top hinges will mount to the door the same way as bottom hinges are mounted.

7. Align slot in hinge to the holes in top of door and fasten with the two screws removed in step 4. Repeat for right door.

5. Place the hinge on the bottom of left door over the pin and align hole in hinge to top of pin.

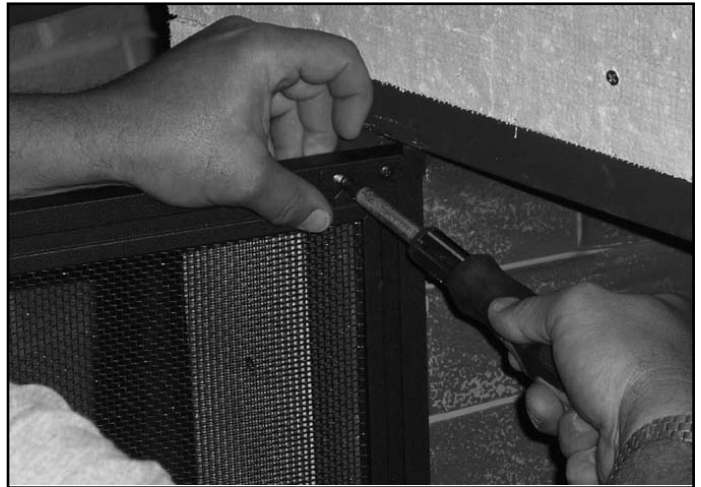


8. Attach door latch. Align the two holes in the door latch with the two predrilled holes in the bottom center firebox. Attach with the two screws provided in fastener pack.




9. Close doors to check alignment (small gap between).

10. Door adjustment: Open doors and loosen the two screws on the hinges. Slide to adjust door up and down. Tighten screws. You may have to adjust all hinges.

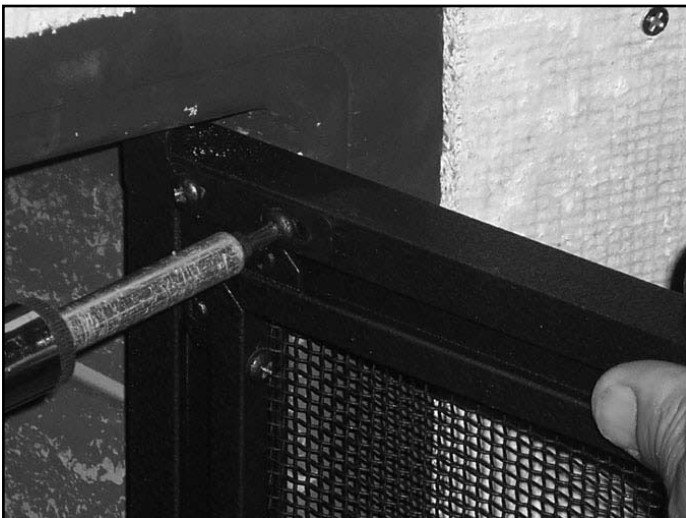

11. Shut and lock doors: Slide the left door handle to the left, shut door and slide handle to the right to lock. Slide right door handle to the right, shut door and slide handle to the left to lock.

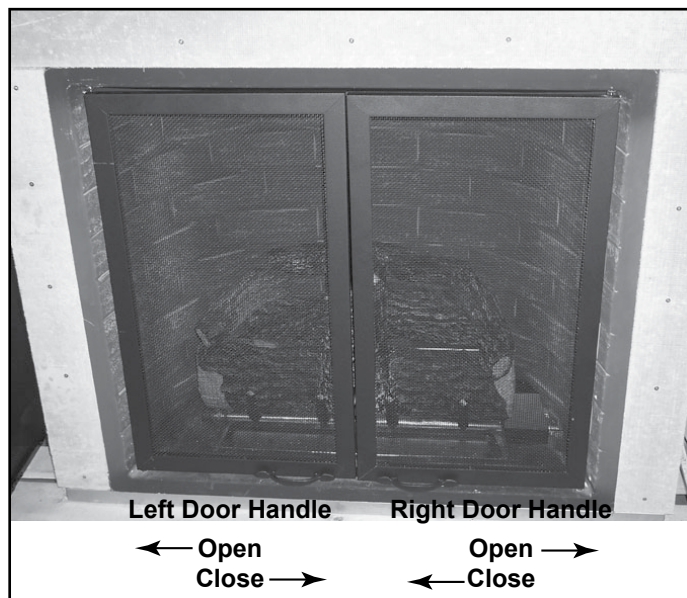

This page intentionally left blank.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>