



## DTE Series Temperature Controller Instruction Sheet

Thank you very much for choosing Delta DTE series temperature controller. Please read this instruction sheet carefully before using your DTE to ensure proper operation. Keep this instruction sheet handy for quick reference.

### ■ Warning

**DANGER! CAUTION! ELECTRIC SHOCK!**

**DTE is an OPEN-TYPE device and therefore should be installed in an enclosure free of airborne dust, humidity, electric shock and vibration. The enclosure should prevent non-maintenance staff from operating the device (e.g. key or specific tools are required for opening the enclosure) in case danger and damage on the device may occur.**

1. Prevent dust or metallic debris from falling into the device and cause malfunctions. **DO NOT** modify or uninstall the circuit board of DTE without being permitted. **DO NOT** use empty terminals.
2. Keep away from high-voltage and high-frequency environment during the installation in case of interference. Prevent using the device in premises which contain:
  - (a) dust or corrosive gas; (b) high humidity and high radiation; (c) shock and vibration.
3. The power has to be switched off when wiring or changing the temperature sensor.
4. When installing the circuit board of the accessory, please make sure the power of the main unit is switched off and insert the accessory into the correct slot on the main unit.
5. Make sure to use compensation wire which matches the thermocouple or platinum resistance when extending or connecting the thermocouple or platinum resistance.
6. Keep the wire as short as possible when wiring a sensor to the controller. Separate the power cable and load wire in order to prevent interference and induced noise.
7. Make sure the power cables and signal device are installed correctly before switching on the power; otherwise serious damage may occur.
8. **DO NOT** touch the terminal or repair the device when the power is on; otherwise an electric shock may occur.
9. Please wait for 1 minute after the power is switched off to allow the capacitor to discharge and **DO NOT** touch the internal wiring within this period.
10. **DO NOT** touch the internal terminal when DTE is either switched on or off in case you may damage the circuit.
11. Please place DTE with other heating objects (e.g. power supply) within proper distance while installing DTE.

### ■ Ordering Information

#### DTE [1] [2] [3]


Series name	DTE: Delta E series temperature controller	
[1] Device type	1: main unit	2: accessory
[2] [3]	OT: 4-channel TC OP: 4-channel PT	0T: 4-channel TC 0P: 4-channel PT 0V: 4 channels of voltage pulse output 0C: 4 channels of linear current output 0R: 4 channels of relay output 0L: 4 channels of linear voltage output CT: 4 channels of current transformer sensors DS: Display and setup module

### ■ Functions & Electrical Specifications

Power input	DC 24V, isolated switching power supply
Voltage range	90% ~ 110% rated voltage
Power consumption	Max. 10W + 3W × number of DTC2000 controllers connected in parallel (Max. 7)
Input sensor	Thermocouple: K, J, T, E, N, R, S, B, L, U, TXK Platinum resistance: Pt100, JPt100, Cu50
Sampling cycle	Thermocouple or platinum resistance: 1.0 second/all input
Control method	PID, PID programmable, manual, ON/OFF
Output accessories (optional)	Relay output: SPST, Max. AC 250V load, 3A resistive load Voltage pulse output: DC 24V, Max. 40mA current output Current output: DC 4 ~ 20mA output (resistive load < 500Ω); for OUT1 and OUT2 only Analog voltage output: 0 ~ 10V (resistive load > 1,000Ω); for OUT1 and OUT2 only
Output functions	Control output, alarm output or proportional output (proportional output is only applicable in the model with linear voltage and current output for OUT1, OUT2)
Alarm modes	12 alarm modes available
Communication	RS-485 digital communication; supports baud rate 2,400bps ~ 115,200bps
Communication protocol	Supports Modbus ASCII/RTU
Extension port	The extension port transmits 24V power supply and communication signals to extension module DTC2000.
Vibration resistance	10 ~ 55Hz 10m/s <sup>2</sup> 3 axes 10mins
Shock resistance	Max. 300m/s <sup>2</sup> 3 axes 6 directions, 3 times each
Ambient temperature	0°C ~ +50°C
Storage temperature	-20°C ~ +65°C

Operation altitude	< 2,000m
Ambient humidity	35% to 85% RH (non-condensing)
Pollution degree	2


### ■ Product Profile & Outline

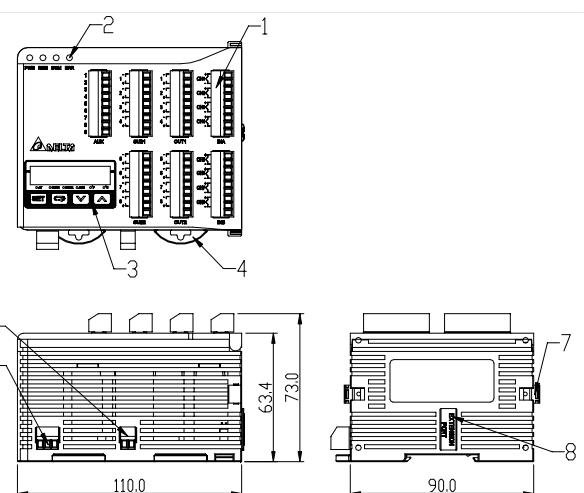

#### DTE10T/P

- 1 I/O terminals
- 2 Status LED
- 3 Display and setup unit
- 4 DIN rail clip
- 5 Power input port
- 6 RS-485 communication port
- 7 Extension module fixing clip
- 8 Extension port

### ■ Panel Layout

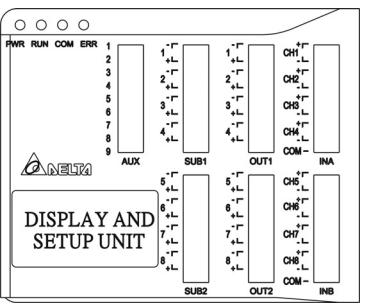

### ■ Input

The standard DTE main unit is attached with 4 channels of inputs. You can purchase additional DTE20T or DTE20P to expand the number of input channels. DTE supports maximum 8 channels of inputs which belong to group INA and group INB. Each group possesses 4 input channels.

DTE series supports the following input sensors:

Input Sensor Type	Register Value	Range
For DTE10P / DTE20P		
Temperature measurement resistance (Cu50)	13	-50 ~ 150°C
Platinum resistance (Pt100)	12	-200 ~ 600°C
Platinum resistance (JPt100)	11	-20 ~ 400°C
For DTE10T / DTE20T		
Thermocouple TXK type	10	-200 ~ 800°C
Thermocouple U type	9	-200 ~ 500°C
Thermocouple L type	8	-200 ~ 850°C
Thermocouple B type	7	100 ~ 1,800°C
Thermocouple S type	6	0 ~ 1,700°C
Thermocouple R type	5	0 ~ 1,700°C
Thermocouple N type	4	-200 ~ 1,300°C
Thermocouple E type	3	0 ~ 600°C
Thermocouple T type	2	-200 ~ 400°C
Thermocouple J type	1	-100 ~ 1,200°C
Thermocouple K type	0	-200 ~ 1,300°C

**Note:** The default setting in DTE10T is "thermocouple K type". The default setting in DTE10P is "Pt100".

Communication address: Input sensor types at H10A0 ~ H10A7; input upper limits at H1010 ~ H1017; input lower limits at H1018 ~ H101F.

### ■ Output

DTE supports maximum 16 channels of outputs, belonging to output groups OUT1, OUT2, SUB1 and SUB2, each group with 4 channels. See the explanations below for how input channels correspond to output groups.

- Without group INB (4 channels of input): Every channel corresponds to 2 groups of output and 2 groups of alarms. OUT1 and SUB1 are for control output, and OUT1 can be used for proportional output. OUT2 and SUB2 are fixed for alarm output.
- With group INB (8 channels of input): Every channel is paired with 2 groups of outputs. OUT1 and OUT2 are used for control output or proportional output of CH1 ~ CH8. SUB1 and SUB2 are used for control output or alarm output.

See Table 1 for the relations between input and output.

Output Group	4 channels of input	8 channels of input	
	INA (CH1 ~ CH4)	INA (CH1 ~ CH4)	INB (CH5 ~ CH8)
OUT1	Main control output or proportional output	Main control output or proportional output	No corresponding output
OUT2	Alarm 1 output	No corresponding output	Main control output or proportional output
SUB1	Control output	Control output or alarm output	No corresponding output
SUB2	Alarm 2 output	No corresponding output	Control output or alarm output

Table 1

**Note:** SUB1 and SUB2 do not support DTE20L and DTE20C. Please install the optional output modules you purchase into the correct slot.

### Communication Address of Output & How to Set up Parameters:

See Table 2 for the communication addresses of output and Table 3 for the definition of the value in the address.

	INA				INB			
	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
OUT1, OUT2	H10A8	H10A9	H10AA	H10AB	H10AC	H10AD	H10AE	H10AF
SUB1, SUB2	H10B0	H10B1	H10B2	H10B3	H10B4	H10B5	H10B6	H10B7

Table 2

	Value = 0	Value = 1	Value = 2	Value = 3
	OUT1, OUT2**	Heating control	Cooling control	Proportional output
SUB1, SUB2*	Heating control	Cooling control	Alarm output*	Disable output
SUB1, SUB2**	Heating control	Cooling control	Alarm output*	Disable output

Table 3

\*When there are only 4 channels of inputs, SUB1 cannot be used for alarm output but heating/cooling control only.

\*\*When there are only 4 channels of inputs, OUT2 and SUB2 cannot be set up by the user but set up automatically as "alarm output" by the controller.

### Control Output:

DTE offers PID control, ON/OFF control, manual control and programmable PID control. Control output methods are set at address H10B8 ~ H10BF (default = 0: PID), PID parameters at H1028 ~ H105F, ON/OFF parameters at H1058 ~ H106F, and manual control parameters at H1070 ~ H107F.

### Alarm Output:

DTE offers 12 alarm modes. The alarm modes are set up at address H10C0 ~ H10C7, upper limits at H1080 ~ H1087 and lower limits at H1088 ~ H108F.

SV	Alarm Mode	Alarm Output Operation
0	No alarm	Off
1	Alarm output is enabled when the temperature reaches upper and lower limits: The alarm will be enabled when PV exceeds SV + AL-H or falls below SV - AL-L.	ON OFF AL-L SV AL-H
2	Alarm output will be enabled when the temperature reaches the upper limit: The alarm will be enabled when the PV exceeds SV + AL-H.	ON OFF SV AL-H
3	Alarm output will be enabled when the temperature reaches the lower limit: The alarm will be enabled when the PV falls below SV - AL-L.	ON OFF AL-L SV
4	Alarm output will be enabled when the PV is between SV + AL-H and SV - AL-L.	ON OFF AL-L SV AL-H
5	Alarm output will be enabled when the temperature reaches the absolute value of the upper and lower limits: The alarm will be enabled when the PV exceeds AL-H or falls below AL-L.	ON OFF AL-L AL-H
6	Alarm output will be enabled when the temperature reaches the absolute value of the upper limit: The alarm will be enabled when the PV exceeds AL-H.	ON OFF AL-H
7	Alarm output will be enabled when the temperature reaches the absolute value of the lower limit: The alarm will be enabled when the PV falls below AL-L.	ON OFF AL-L
8	Upper/lower limit standby alarm: The alarm will be enabled when the PV reaches SV and further exceeds SV + AL-H or falls below SV - AL-L.	ON OFF AL-L SV AL-H
9	Upper limit standby alarm: The alarm will be enabled when the PV reaches SV and further exceeds SV + AL-H.	ON OFF SV AL-H

4. This function will consume 3 ~ 5 seconds more when you switch on DTE.

## ■ RS-485 Communication

- DTE supports baud rates 2,400/4,800/9,600/19,200/38,400/57,600/115,200 bps and does not support communication format 7, N, 1/8, E, 2/8, O, 2. Communication protocol = Modbus ASCII or RTU.
- Function codes: H03 = read maximum 8 words in the register; H06 = write 1 word into the register.
- Address and contents: Every parameter has 2 communication addresses. One is numbered by the function of the parameter, and the other is by the order of channel (as shown in the table below).

		INA				INB			
Content	Explanation	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Present temperature value/input error code	Unit: 0.1 See Table 5	H1000 (H1100)	H1001 (H1200)	H1002 (H1300)	H1003 (H1400)	H1004 (H1500)	H1005 (H1600)	H1006 (H1700)	H1007 (H1800)
Set temperature value	Unit: 0.1	H1008 (H1101)	H1009 (H1201)	H100A (H1301)	H100B (H1401)	H100C (H1501)	H100D (H1601)	H100E (H1701)	H100F (H1801)
Max. temperature value	Disabled when higher than default value	H1010 (H1102)	H1011 (H1202)	H1012 (H1302)	H1013 (H1402)	H1014 (H1502)	H1015 (H1602)	H1016 (H1702)	H1017 (H1802)
Min. temperature value	Disabled when lower than default value	H1018 (H1103)	H1019 (H1203)	H101A (H1303)	H101B (H1403)	H101C (H1503)	H101D (H1603)	H101E (H1703)	H101F (H1803)
Error temperature value	-999 ~ +999 Unit: 0.1°C	H1020 (H1104)	H1021 (H1204)	H1022 (H1304)	H1023 (H1404)	H1024 (H1504)	H1025 (H1604)	H1026 (H1704)	H1027 (H1804)
Proportional band value (Pb)	0 ~ 9,999 Unit: 0.1	H1028 (H1105)	H1029 (H1205)	H102A (H1305)	H102B (H1405)	H102C (H1505)	H102D (H1605)	H102E (H1705)	H102F (H1805)
Ti value	0 ~ 9,999	H1030 (H1106)	H1031 (H1206)	H1032 (H1306)	H1033 (H1406)	H1034 (H1506)	H1035 (H1606)	H1036 (H1706)	H1037 (H1806)
Td value	0 ~ 9,999	H1038 (H1107)	H1039 (H1207)	H103A (H1307)	H103B (H1407)	H103C (H1507)	H103D (H1607)	H103E (H1707)	H103F (H1807)
Integration default	0.0 ~ 100.0% Unit: 0.1%	H1040 (H1108)	H1041 (H1208)	H1042 (H1308)	H1043 (H1408)	H1044 (H1508)	H1045 (H1608)	H1046 (H1708)	H1047 (H1808)
Proportional control offset error value, when Ti = 0	0.0 ~ 100.0% Unit: 0.1%	H1048 (H1109)	H1049 (H1209)	H104A (H1309)	H104B (H1409)	H104C (H1509)	H104D (H1609)	H104E (H1709)	H104F (H1809)
Proportional band coefficient of output 1 and output 2	0.01 ~ 99.99 Unit: 0.01	H1050 (H110A)	H1051 (H120A)	H1052 (H130A)	H1053 (H140A)	H1054 (H150A)	H1055 (H160A)	H1056 (H170A)	H1057 (H180A)
Dead band of control output 1 & output 2.	-99.9 ~ 999.9	H1058 (H110B)	H1059 (H120B)	H105A (H130B)	H105B (H140B)	H105C (H150B)	H105D (H160B)	H105E (H170B)	H105F (H180B)
Hysteresis for output 1	0 ~ 9,999 Unit: 0.1%	H1060 (H110C)	H1061 (H120C)	H1062 (H130C)	H1063 (H140C)	H1064 (H150C)	H1065 (H160C)	H1066 (H170C)	H1067 (H180C)
Hysteresis for output 2	0 ~ 9,999 Unit: 0.1%	H1068 (H110D)	H1069 (H120D)	H106A (H130D)	H106B (H140D)	H106C (H150D)	H106D (H160D)	H106E (H170D)	H106F (H180D)
Read/write output 1 value	Unit: 0.1 %	H1070 (H110E)	H1071 (H120E)	H1072 (H130E)	H1073 (H140E)	H1074 (H150E)	H1075 (H160E)	H1076 (H170E)	H1077 (H180E)
Read/write output 2 value	Unit: 0.1 %	H1078 (H110F)	H1079 (H120F)	H107A (H130F)	H107B (H140F)	H107C (H150F)	H107D (H160F)	H107E (H170F)	H107F (H180F)
Upper limit for alarm output	Alarm enabled when temperature exceeds upper limit	H1080 (H1110)	H1081 (H1210)	H1082 (H1310)	H1083 (H1410)	H1084 (H1510)	H1085 (H1610)	H1086 (H1710)	H1087 (H1810)
Lower limit for alarm output	Alarm enabled when temperature falls below lower limit	H1088 (H1111)	H1089 (H1211)	H108A (H1311)	H108B (H1411)	H108C (H1511)	H108D (H1611)	H108E (H1711)	H108F (H1811)
Tuning for upper limit of analog output	Current (4 ~ 20mA) or voltage output tuning	H1090 (H1112)	H1091 (H1212)	H1092 (H1312)	H1093 (H1412)	H1094 (H1512)	H1095 (H1612)	H1096 (H1712)	H1097 (H1812)
Tuning for lower limit of analog output	Current (4 ~ 20mA) or voltage output tuning	H1098 (H1113)	H1099 (H1213)	H109A (H1313)	H109B (H1413)	H109C (H1513)	H109D (H1613)	H109E (H1713)	H109F (H1813)
Input sensor type	See "Input" section	H10A0 (H1114)	H10A1 (H1214)	H10A2 (H1314)	H10A3 (H1414)	H10A4 (H1514)	H10A5 (H1614)	H10A6 (H1714)	H10A7 (H1814)
Output function for output 1	0: heating 1: cooling 2: proportional output	H10A8 (H1115)	H10A9 (H1215)	H10AA (H1315)	H10AB (H1415)	H10AC (H1515)	H10AD (H1615)	H10AE (H1715)	H10AF (H1815)
Output function for output 2	0: heating (default) 1: cooling 2: alarm	H10B0 (H1116)	H10B1 (H1216)	H10B2 (H1316)	H10B3 (H1416)	H10B4 (H1516)	H10B5 (H1616)	H10B6 (H1716)	H10B7 (H1816)
Control method	0: PID 1: ON-OFF 2: manual 3: PID programmable	H10B8 (H1117)	H10B9 (H1217)	H10BA (H1317)	H10BB (H1417)	H10BC (H1517)	H10BD (H1617)	H10BE (H1717)	H10BF (H1817)
Alarm 1 output mode	See "Alarm Output" section	H10C0 (H1118)	H10C1 (H1218)	H10C2 (H1318)	H10C3 (H1418)	H10C4 (H1518)	H10C5 (H1618)	H10C6 (H1718)	H10C7 (H1818)
Alarm 2 output mode	See "Alarm Output" section	H10C4 (H1518)	H10C5 (H1618)	H10C6 (H1718)	H10C7 (H1818)				
Heating/cooling cycle for output 1	1 ~ 99 seconds 0 = 0.5 second	H10C8 (H1119)	H10C9 (H1219)	H10CA (H1319)	H10CB (H1419)	H10CC (H1519)	H10CD (H1619)	H10CE (H1719)	H10CF (H1819)
Heating/cooling cycle for output 2	1 ~ 99 seconds 0 = 0.5 second	H10D0 (H111A)	H10D1 (H121A)	H10D2 (H131A)	H10D3 (H141A)	H10D4 (H151A)	H10D5 (H161A)	H10D6 (H171A)	H10D7 (H181A)

		INA				INB			
Content	Explanation	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Run/Stop the control	0: stop 1: executing 2: program stops 3: program pauses	H10D8 (H111B)	H10D9 (H121B)	H10DA (H131B)	H10DB (H141B)	H10DC (H151B)	H10DD (H161B)	H10DE (H171B)	H10DF (H181B)
Status of PID auto-tuning	0: stop 1: executing	H10E0 (H111C)	H10E1 (H121C)	H10E2 (H131C)	H10E3 (H141C)	H10E4 (H151C)	H10E5 (H161C)	H10E6 (H171C)	H10E7 (H181C)
Positive/negative proportional output	0: positive 1: negative (slope)	H10E8 (H111D)	H10E9 (H121D)	H10EA (H131D)	H10EB (H141D)	H10EC (H151D)	H10ED (H161D)	H10EE (H171D)	H10EF (H181D)
Other statuses	Other statuses	H10F0 (Temperature unit) Open special function (H1234)	H10F1 (H1234)	H10F2 (Return to default (H1357))	H10F3 (Reserved)	H10F4 (Reserved)	H10F5 (Reserved)	H10F6 (Reserved)	H10F7 (Reserved)
Communication specifications	See Table 4	H10F8 (Auto ID setup)	H10F9 (Reserved)	H10FA (Baud rate)	H10FB (ASCII = 0 RTU = 1)	H10FC (8 bits=0 7 bits=1)	H10FD (2 stop=0 1 stop=1)	H10FE (Parity)	H10FF (Address 1 ~ 247)

### Communication Parameter Setting:

Content	0	1	2	3	4	5	6
Baud rate	2,400bps	4,800bps	9,600bps	19,200bps	38,400bps	57,600bps	115,200bps
Parity bit	None (N)	Even (E)	Odd (O)				

Table 4

### Error Codes:

The error codes can be read from address H1000 ~ H1007. When the input operation is in normal status, H1000 ~ H1007 are for input values. When input error occurs (except for stable status and input exceeding the range), DTE will read error codes in H8001 ~ H8007.

H1000	Error description
H8001	EEPROM cannot be written in.
H8002	Input sensor is not connected.
H8003	Group INB is not connected.

Table 5

Analog output current tuning scale: 1 μA/scale

Analog output voltage tuning scale: 1mV/scale

Returning to Default Value: Write H1234 into address H10F1 and H1357 into address H10F2. Restart DTE.

### Programmable Communication Parameter Setting:

		INA				INB			
Content	Explanation	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8


<tbl\_r cells="10" ix="2" maxcspan="1" maxrspan="

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>